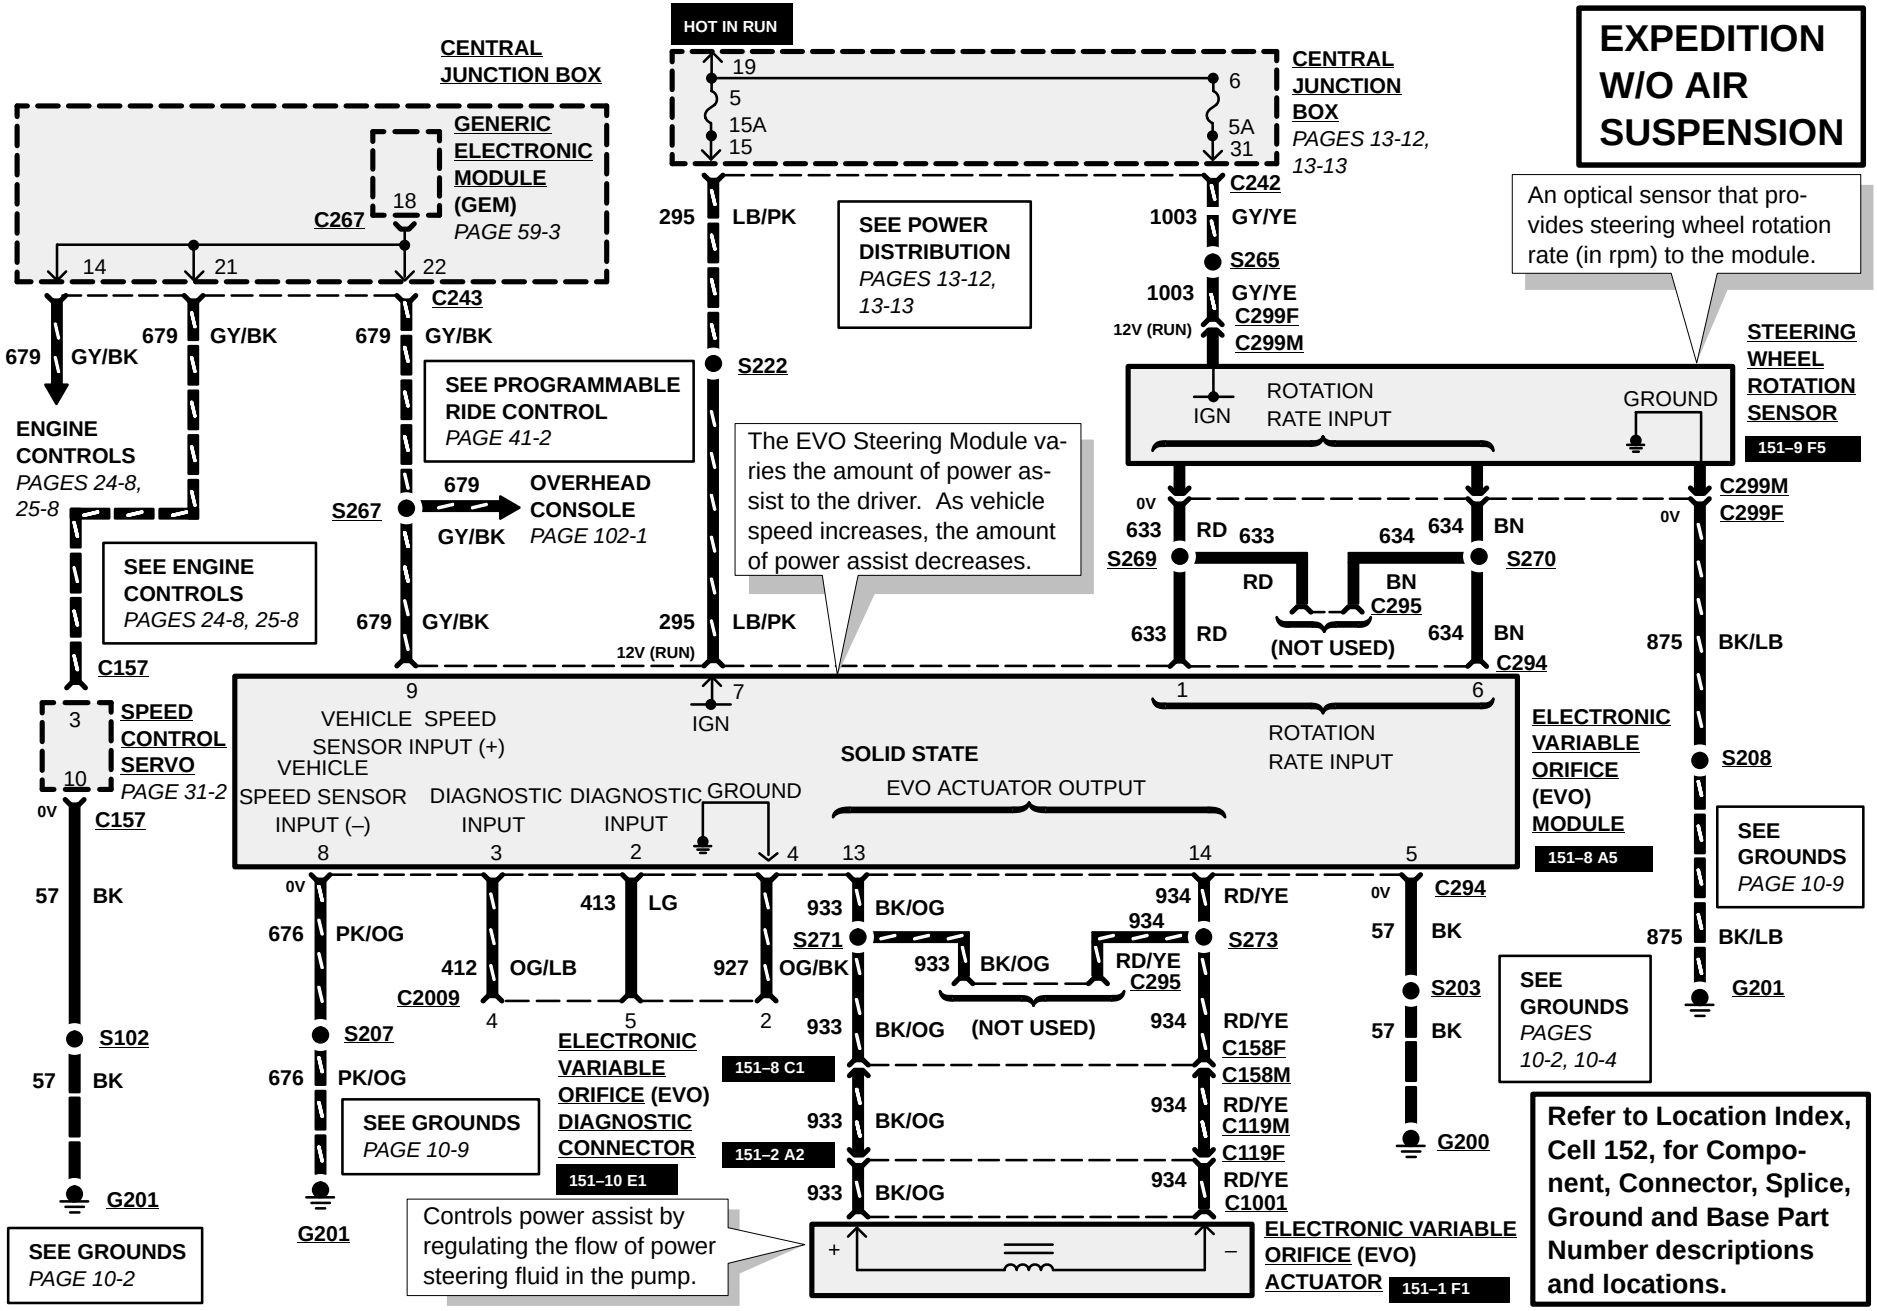
EXPEDITION W/O AIR SUSPENSION
HOT IN RUN
CENTRAL JUNCTION BOX
GENERIC ELECTRONIC MODULE (GEM) PAGE 59-3
C267
18
14
21
22
C243
679 GY/BK
ENGINE CONTROLS PAGES 24-8, 25-8
SEE ENGINE CONTROLS PAGES 24-8, 25-8
C157
3
10
SPEED CONTROL SERVO PAGE 31-2
0V
C157
57 BK
S102
57 BK
G201
SEE GROUNDS PAGE 10-2
SEE PROGRAMMABLE RIDE CONTROL PAGE 41-2
S267
679 GY/BK
OVERHEAD CONSOLE PAGE 102-1
679 GY/BK
295 LB/PK
12V (RUN)
19
5
15A
15
6
5A
31
CENTRAL JUNCTION BOX PAGES 13-12, 13-13
C242
295 LB/PK
SEE POWER DISTRIBUTION PAGES 13-12, 13-13
1003 GY/YE
S265
1003 GY/YE
12V (RUN)
C299F
C299M
S222
The EVO Steering Module varies the amount of power assist to the driver. As vehicle speed increases, the amount of power assist decreases.
An optical sensor that provides steering wheel rotation rate (in rpm) to the module.
STEERING WHEEL ROTATION SENSOR
151–9 F5
IGN
ROTATION RATE INPUT
GROUND
0V
633 RD
S269
633 RD
634 BN
634 BN
S270
RD
BN
C295
(NOT USED)
633 RD
634 BN
C294
0V
C299M
C299F
875 BK/LB
S208
SEE GROUNDS PAGE 10-9
875 BK/LB
G201
9
VEHICLE SPEED SENSOR INPUT (+)
7
IGN
1
6
ROTATION RATE INPUT
SOLID STATE EVO ACTUATOR OUTPUT
ELECTRONIC VARIABLE ORIFICE (EVO) MODULE
151–8 A5
VEHICLE SPEED SENSOR INPUT (–)
DIAGNOSTIC INPUT
DIAGNOSTIC INPUT
GROUND
8
3
2
4
13
14
5
0V
676 PK/OG
412 OG/LB
413 LG
927 OG/BK
C2009
4
5
2
S207
676 PK/OG
SEE GROUNDS PAGE 10-9
G201
ELECTRONIC VARIABLE ORIFICE (EVO) DIAGNOSTIC CONNECTOR
151–10 E1
933 BK/OG
S271
933 BK/OG
933 BK/OG
933 BK/OG
151–8 C1
151–2 A2
934 RD/YE
S273
934 RD/YE
933 BK/OG
RD/YE
C295
(NOT USED)
934 RD/YE
C158F
C158M
934 RD/YE
C119M
C119F
934 RD/YE
C1001
0V
C294
57 BK
S203
57 BK
G200
SEE GROUNDS PAGES 10-2, 10-4
Controls power assist by regulating the flow of power steering fluid in the pump.
+
–
ELECTRONIC VARIABLE ORIFICE (EVO) ACTUATOR
151–1 F1
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.