C643 (BK)

12A690

B43
Crankshaft position sensor

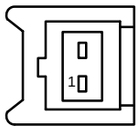

F02012

Pin	Circuit	Circuit Function
1	8-RJ4 (WH/RD)	Sensor signal
2	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)

C644 (BK)

12A690

N96
Power steering pressure switch



F02058

Pin	Circuit	Circuit Function
1	91S-CE6 (BK/YE)	Ground, switched
2	91-CE6 (BK/YE)	Ground

C647 (GY)

9H589, 12A522

U1
Ignition transformer capacitor

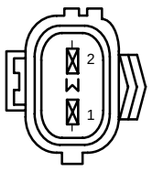

F02106

Pin	Circuit	Circuit Function
1	15-MD20 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	–	not used

C681 (BK)

9D866, 12A522

Y131
Evaporative emission (EVAP) canister vent valve

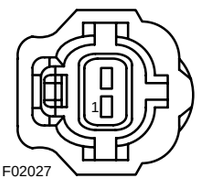

F02027

Pin	Circuit	Circuit Function
1	15-RL3 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL3 (BK/OG)	Ground, switched

C684 (NA)

14014

N240
Door ajar switch, passenger side front

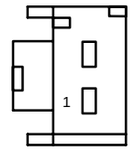

F02023

Pin	Circuit	Circuit Function
1	31S-GL16 (BK/BU)	Ground, switched
2	31-GL16 (BK)	Ground

C685 (NA)

14014

N239
Door ajar switch, driver side front

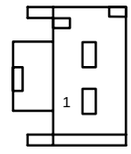

F02023

Pin	Circuit	Circuit Function
1	31S-GL9 (BK/YE)	Ground, switched
2	31-GL9 (BK)	Ground

C686 (NA)

14014

N238
Door ajar switch, passenger side rear

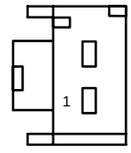

F02023

Pin	Circuit	Circuit Function
1	31S-GL19 (BK/GN)	Ground, switched
2	31-GL19 (BK)	Ground

C687 (NA)

14014

N237
Door ajar switch, driver side rear

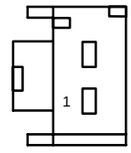

F02023

Pin	Circuit	Circuit Function
1	31S-GL12 (BK/OG)	Ground, switched
2	31-GL12 (BK)	Ground