C168

12A581

A434
4R100 transmission

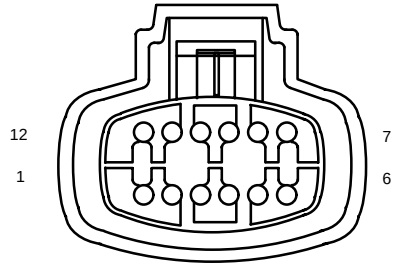

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	315 (VT/OG)	Shift solenoid B
3	237 (OG/YE)	Shift solenoid A
4	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
5	924 (BN/OG)	Powertrain Control Module (PCM) (12A650), to transmission coast clutch solenoid
6	–	not used
7	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
8	359 (GY/RD)	signal, return
9	–	not used
10	–	not used
11	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid, control
12	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C171

12B637

B48
Heated Oxygen Sensor (HO2S) #11 (9G444)

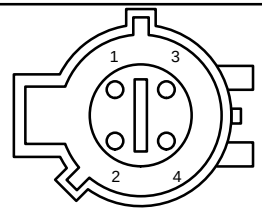

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9G444), heater
3	359 (GY/RD)	signal, return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9G444), input

C172

12B637

B47
Heated Oxygen Sensor (HO2S) #21 (9G444)

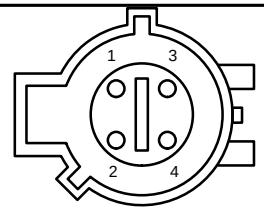

F04124

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9G444), heater
3	359 (GY/RD)	signal, return
4	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9G444), input

C174

12B637

U10
Ignition transformer capacitor 1 (18801)

F01031

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)