C500 (BK)

14K138

Key pad switch assembly

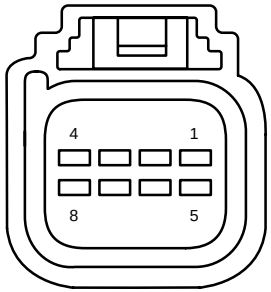

F08203

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad button 1/2, output
2	66 (LB)	Key pad illumination
3	122 (YE)	Key pad button 5/6, output
4	–	not used
5	1205 (BK)	Ground
6	124 (BN)	Key pad common
7	123 (RD)	Key pad button 3/4, output
8	–	not used

C503 (GY)

14A488

Memory set switch (14776)

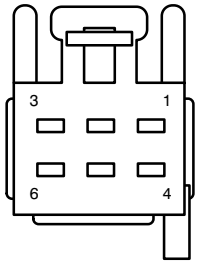

F06167

Pin	Circuit	Circuit function
1	270 (BN/OG)	Memory set switch (14776)
2	268 (BK/OG)	Memory set switch (14776), position 2
3	267 (BN/LG)	Memory set switch (14776), position 1
4	1205 (BK)	Ground
5	272 (WH/OG)	Memory set switch (14776), Illumination, input
6	1203 (BK/LB)	Ground