
C1051

12A581

K4
Fuel pump relay

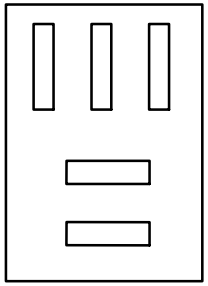


F05110

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	926 (LB/OG)	Fuel pump relay, control
3	1059 (LB/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	238 (DG/YE)	Fuel pump relay, switched power, output

C1061

12B637

B227
Engine Coolant
Temperature (ECT)
sender

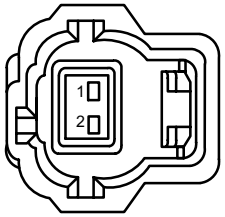


F02200

Pin	Circuit	Circuit function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	45 (YE/RD)	Ground

C1066

12B637

Y133
Idle air control valve
(IAC) (9F715)

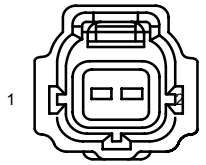


F02091

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle air control valve (IAC) (9F715), control

C1078

12A581

N126
A/C high pressure
switch (19D594)

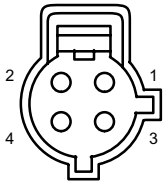


F04195

Pin	Circuit	Circuit function
1	439 (TN/LG)	A/C pressure switch, signal
2	–	not used
3	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
4	–	not used

C1100a

14300

O1
Battery (10655)



F01139

Pin	Circuit	Circuit function
1	2037 (VT)	Battery cable +
	2037 (VT)	Battery cable +