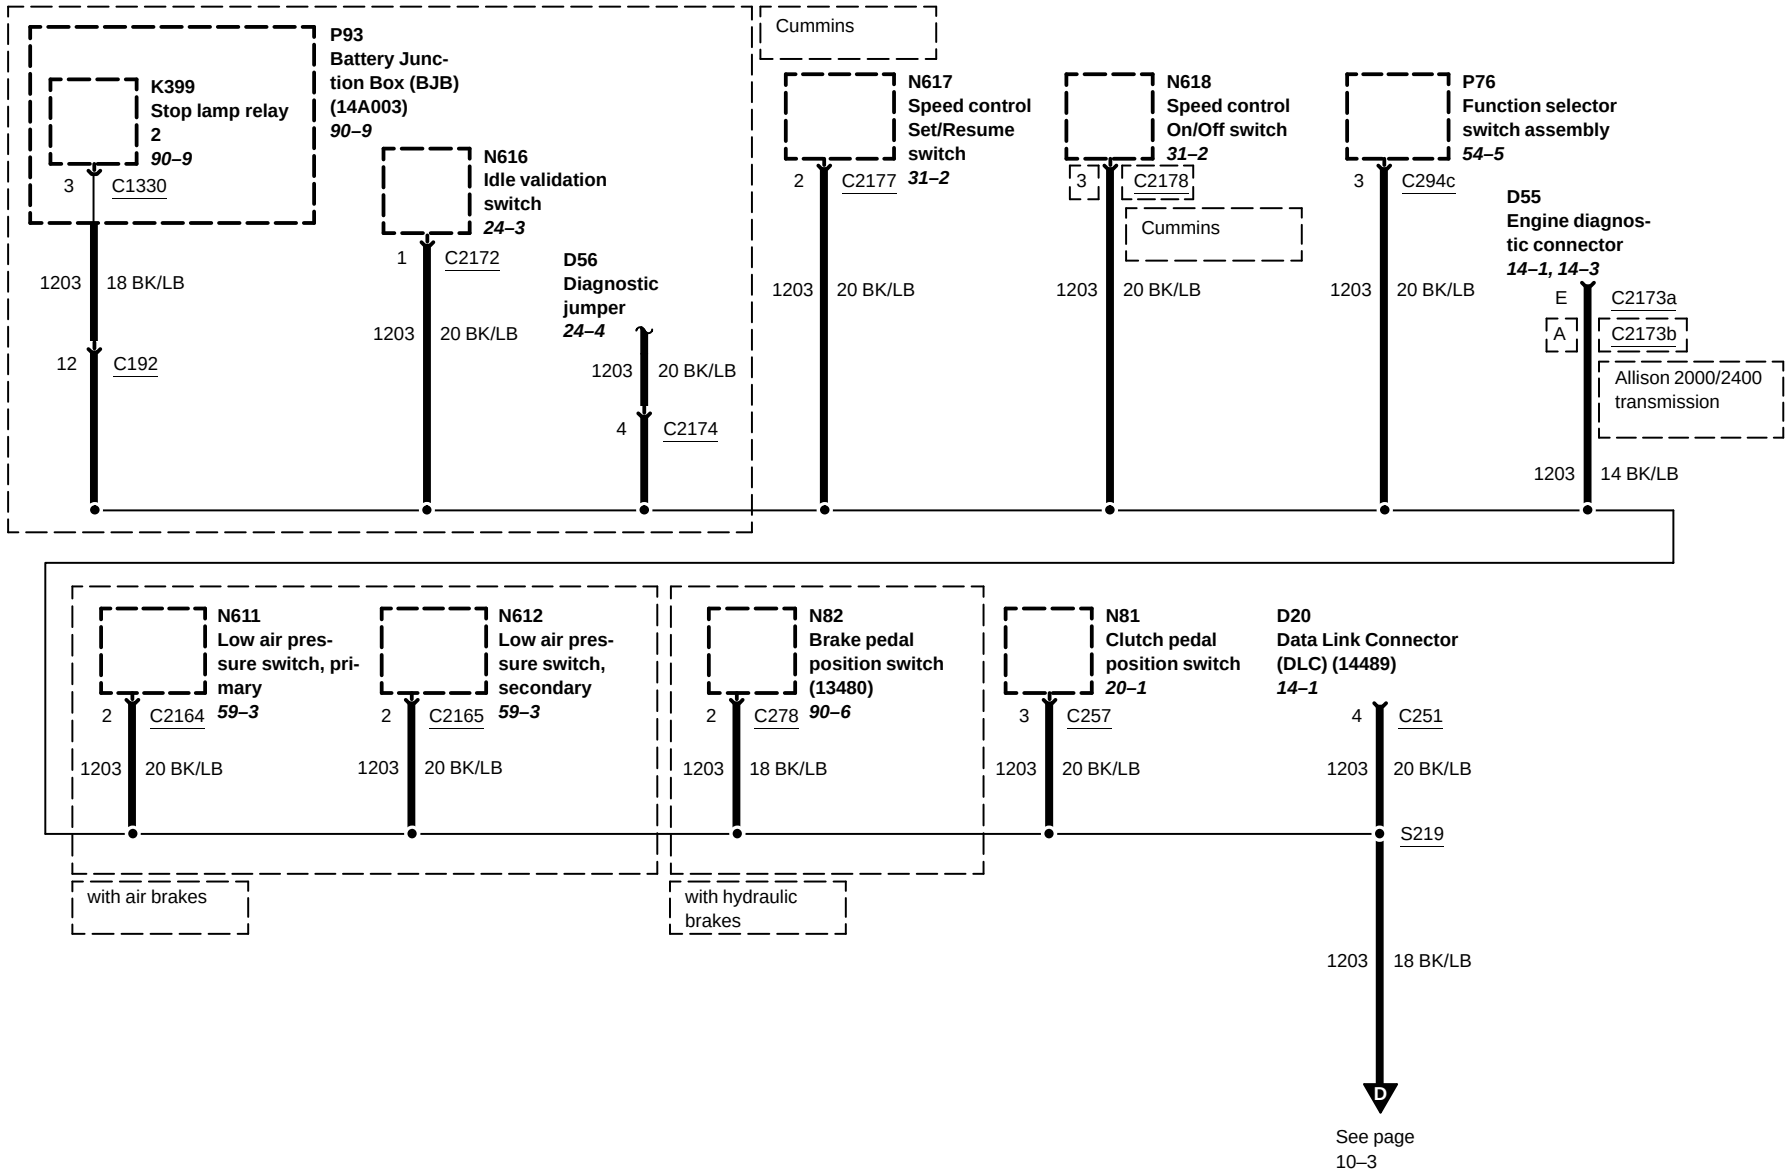
P93
Battery Junction Box (BJB) (14A003)
90–9
K399
Stop lamp relay 2
90–9
3
C1330
1203
18 BK/LB
12
C192
N616
Idle validation switch
24–3
1
C2172
1203
20 BK/LB
D56
Diagnostic jumper
24–4
1203
20 BK/LB
4
C2174
Cummins
N617
Speed control Set/Resume switch
31–2
2
C2177
1203
20 BK/LB
N618
Speed control On/Off switch
31–2
3
C2178
1203
20 BK/LB
Cummins
P76
Function selector switch assembly
54–5
3
C294c
1203
20 BK/LB
D55
Engine diagnostic connector
14–1, 14–3
E
C2173a
A
C2173b
Allison 2000/2400 transmission
1203
14 BK/LB
N611
Low air pressure switch, primary
59–3
2
C2164
1203
20 BK/LB
N612
Low air pressure switch, secondary
59–3
2
C2165
1203
20 BK/LB
with air brakes
N82
Brake pedal position switch (13480)
90–6
2
C278
1203
18 BK/LB
with hydraulic brakes
N81
Clutch pedal position switch
20–1
3
C257
1203
20 BK/LB
D20
Data Link Connector (DLC) (14489)
14–1
4
C251
1203
20 BK/LB
S219
1203
18 BK/LB
D
See page 10–3