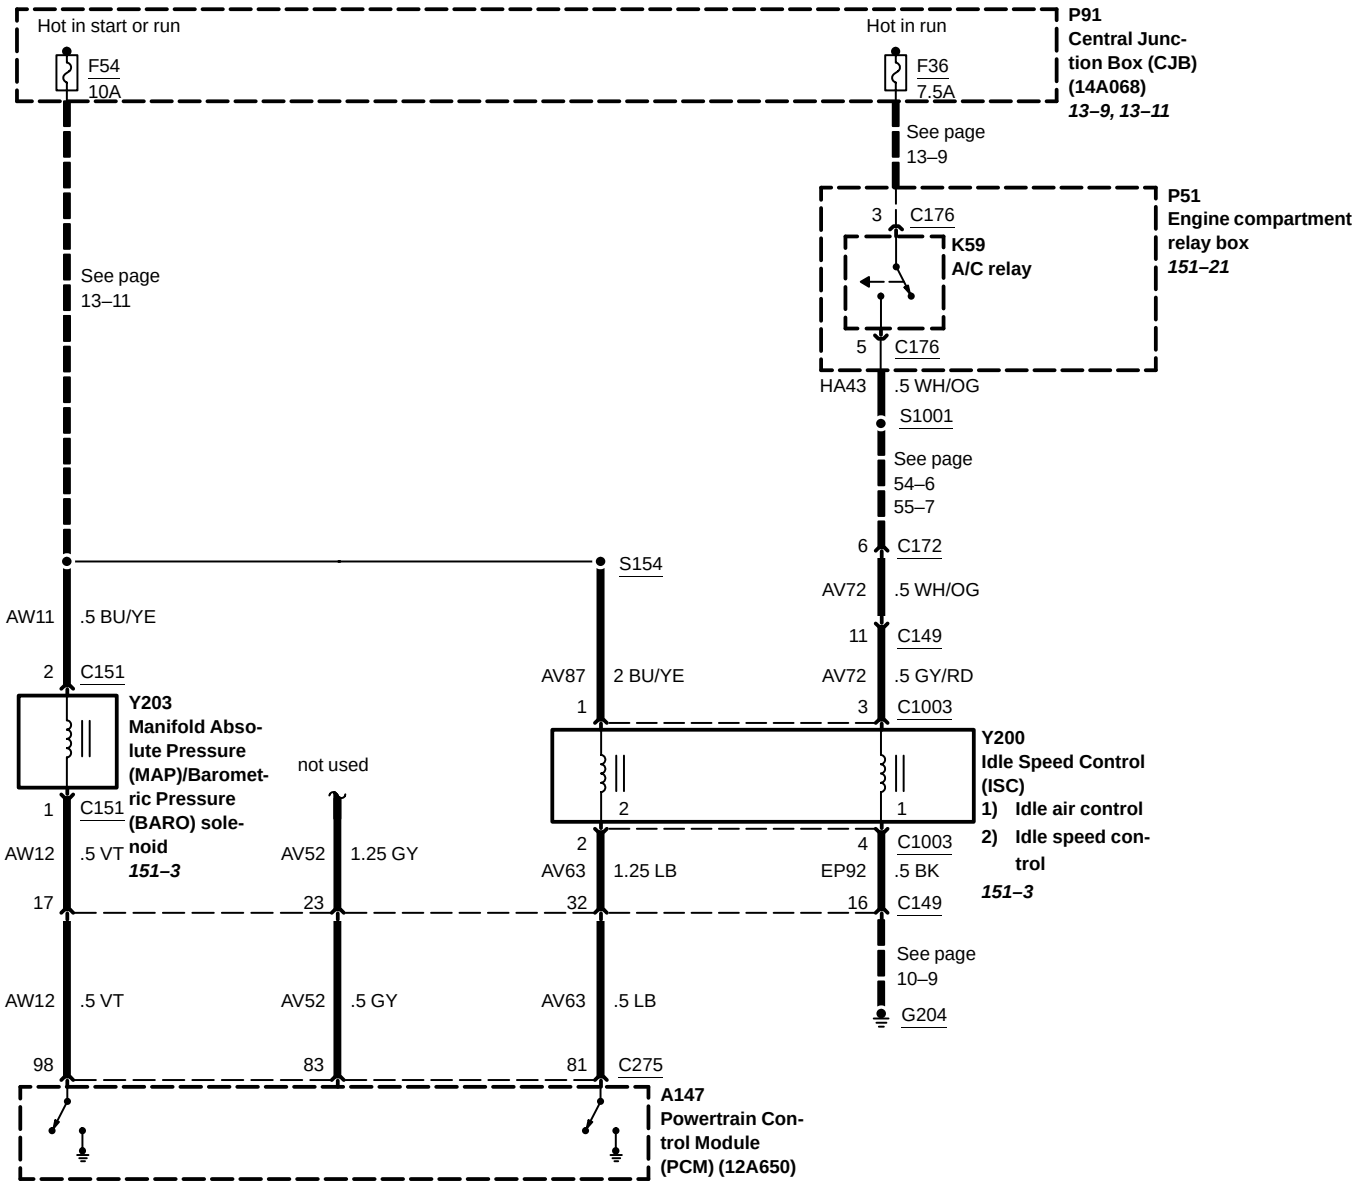
Hot in start or run
F54
10A
Hot in run
F36
7.5A
P91
Central Junction Box (CJB)
(14A068)
13–9, 13–11
See page
13–9
3
C176
K59
A/C relay
5
C176
P51
Engine compartment
relay box
151–21
HA43
.5 WH/OG
S1001
See page
13–11
See page
54–6
55–7
6
C172
S154
AV72
.5 WH/OG
AW11
.5 BU/YE
11
C149
2
C151
AV87
2 BU/YE
AV72
.5 GY/RD
1
3
C1003
Y203
Manifold Absolute Pressure (MAP)/Barometric Pressure (BARO) solenoid
151–3
not used
Y200
Idle Speed Control (ISC)
1) Idle air control
2) Idle speed control
151–3
1
C151
2
1
2
4
C1003
AW12
.5 VT
AV52
1.25 GY
AV63
1.25 LB
EP92
.5 BK
17
23
32
16
C149
See page
10–9
G204
AW12
.5 VT
AV52
.5 GY
AV63
.5 LB
98
83
81
C275
A147
Powertrain Control Module
(PCM) (12A650)