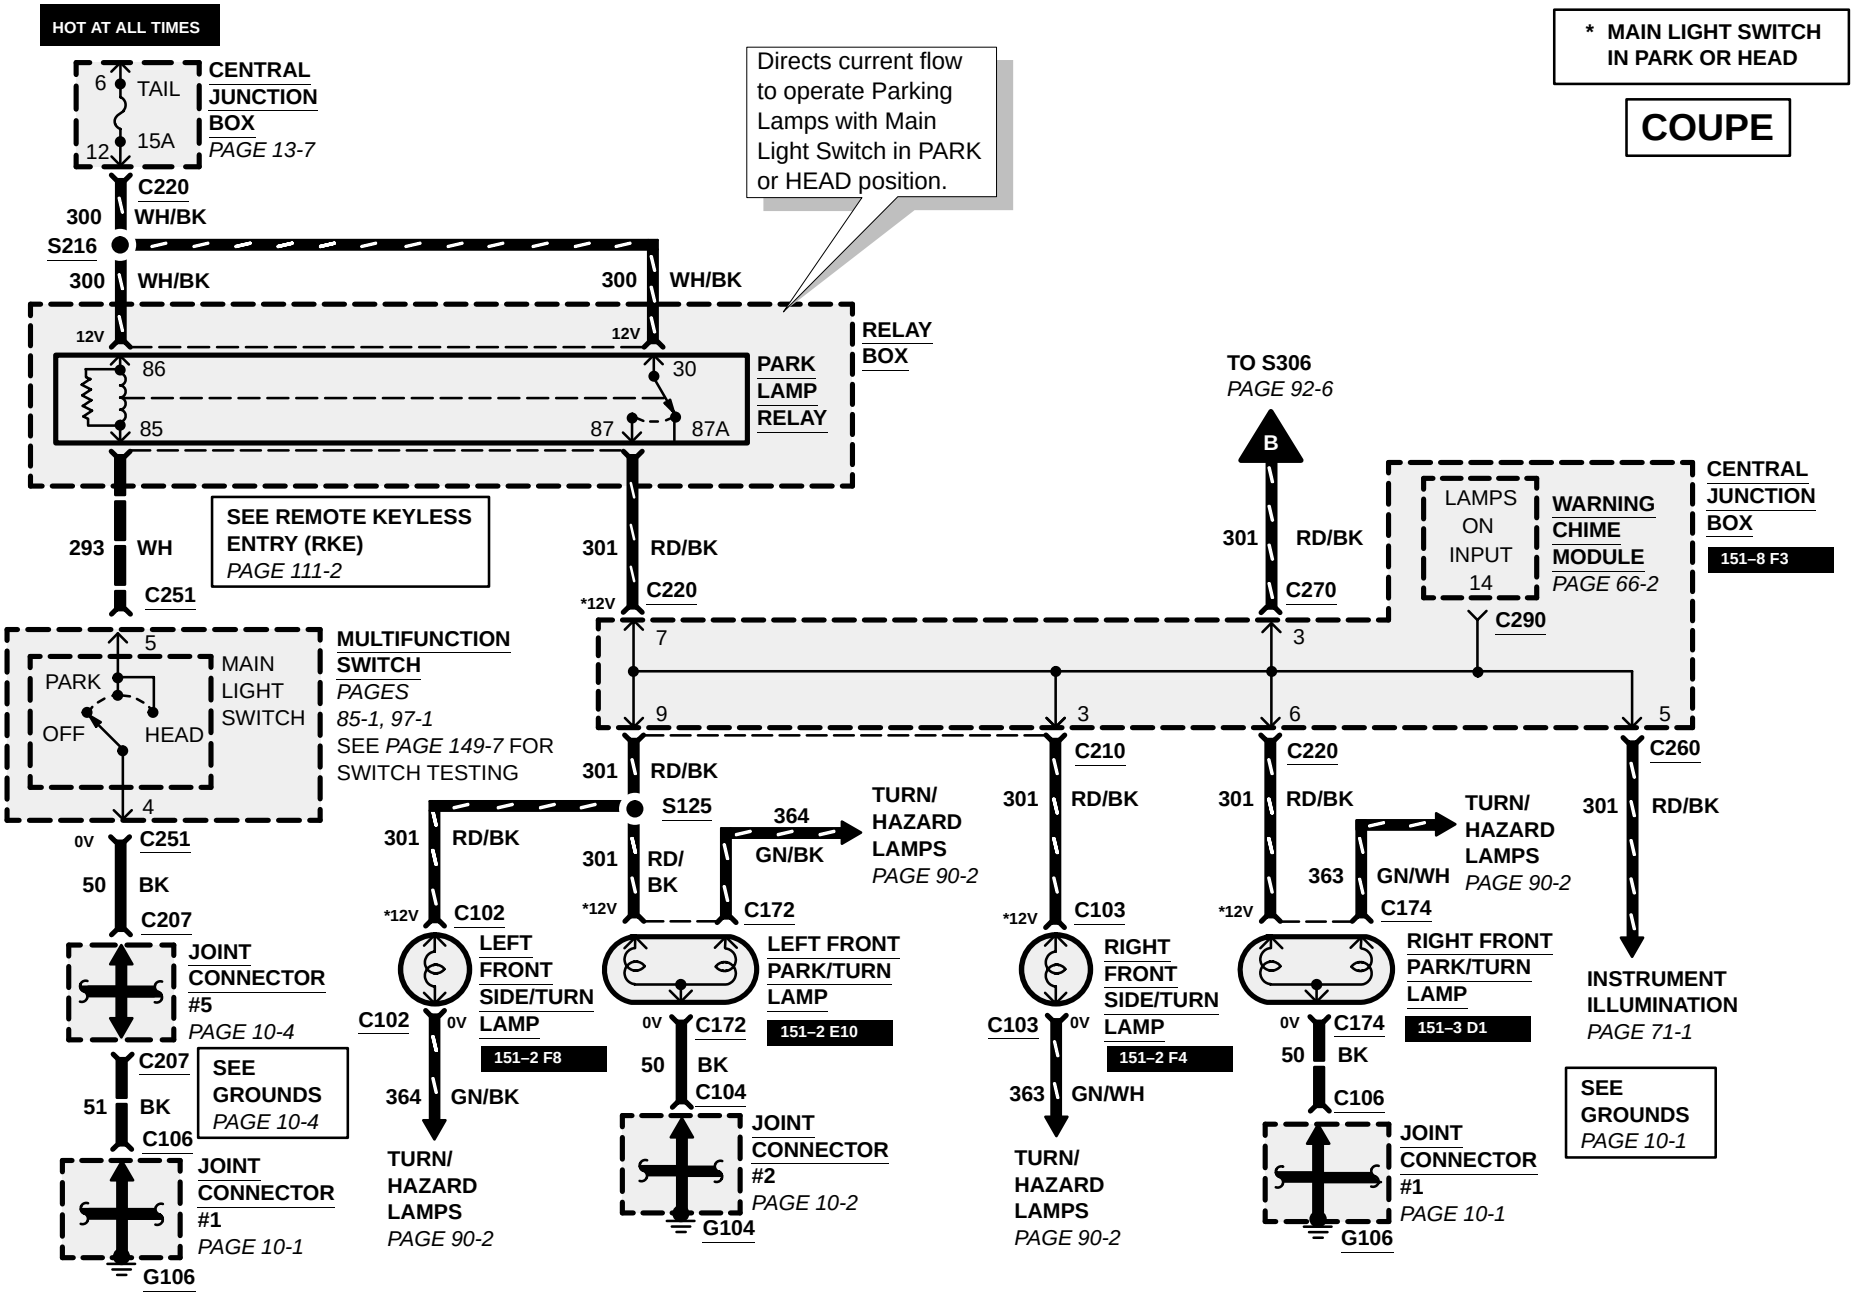
HOT AT ALL TIMES
* MAIN LIGHT SWITCH IN PARK OR HEAD
COUPE
Directs current flow to operate Parking Lamps with Main Light Switch in PARK or HEAD position.
CENTRAL JUNCTION BOX
PAGE 13-7
6
TAIL
12
15A
C220
300 WH/BK
S216
300 WH/BK
300 WH/BK
12V
12V
RELAY BOX
PARK LAMP RELAY
86
30
85
87
87A
TO S306
PAGE 92-6
B
301 RD/BK
C270
LAMPS ON INPUT
14
WARNING CHIME MODULE
PAGE 66-2
C290
CENTRAL JUNCTION BOX
151–8 F3
SEE REMOTE KEYLESS ENTRY (RKE)
PAGE 111-2
293 WH
C251
301 RD/BK
*12V
C220
7
3
9
3
6
5
MULTIFUNCTION SWITCH
PAGES 85-1, 97-1
SEE PAGE 149-7 FOR SWITCH TESTING
5
PARK
OFF
HEAD
MAIN LIGHT SWITCH
4
0V
C251
50 BK
C207
JOINT CONNECTOR #5
PAGE 10-4
C207
51 BK
C106
SEE GROUNDS
PAGE 10-4
JOINT CONNECTOR #1
PAGE 10-1
G106
301 RD/BK
S125
364 GN/BK
TURN/ HAZARD LAMPS
PAGE 90-2
301 RD/BK
*12V
C102
301 RD/ BK
*12V
C172
C102
0V
LEFT FRONT SIDE/TURN LAMP
151–2 F8
364 GN/BK
TURN/ HAZARD LAMPS
PAGE 90-2
0V
C172
LEFT FRONT PARK/TURN LAMP
151–2 E10
50 BK
C104
JOINT CONNECTOR #2
PAGE 10-2
G104
301 RD/BK
C210
301 RD/BK
*12V
C103
C103
0V
RIGHT FRONT SIDE/TURN LAMP
151–2 F4
363 GN/WH
TURN/ HAZARD LAMPS
PAGE 90-2
301 RD/BK
C220
363 GN/WH
TURN/ HAZARD LAMPS
PAGE 90-2
*12V
C174
0V
C174
RIGHT FRONT PARK/TURN LAMP
151–3 D1
50 BK
C106
JOINT CONNECTOR #1
PAGE 10-1
G106
301 RD/BK
C260
INSTRUMENT ILLUMINATION
PAGE 71-1
SEE GROUNDS
PAGE 10-1