Seat adjust switch, driver side front (14A701)

Schematic

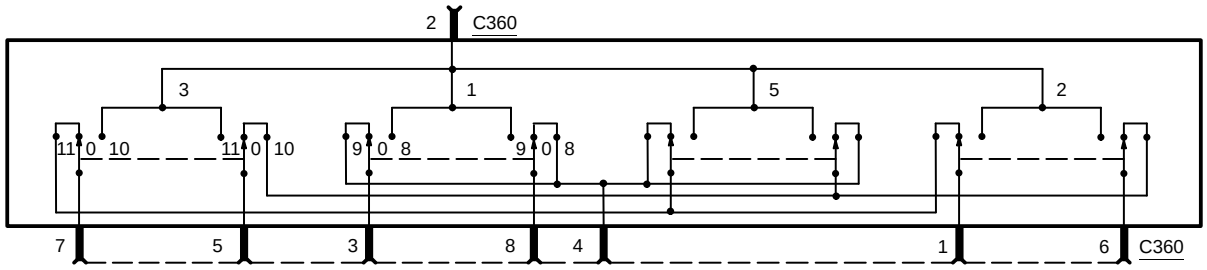

Seat adjust switch, driver side front (14A701)
0) Rest
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
5) Up/down
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down

Terminals

C360

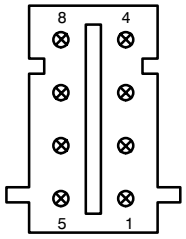

F08267