C360

14A699

N216
Seat adjust switch,
driver side front
(14A701)

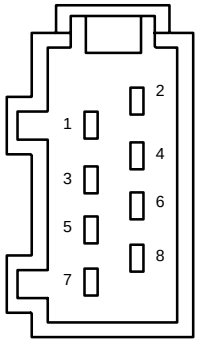

F08161

Pin	Circuit	Circuit function
1	875 (BK/LB)	Ground
2	1463 (RD/YE)	Power seat switch, left, to, Driver seat module (14C718)
3	1466 (GY/OG)	Power seat switch, left, to, Driver seat module (14C718)
4	1467 (GY/YE)	Power seat switch, left, to, Driver seat module (14C718)
5	1465 (GY/WH)	Power seat switch, left, to, Driver seat module (14C718)
6	1468 (GY/LB)	Power seat switch, left, to, Driver seat module (14C718)
7	956 (OG/LG)	Voltage supplied at all times (overload protected)
8	1464 (YE)	Power seat switch, left, to, Driver seat module (14C718)

C361

14A699

N445
Lumbar adjust
switch, left front
(14B691)

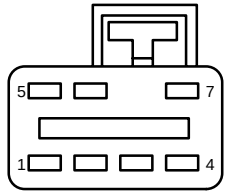

F07055

Pin	Circuit	Circuit function
1	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	566 (DG)	Voltage supplied at all times (overload protected)
3	57 (BK)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor