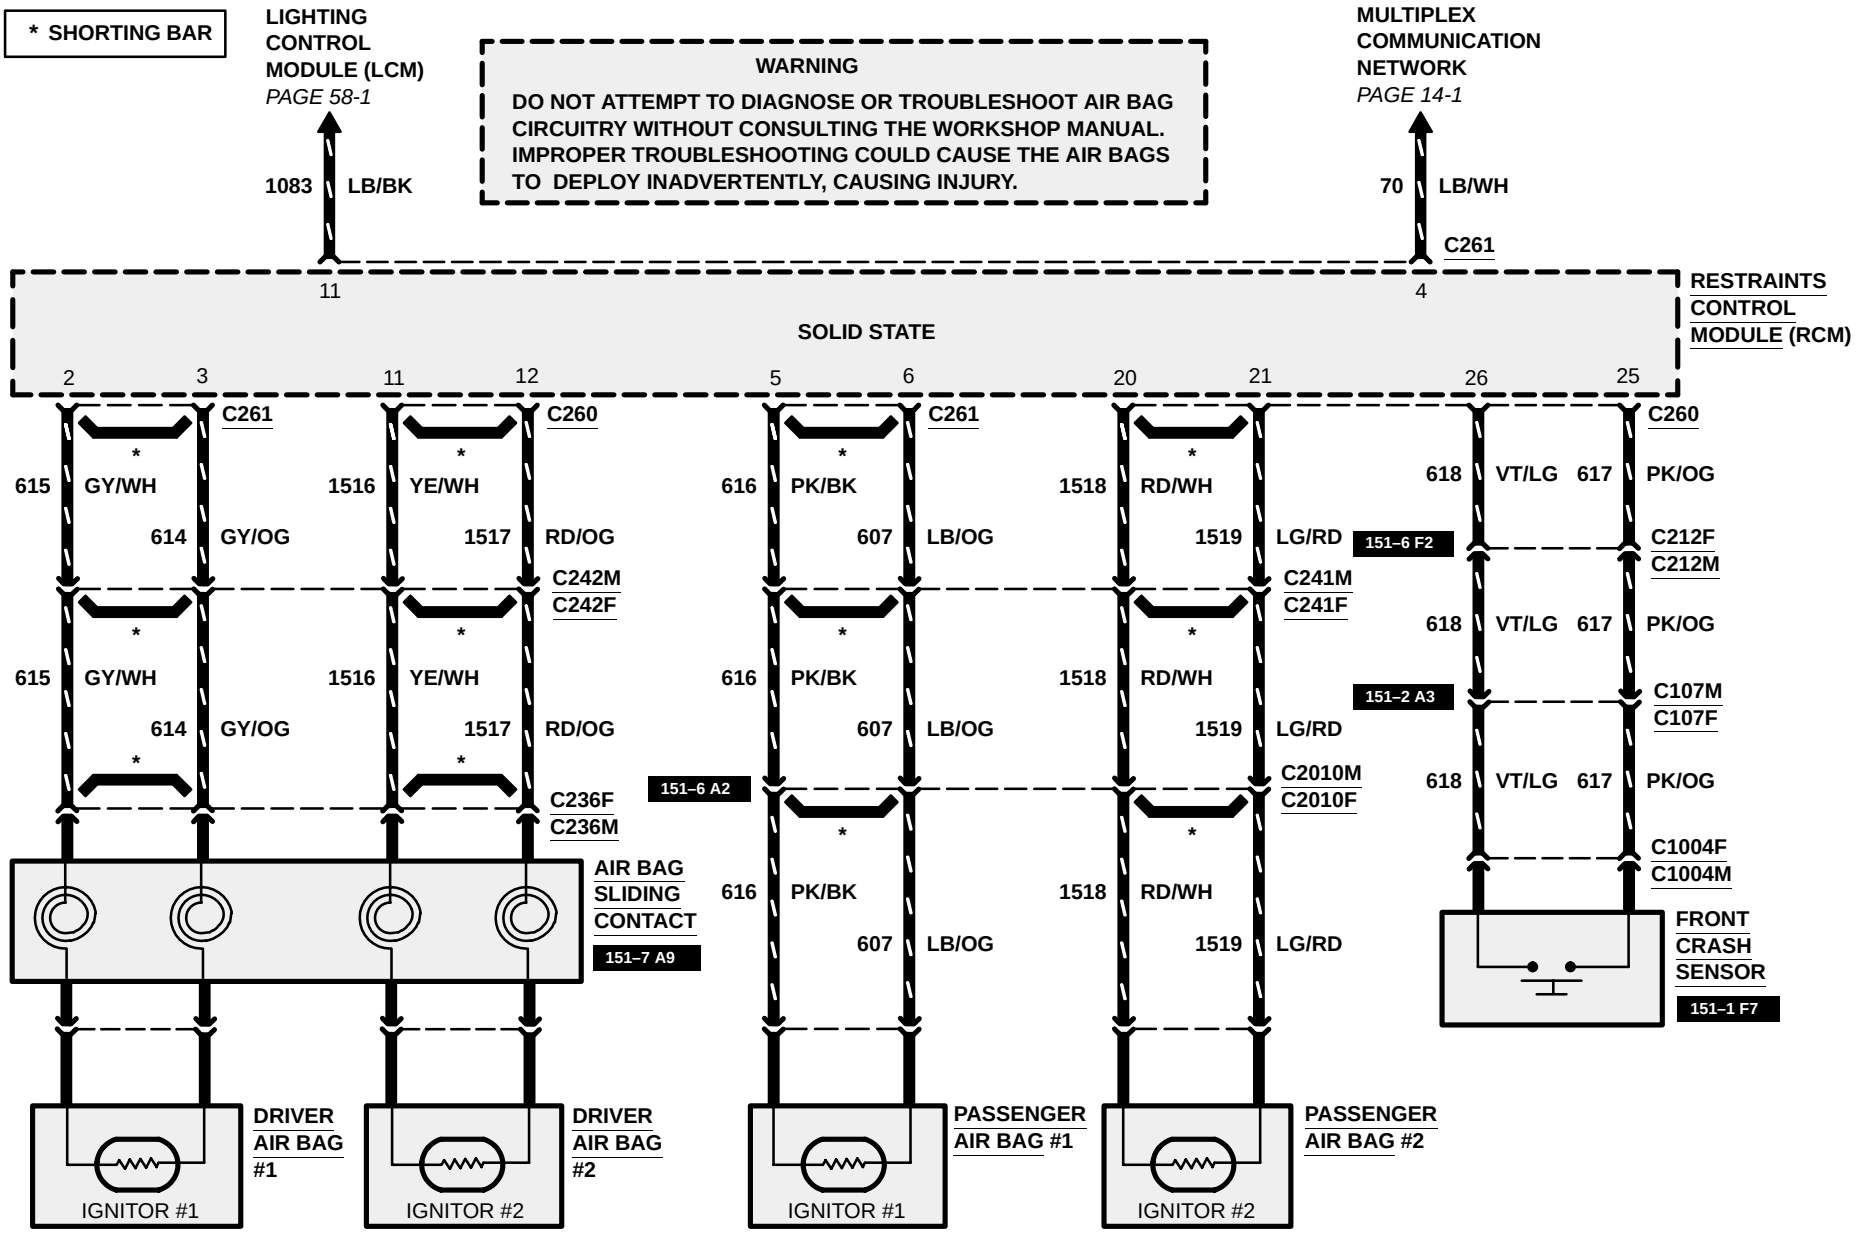
* SHORTING BAR
LIGHTING CONTROL MODULE (LCM)
PAGE 58-1
1083 LB/BK
WARNING
DO NOT ATTEMPT TO DIAGNOSE OR TROUBLESHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLESHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
70 LB/WH
C261
11
4
SOLID STATE
RESTRAINTS CONTROL MODULE (RCM)
2 3 11 12 5 6 20 21 26 25
C261
C260
615 GY/WH
614 GY/OG
1516 YE/WH
1517 RD/OG
616 PK/BK
607 LB/OG
1518 RD/WH
1519 LG/RD
618 VT/LG
617 PK/OG
C242M
C242F
C241M
C241F
C212F
C212M
C107M
C107F
C236F
C236M
C2010M
C2010F
C1004F
C1004M
151–6 F2
151–2 A3
151–6 A2
AIR BAG SLIDING CONTACT
151–7 A9
FRONT CRASH SENSOR
151–1 F7
DRIVER AIR BAG #1
DRIVER AIR BAG #2
PASSENGER AIR BAG #1
PASSENGER AIR BAG #2
IGNITOR #1
IGNITOR #2
IGNITOR #1
IGNITOR #2