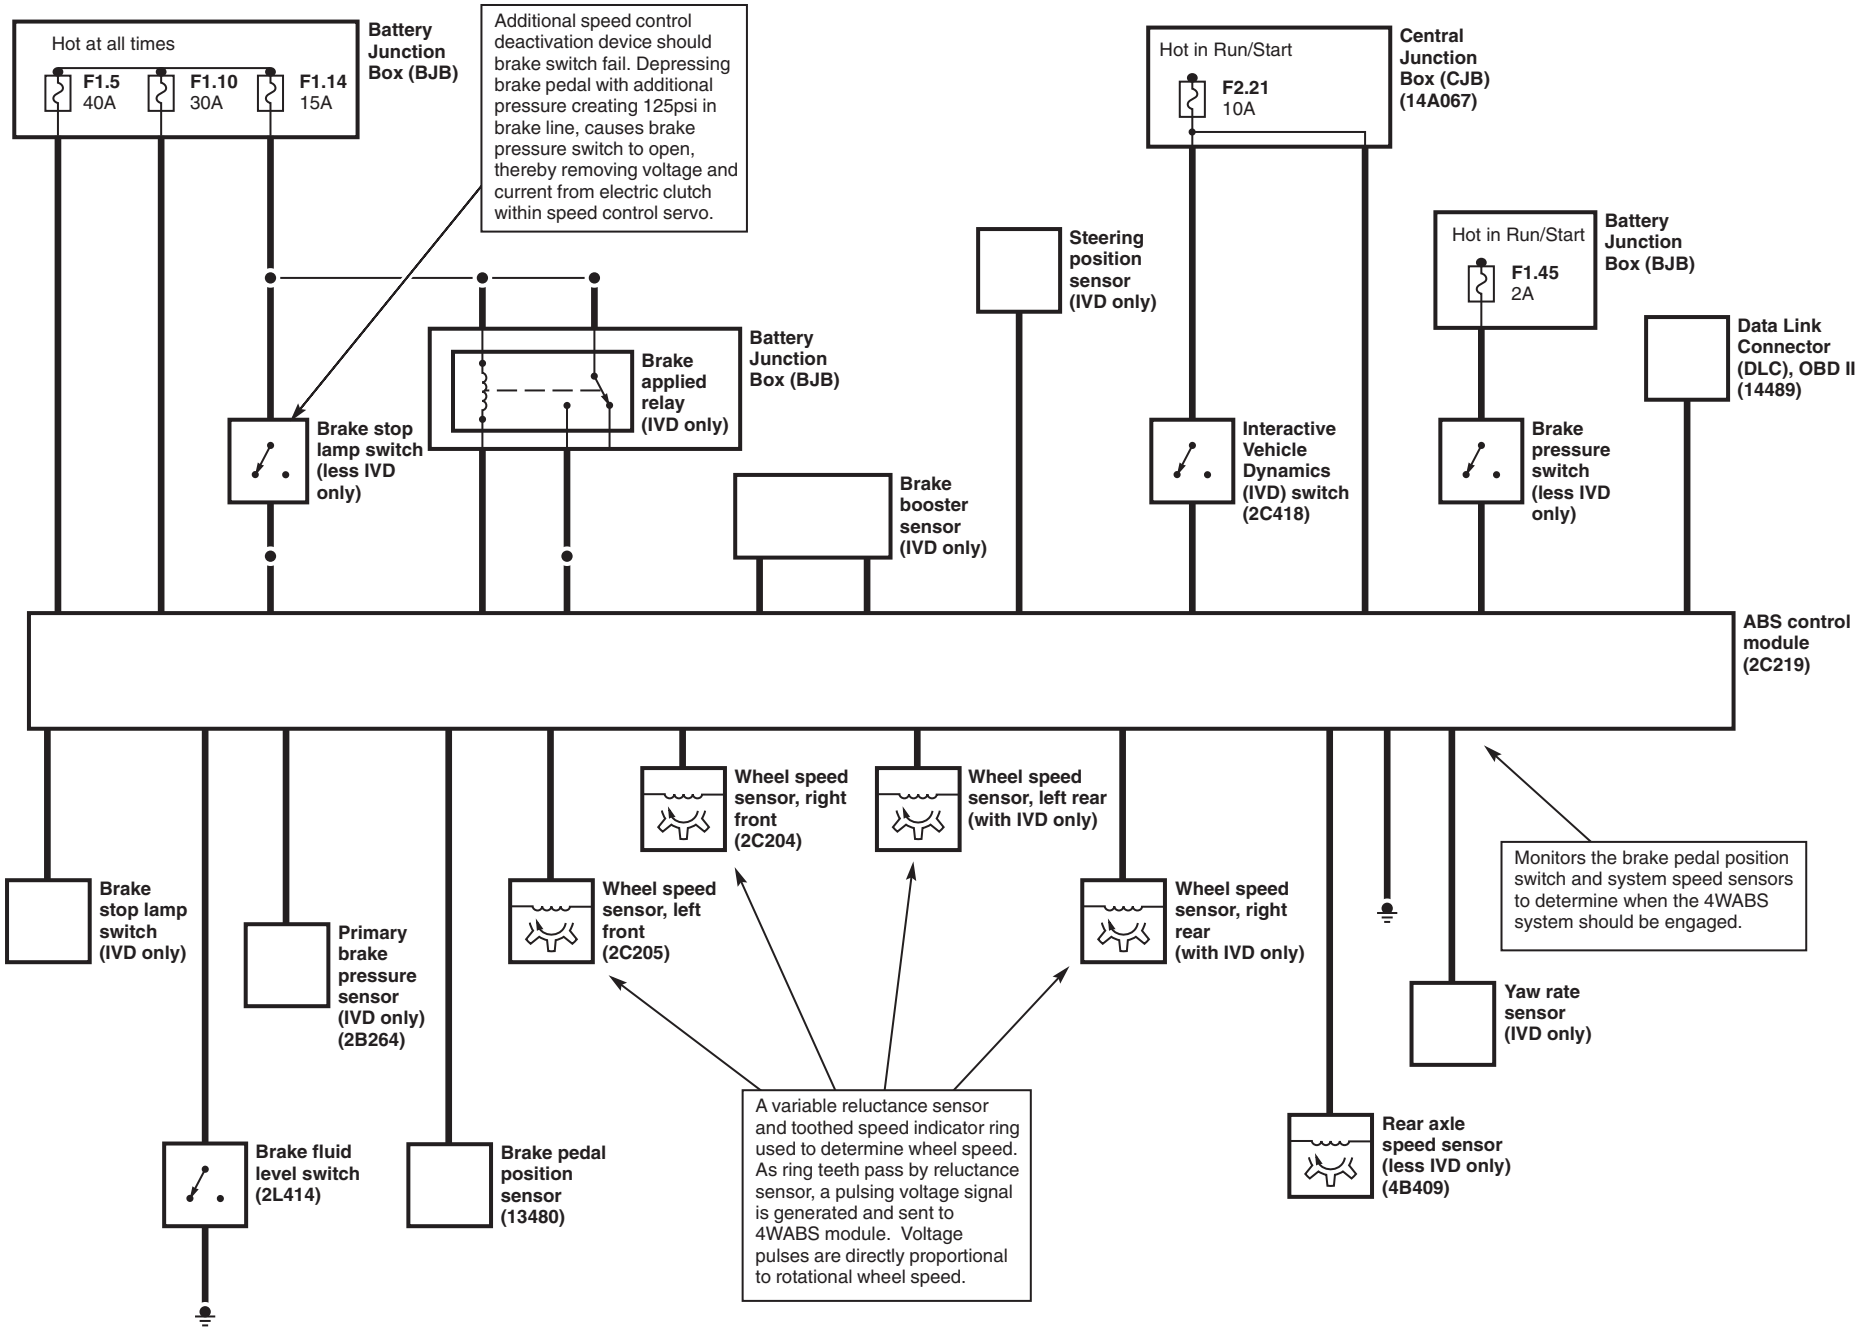
Hot at all times
F1.5
40A
F1.10
30A
F1.14
15A
Battery Junction Box (BJB)
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125psi in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Hot in Run/Start
F2.21
10A
Central Junction Box (CJB) (14A067)
Steering position sensor (IVD only)
Hot in Run/Start
F1.45
2A
Battery Junction Box (BJB)
Data Link Connector (DLC), OBD II (14489)
Brake applied relay (IVD only)
Battery Junction Box (BJB)
Brake stop lamp switch (less IVD only)
Brake booster sensor (IVD only)
Interactive Vehicle Dynamics (IVD) switch (2C418)
Brake pressure switch (less IVD only)
ABS control module (2C219)
Wheel speed sensor, right front (2C204)
Wheel speed sensor, left rear (with IVD only)
Brake stop lamp switch (IVD only)
Wheel speed sensor, left front (2C205)
Wheel speed sensor, right rear (with IVD only)
Monitors the brake pedal position switch and system speed sensors to determine when the 4WABS system should be engaged.
Primary brake pressure sensor (IVD only) (2B264)
Yaw rate sensor (IVD only)
Brake fluid level switch (2L414)
Brake pedal position sensor (13480)
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
Rear axle speed sensor (less IVD only) (4B409)