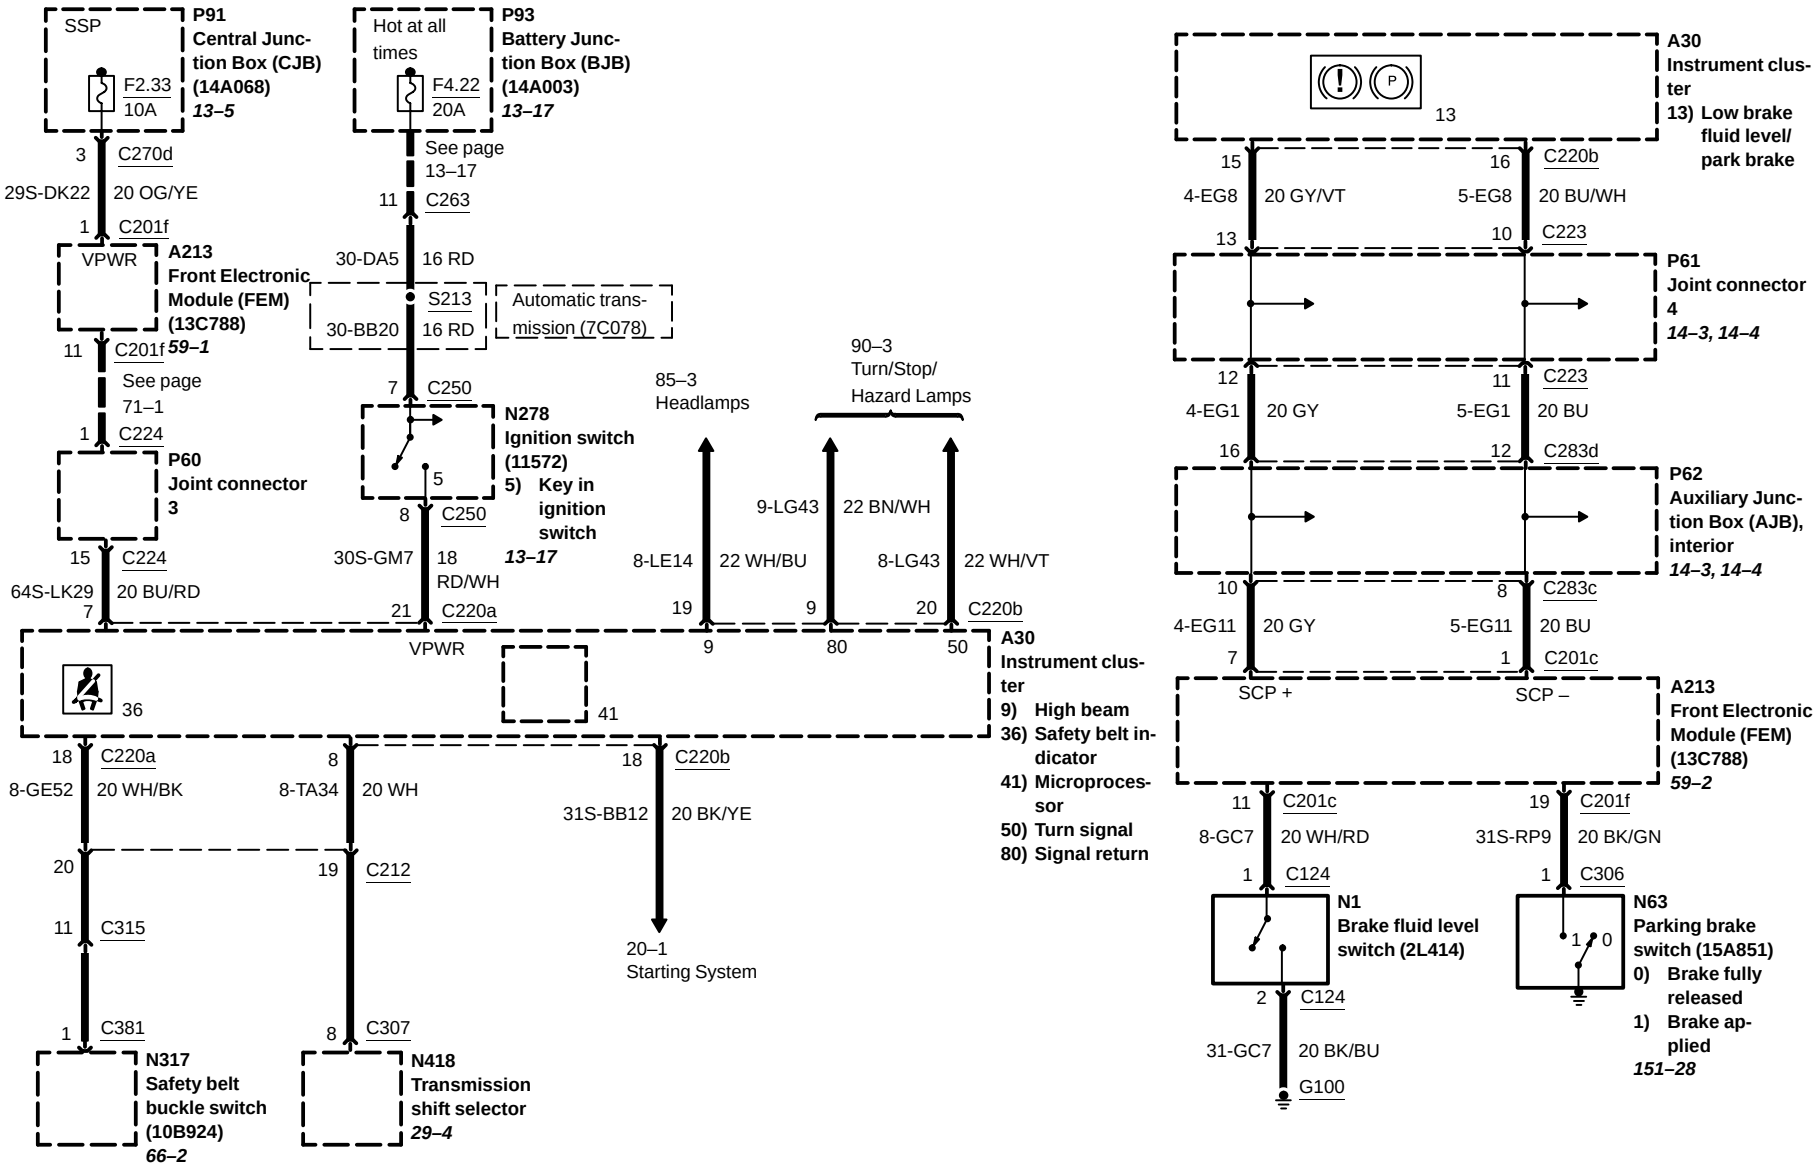
SSP
P91
Central Junction Box (CJB)
(14A068)
13–5
F2.33
10A
3
C270d
29S-DK22
20 OG/YE
1
C201f
VPWR
A213
Front Electronic Module (FEM)
(13C788)
59–1
11
C201f
See page 71–1
1
C224
P60
Joint connector 3
15
C224
64S-LK29
20 BU/RD
7
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–17
F4.22
20A
See page 13–17
11
C263
30-DA5
16 RD
S213
30-BB20
16 RD
Automatic transmission (7C078)
7
C250
N278
Ignition switch
(11572)
5) Key in ignition switch
13–17
5
8
C250
30S-GM7
18 RD/WH
21
C220a
VPWR
85–3
Headlamps
90–3
Turn/Stop/
Hazard Lamps
8-LE14
22 WH/BU
19
9-LG43
22 BN/WH
9
8-LG43
22 WH/VT
20
C220b
9
80
50
A30
Instrument cluster
9) High beam
36) Safety belt indicator
41) Microprocessor
50) Turn signal
80) Signal return
36
41
18
C220a
8-GE52
20 WH/BK
20
11
C315
1
C381
N317
Safety belt buckle switch
(10B924)
66–2
8
8-TA34
20 WH
19
C212
8
C307
N418
Transmission shift selector
29–4
18
C220b
31S-BB12
20 BK/YE
20–1
Starting System
A30
Instrument cluster
13) Low brake fluid level/ park brake
13
15
4-EG8
20 GY/VT
16
C220b
5-EG8
20 BU/WH
13
10
C223
P61
Joint connector 4
14–3, 14–4
12
4-EG1
20 GY
11
C223
5-EG1
20 BU
16
12
C283d
P62
Auxiliary Junction Box (AJB), interior
14–3, 14–4
10
4-EG11
20 GY
8
C283c
5-EG11
20 BU
7
1
C201c
SCP +
SCP –
A213
Front Electronic Module (FEM)
(13C788)
59–2
11
C201c
8-GC7
20 WH/RD
19
C201f
31S-RP9
20 BK/GN
1
C124
1
C306
N1
Brake fluid level switch (2L414)
N63
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
151–28
2
C124
31-GC7
20 BK/BU
G100