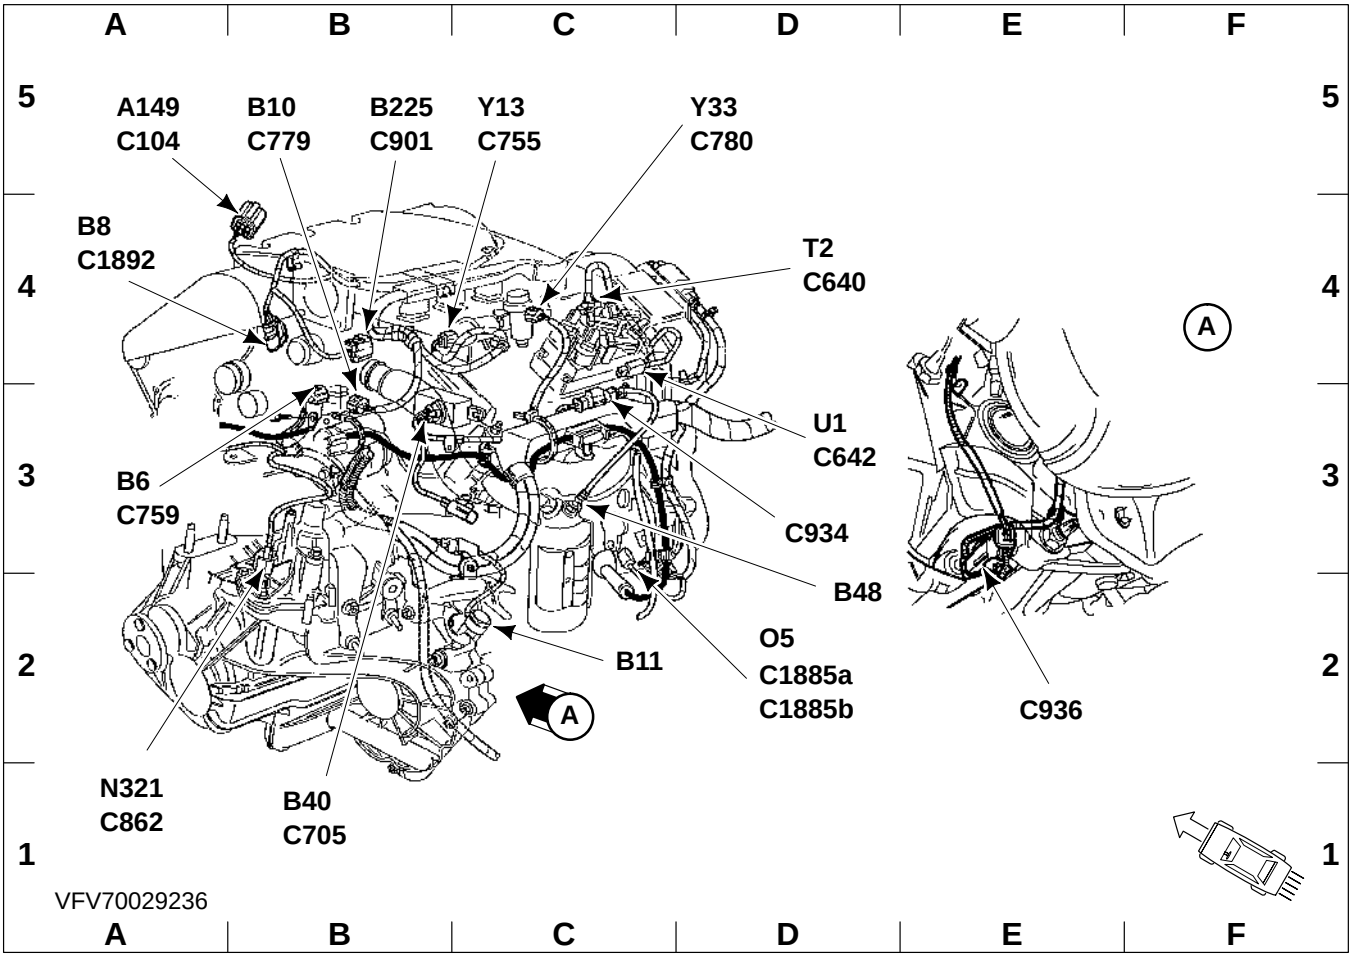

On engine, rear / LH side – Duratec–VE, manual transmission

A149 . Inlet manifold runner control (IMRC) module . . . . . A 5
B6 . . . Coolant temperature sensor . . . . . A 3
B8 . . . Throttle Position Sensor (TPS) . . . . . A 4
B10 . . Engine Coolant Temperature (ECT) sensor . . . . . B 5
B11 . . Vehicle Speed Sensor (VSS) . . . . . C 2
B40 . . Exhaust Pressure Transducer (EPT) sensor . . . . . B 1
B48 . . Heated Oxygen Sensor (HO2S) #11 . . . D 2
B225 . Fuel rail pressure transducer sensor . . . . B 5
C104 . . . . . A 5
C640 . . . . . D 4
C642 . . . . . D 3
C705 . . . . . B 1
C755 . . . . . C 5
C759 . . . . . A 3
C779 . . . . . B 5
C780 . . . . . D 5
C862 . . . . . A 1
C901 . . . . . B 5
C934 . . . . . D 3
C936 . . . . . E 2
C1885a . . . . . D 2
C1885b . . . . . D 2
C1892 . . . . . A 4
N321 . Park/neutral position (PNP) switch . . . . A 1
O5 . . . Generator . . . . . D 2
T2 . . . Ignition transformer . . . . . D 4
U1 . . . Ignition transformer capacitor . . . . . D 3
Y13 . . Idle speed control valve . . . . . C 5
Y33 . . Electr. Vacuum Regulator (EVR) solenoid valve . . . . . D 5