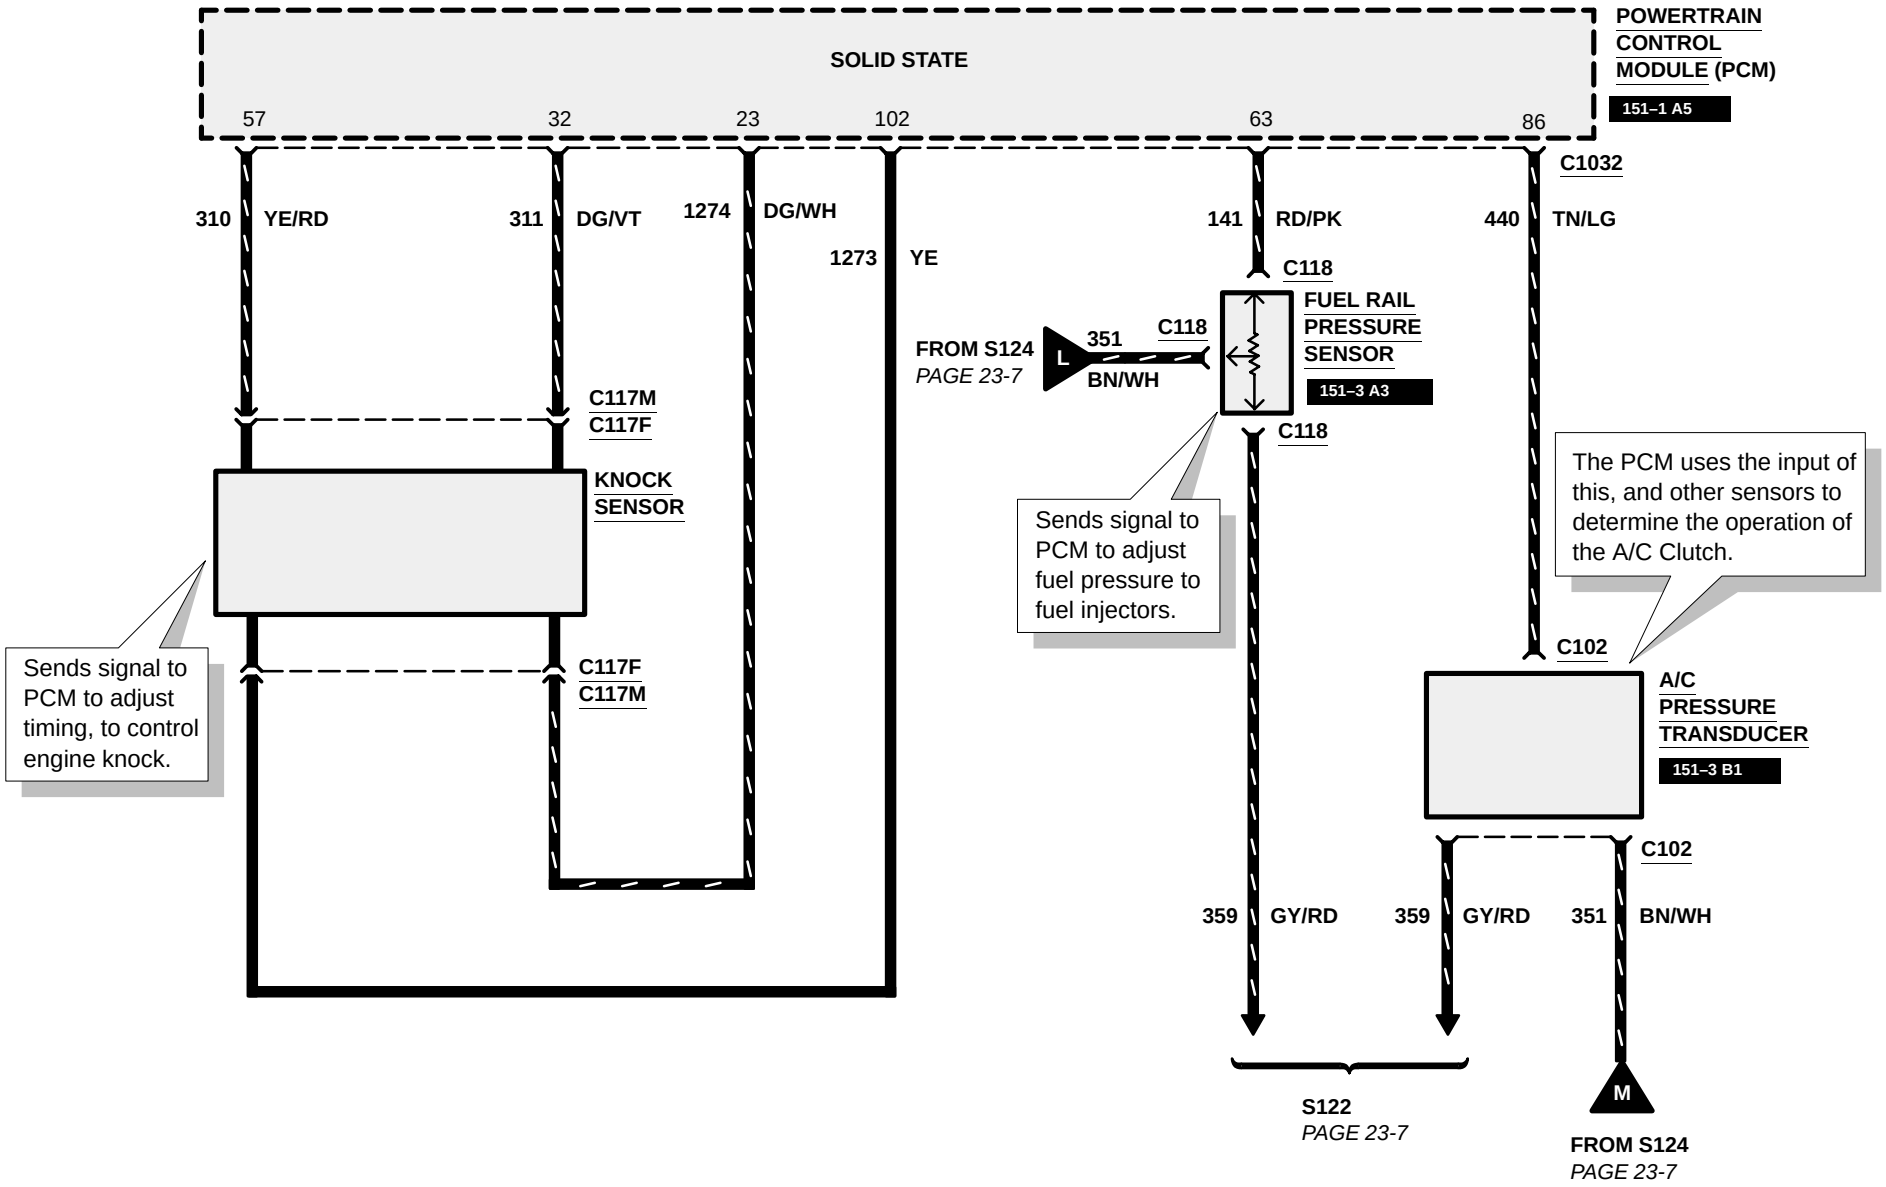
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5
57
32
23
102
63
86
C1032
310 YE/RD
311 DG/VT
1274 DG/WH
1273 YE
141 RD/PK
440 TN/LG
C118
FUEL RAIL PRESSURE SENSOR
151–3 A3
FROM S124
PAGE 23-7
L
351 BN/WH
C118
C118
C117M
C117F
KNOCK SENSOR
C117F
C117M
Sends signal to PCM to adjust timing, to control engine knock.
Sends signal to PCM to adjust fuel pressure to fuel injectors.
The PCM uses the input of this, and other sensors to determine the operation of the A/C Clutch.
C102
A/C PRESSURE TRANSDUCER
151–3 B1
C102
359 GY/RD
359 GY/RD
351 BN/WH
S122
PAGE 23-7
M
FROM S124
PAGE 23-7