C511 (GY)

14B188

M206
Door lock actuator assembly, driver side

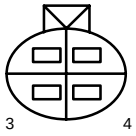

F04157

Pin	Circuit	Circuit Function
1	SEE6 (BK)	Ground
2	PH35 (WH/GN)	Door unlock, output
3	SC16 (RD/YE)	Door unlock, switch sense
4	PH43 (GN/YE)	Door lock, output

C515 (GY)

14B188

N407
Key lock switch, driver side

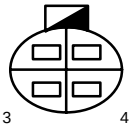

F04159

Pin	Circuit	Circuit Function
1	SC08 (RD/BK)	Door unlock, switch sense
2	SC18 (RD)	Door lock, switch sense
3	–	not used
4	SCE8 (BK)	Ground

C521

14B188

N440
Memory set switch

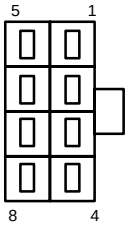

F08121

Pin	Circuit	Circuit Function
1	KAE6 (BK)	Ground
2	KA36 (GN/BK)	Memory set switch - Set 2
3	KA35 (LB)	Memory set switch - Set 1
4	KA34 (BU/BK)	Memory set switch - Illumination
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C527 (WH)

14B188

Y213
Tweeter, left front



F02129

Pin	Circuit	Circuit Function
1	RA30 (GY/BU)	Speaker, left front
2	RA31 (YE/BU)	Speaker, left front

C601

14N066

Y18
Speaker, right front



F02263

Pin	Circuit	Circuit Function
1	RA52 (BU)	Speaker, right front
	RA42 (BU)	Speaker, right front
2	RA53 (YE)	Speaker, right front
	RA43 (YE)	Speaker, right front

C603 (BK)

14N066

M79
Power window motor, passenger side front



F02125

Pin	Circuit	Circuit Function
1	PD12 (BU/YE)	Window motor, feed, Down
2	PD13 (BU/OG)	Window motor, feed, Up