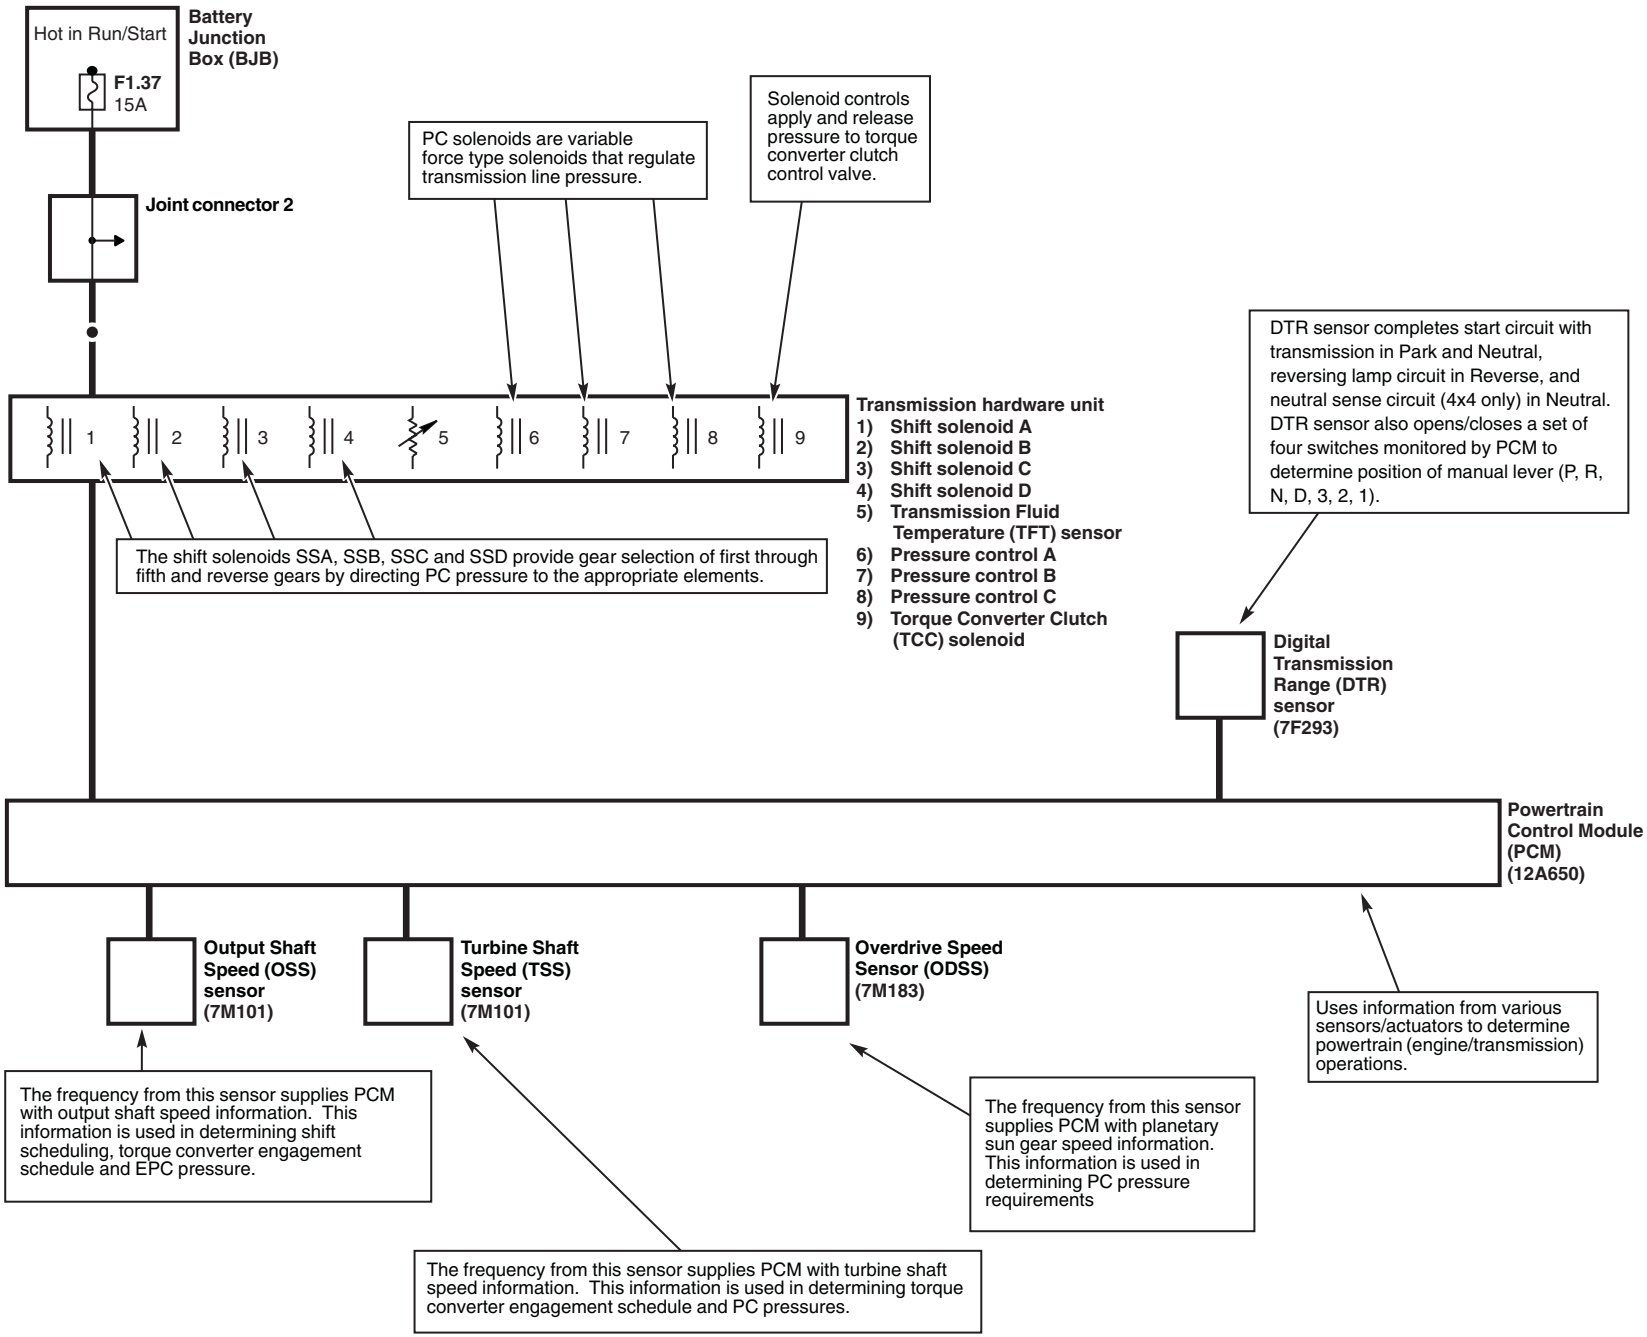
Hot in Run/Start
Battery Junction Box (BJB)
F1.37
15A
Joint connector 2
PC solenoids are variable force type solenoids that regulate transmission line pressure.
Solenoid controls apply and release pressure to torque converter clutch control valve.
DTR sensor completes start circuit with transmission in Park and Neutral, reversing lamp circuit in Reverse, and neutral sense circuit (4x4 only) in Neutral. DTR sensor also opens/closes a set of four switches monitored by PCM to determine position of manual lever (P, R, N, D, 3, 2, 1).
1 2 3 4 5 6 7 8 9
Transmission hardware unit
1) Shift solenoid A
2) Shift solenoid B
3) Shift solenoid C
4) Shift solenoid D
5) Transmission Fluid Temperature (TFT) sensor
6) Pressure control A
7) Pressure control B
8) Pressure control C
9) Torque Converter Clutch (TCC) solenoid
The shift solenoids SSA, SSB, SSC and SSD provide gear selection of first through fifth and reverse gears by directing PC pressure to the appropriate elements.
Digital Transmission Range (DTR) sensor (7F293)
Powertrain Control Module (PCM) (12A650)
Output Shaft Speed (OSS) sensor (7M101)
Turbine Shaft Speed (TSS) sensor (7M101)
Overdrive Speed Sensor (ODSS) (7M183)
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
The frequency from this sensor supplies PCM with output shaft speed information. This information is used in determining shift scheduling, torque converter engagement schedule and EPC pressure.
The frequency from this sensor supplies PCM with planetary sun gear speed information. This information is used in determining PC pressure requirements
The frequency from this sensor supplies PCM with turbine shaft speed information. This information is used in determining torque converter engagement schedule and PC pressures.