C603

14A005

M242
Door lock actuator,
right front

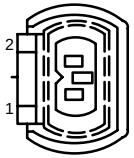

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

*Supercrew, Harley Davidson

C604

14A005

N105
Window adjust
switch, passenger
side

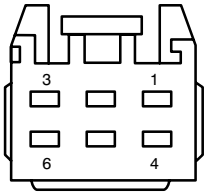

F06303

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front, Up
2	333 (YE/RD)	Window motor, +/–
3	400 (LB/BK)	Accessory relay, switched power, output
	*193 (YE/LG)	Window switch, feed
4	–	not used
5	334 (RD/YE)	Window motor, +/–
6	314 (TN/LB)	Window switch, feed, right front, Down

C605

14A005

N205
Door lock switch,
passenger side
(14028)

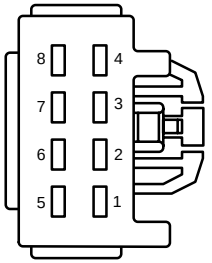

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock, switch, input
4	57 (BK)	Ground
5	19 (LB/RD)	Instrument illumination, feed
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C606

14A005

E178
Door entry lamp,
right front (13776)

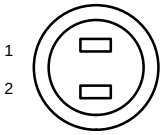

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output