C504b (GY)

14A005

N447
Master window adjust switch (14529)

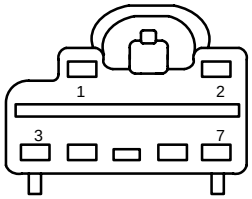

F07060

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	400 (LB/BK)	Accessory relay, switched power, output
3	314 (TN/LB)	Window switch, feed, right front, Down
4	313 (WH/YE)	Window switch, feed, right front, Up
5	995 (GY)	Window motor, feed, Down
6	991 (TN/LB)	Master window adjust switch (14529), feed, Down
7	992 (WH/BK)	Master window adjust switch (14529), feed, Up

C505

14A005

N447
Master window adjust switch (14529)

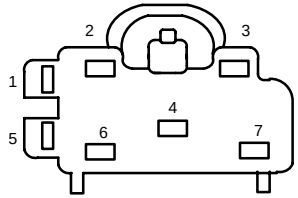

F07081

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	19 (LB/RD)	Voltage supplied at all times (overload protected)
6	119 (PK/YE)	Door lock relay, control
7	–	not used

C506

14A005

E177
Door entry lamp, left front (13776)



F02235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output