3.9L

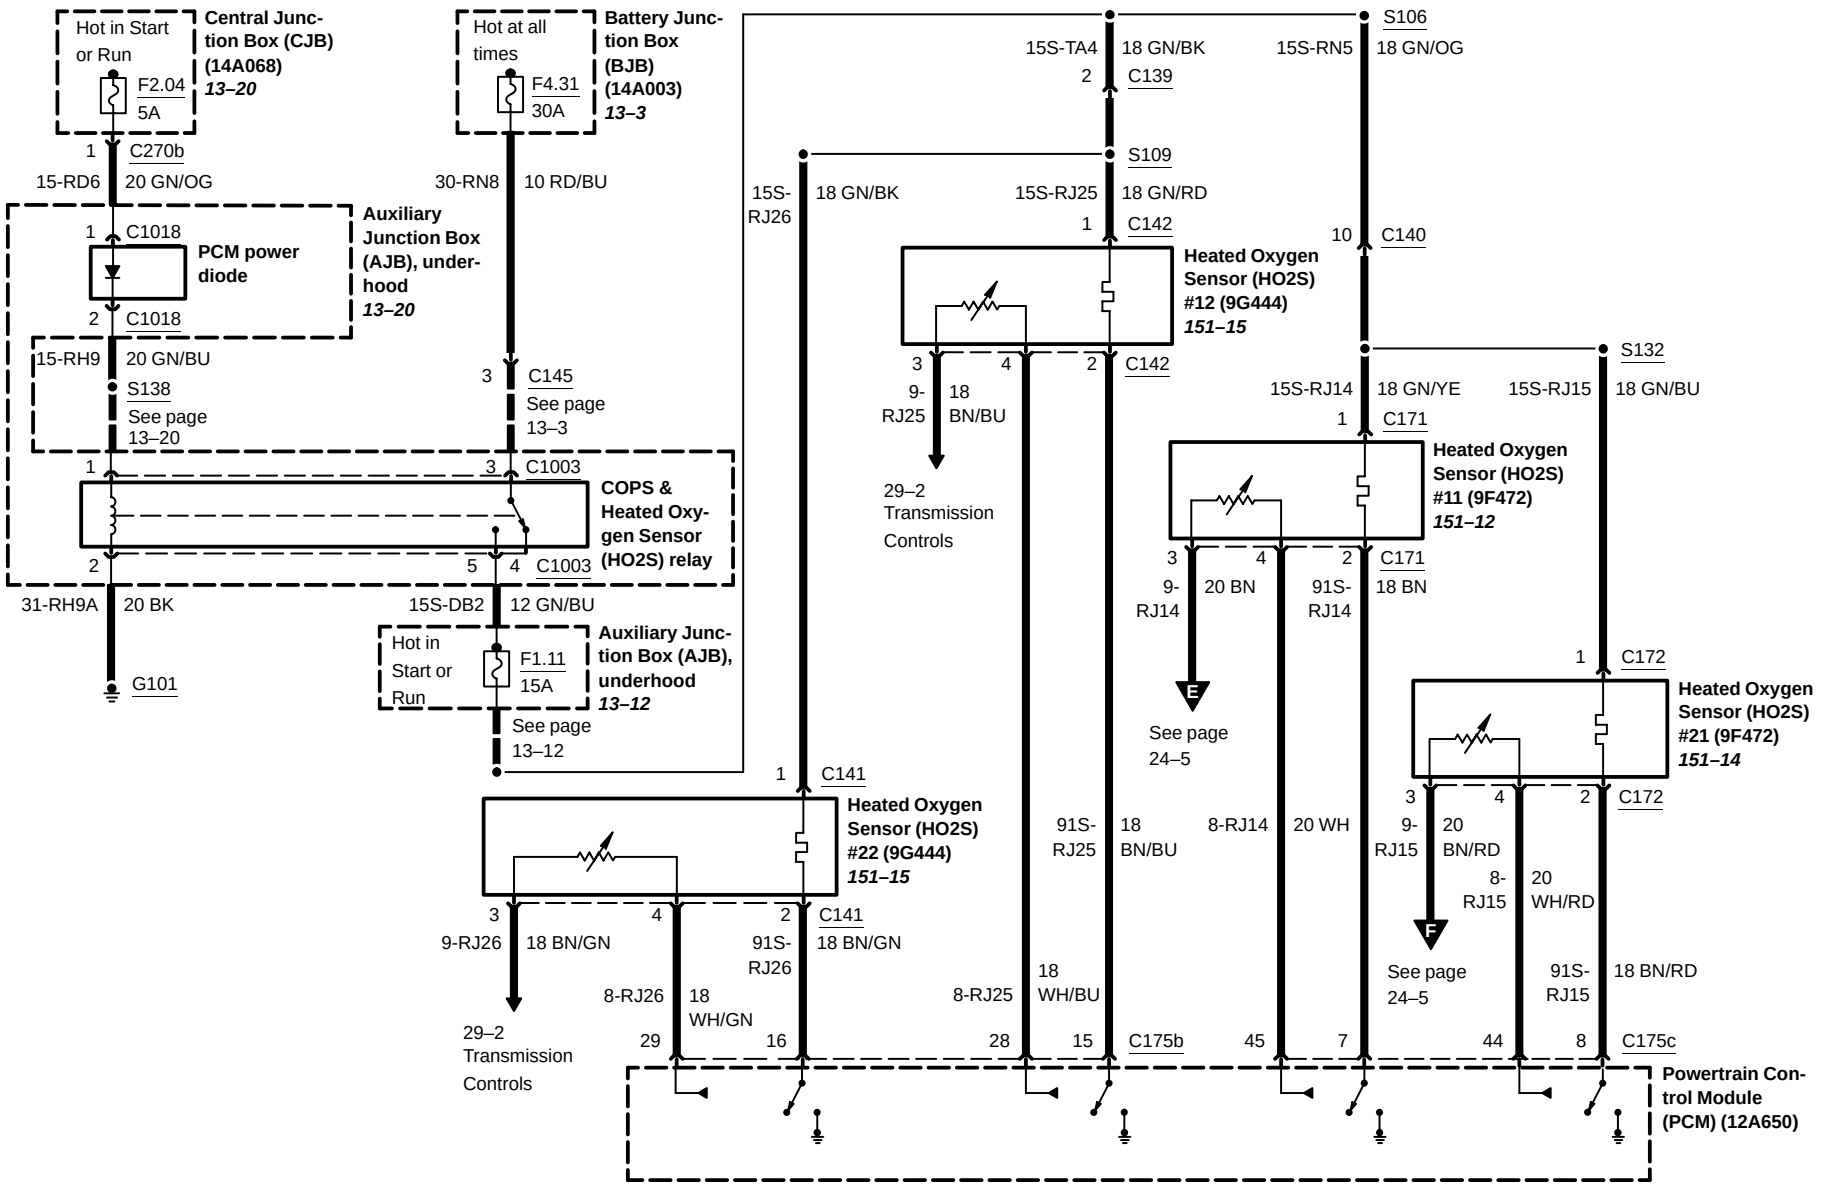
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–20
F2.04 5A
Hot at all times
Battery Junction Box (BJB) (14A003) 13–3
F4.31 30A
1 C270b
15-RD6 20 GN/OG
30-RN8 10 RD/BU
Auxiliary Junction Box (AJB), underhood 13–20
1 C1018
PCM power diode
2 C1018
15-RH9 20 GN/BU
S138
See page 13–20
3 C145
See page 13–3
1 3 C1003
COPS & Heated Oxygen Sensor (HO2S) relay
2 5 4 C1003
31-RH9A 20 BK
15S-DB2 12 GN/BU
G101
Hot in Start or Run
F1.11 15A
Auxiliary Junction Box (AJB), underhood 13–12
See page 13–12
15S-TA4 18 GN/BK
2 C139
15S-RN5 18 GN/OG
S106
S109
15S-RJ26 18 GN/BK
15S-RJ25 18 GN/RD
1 C142
10 C140
Heated Oxygen Sensor (HO2S) #12 (9G444) 151–15
3 4 2 C142
9-RJ25 18 BN/BU
29–2 Transmission Controls
S132
15S-RJ14 18 GN/YE
15S-RJ15 18 GN/BU
1 C171
Heated Oxygen Sensor (HO2S) #11 (9F472) 151–12
3 4 2 C171
9-RJ14 20 BN
91S-RJ14 18 BN
E
See page 24–5
1 C172
Heated Oxygen Sensor (HO2S) #21 (9F472) 151–14
3 4 2 C172
9-RJ15 20 BN/RD
8-RJ15 20 WH/RD
F
See page 24–5
91S-RJ15 18 BN/RD
1 C141
Heated Oxygen Sensor (HO2S) #22 (9G444) 151–15
3 4 2 C141
9-RJ26 18 BN/GN
91S-RJ26 18 BN/GN
29–2 Transmission Controls
91S-RJ25 18 BN/BU
8-RJ14 20 WH
8-RJ25 18 WH/BU
8-RJ26 18 WH/GN
29 16 C175b
28 15 C175b
45 7 C175b
44 8 C175c
Powertrain Control Module (PCM) (12A650)