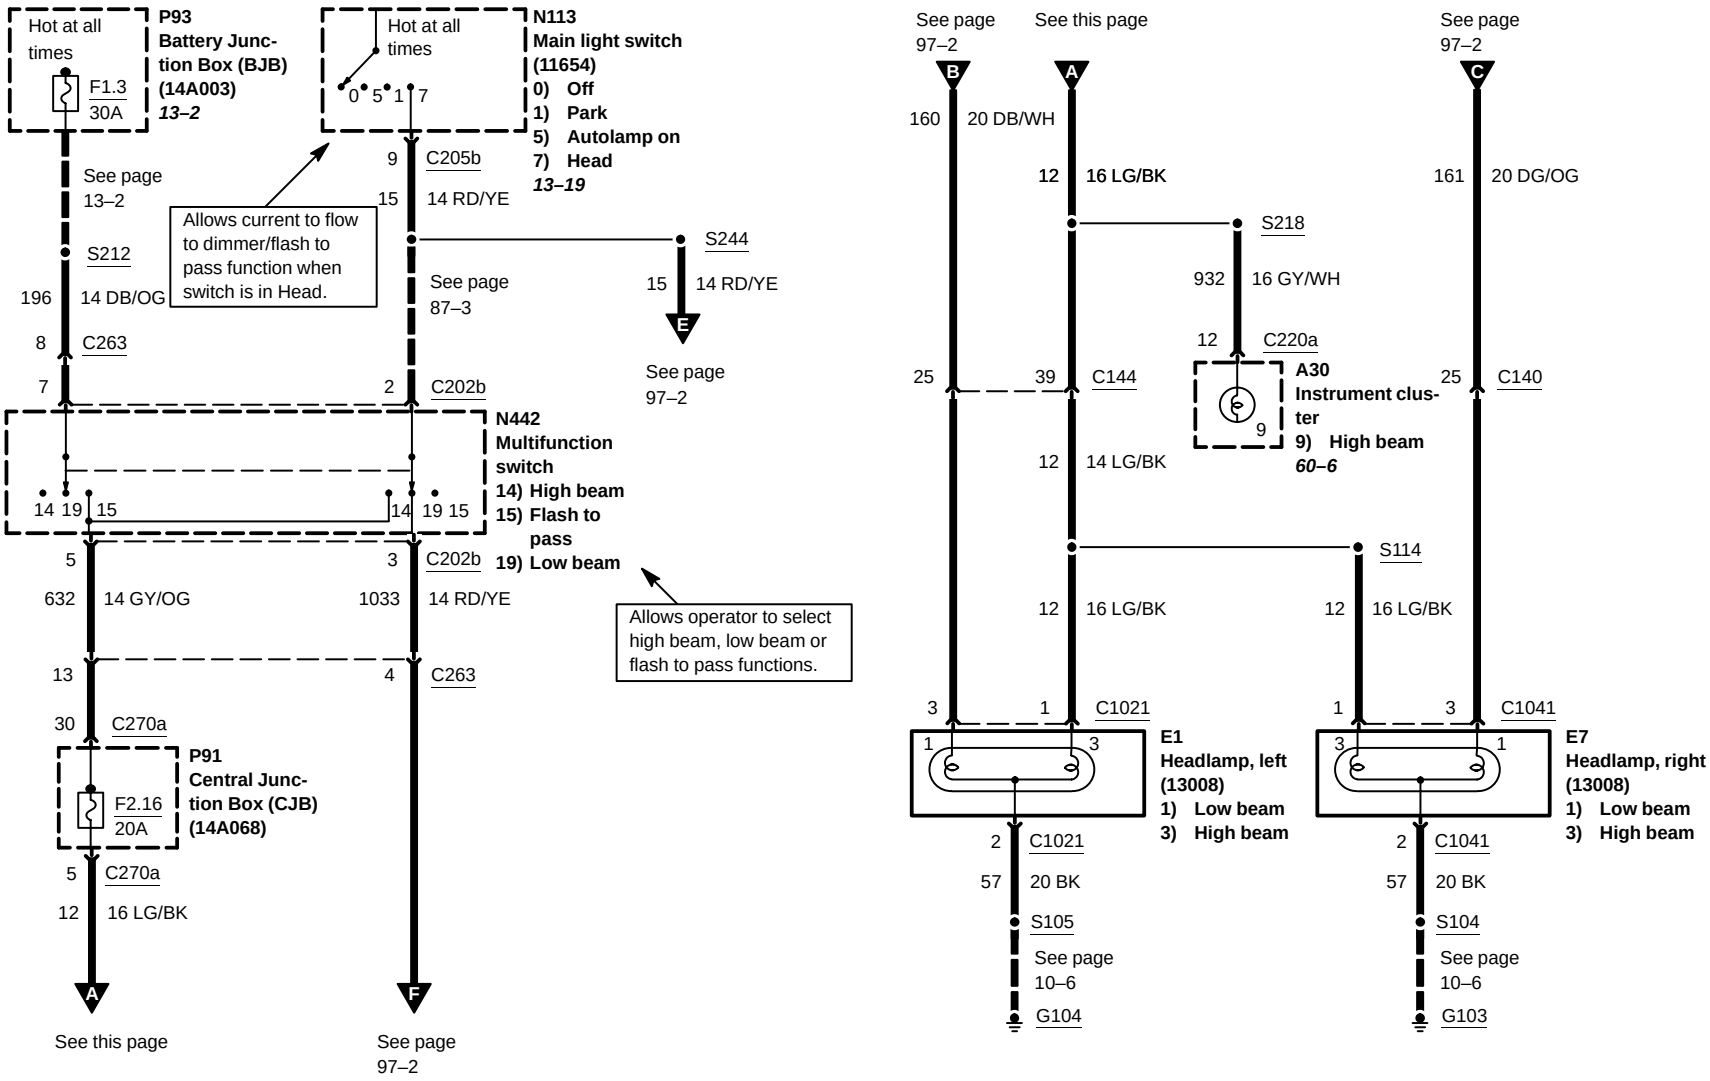
Hot at all times
F1.3
30A
P93
Battery Junction Box (BJB)
(14A003)
13–2
Hot at all times
0 5 1 7
N113
Main light switch
(11654)
0) Off
1) Park
5) Autolamp on
7) Head
13–19
See page 13–2
9 C205b
15 14 RD/YE
Allows current to flow to dimmer/flash to pass function when switch is in Head.
S212
196 14 DB/OG
8 C263
7 2 C202b
See page 87–3
S244
15 14 RD/YE
E
See page 97–2
N442
Multifunction switch
14) High beam
15) Flash to pass
19) Low beam
14 19 15 14 19 15
5 632 14 GY/OG
3 1033 14 RD/YE C202b
Allows operator to select high beam, low beam or flash to pass functions.
13 4 C263
30 C270a
P91
Central Junction Box (CJB)
(14A068)
F2.16
20A
5 C270a
12 16 LG/BK
A
See this page
F
See page 97–2
See page 97–2
See this page
See page 97–2
B
A
C
160 20 DB/WH
12 16 LG/BK
161 20 DG/OG
S218
932 16 GY/WH
12 C220a
9
A30
Instrument cluster
9) High beam
60–6
25 39 C144
25 C140
12 14 LG/BK
S114
12 16 LG/BK
12 16 LG/BK
3 1 C1021
1 3
E1
Headlamp, left
(13008)
1) Low beam
3) High beam
1 3 C1041
3 1
E7
Headlamp, right
(13008)
1) Low beam
3) High beam
2 C1021
57 20 BK
S105
See page 10–6
G104
2 C1041
57 20 BK
S104
See page 10–6
G103