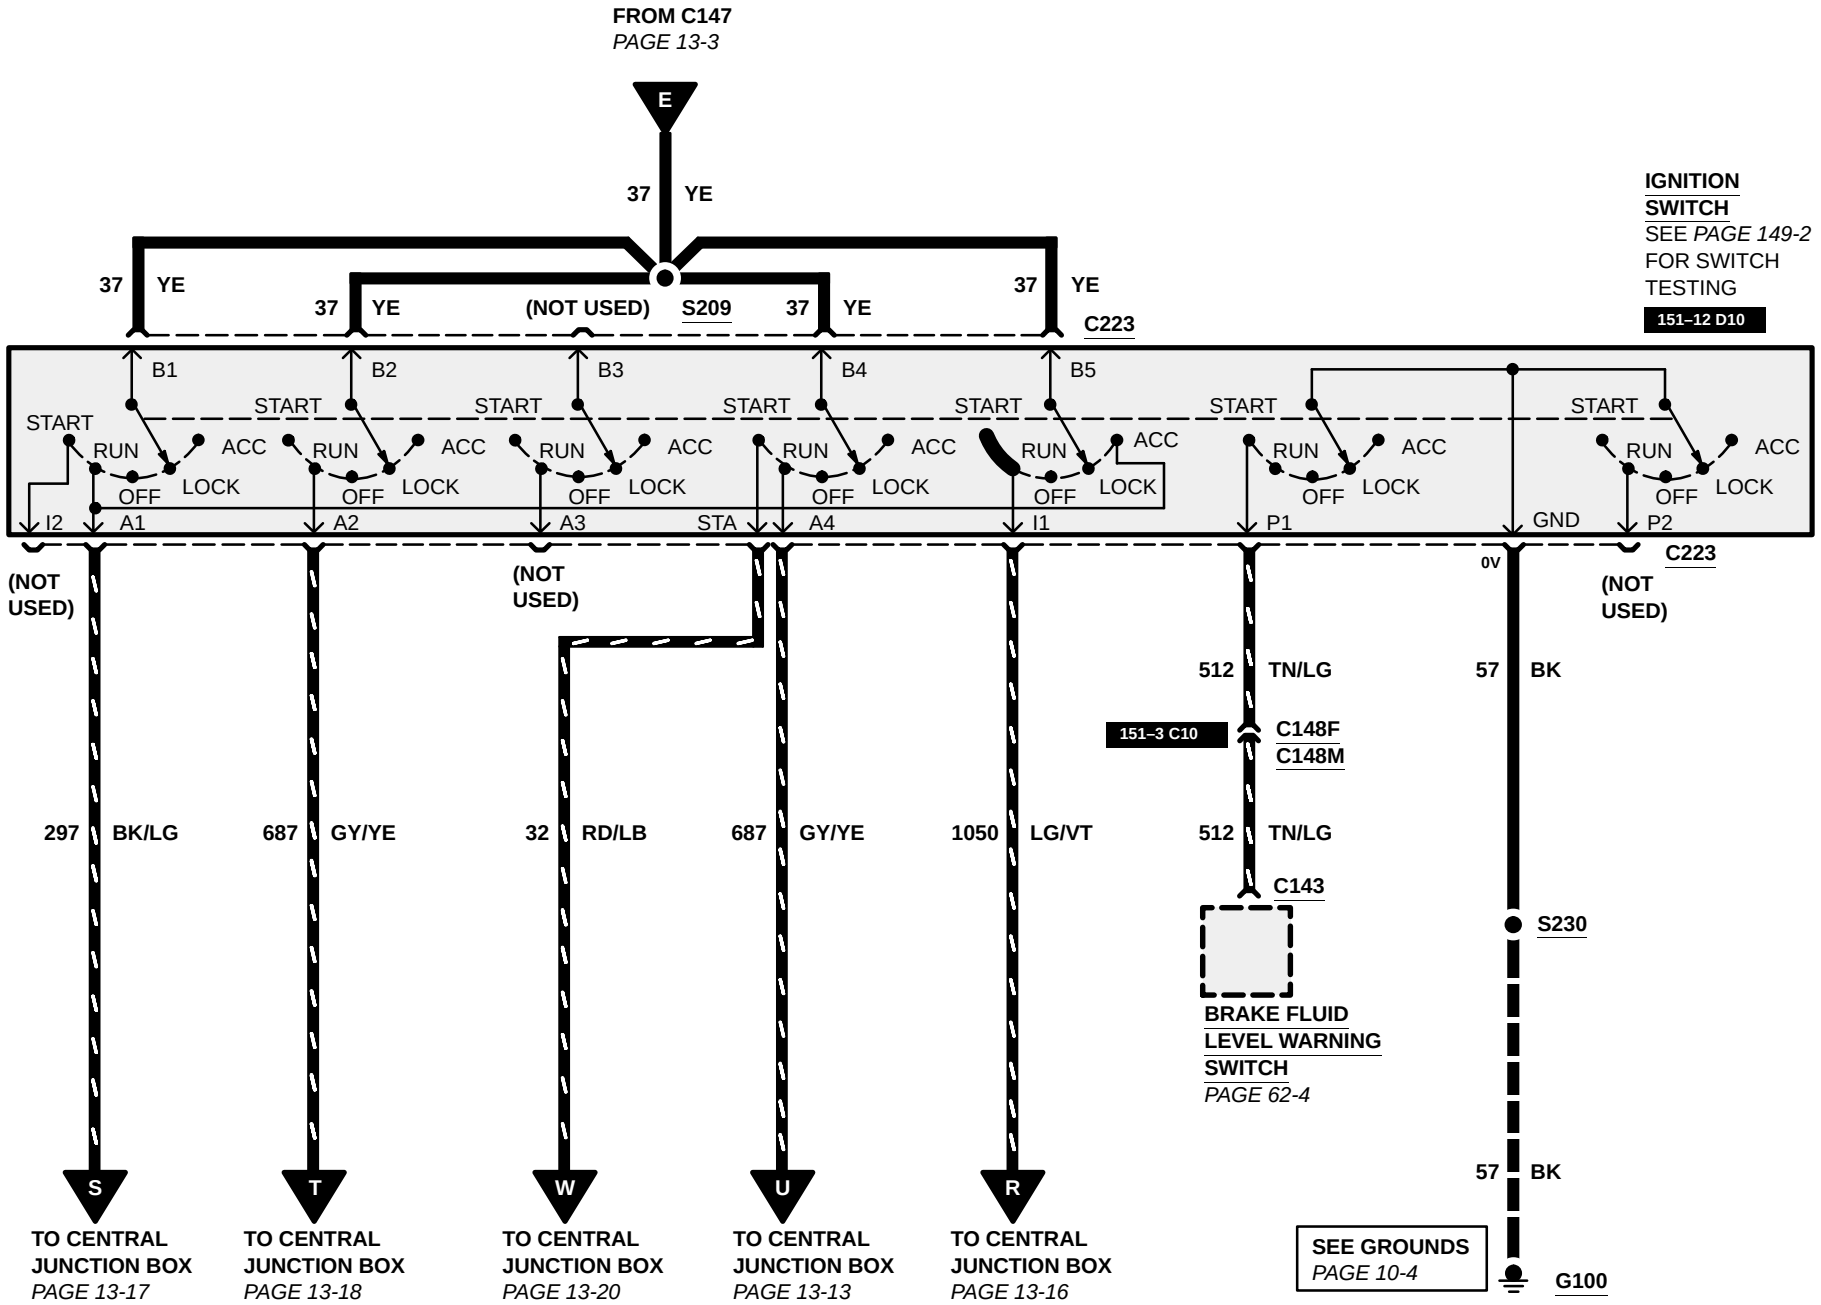
FROM C147
PAGE 13-3
E
37 YE
37 YE
37 YE
(NOT USED)
S209
37 YE
37 YE
C223
IGNITION SWITCH
SEE PAGE 149-2 FOR SWITCH TESTING
151–12 D10
B1
B2
B3
B4
B5
START
RUN
ACC
OFF
LOCK
I2
A1
A2
A3
STA
A4
I1
P1
GND
P2
C223
(NOT USED)
(NOT USED)
(NOT USED)
0V
512 TN/LG
57 BK
151–3 C10
C148F
C148M
297 BK/LG
687 GY/YE
32 RD/LB
687 GY/YE
1050 LG/VT
512 TN/LG
C143
S230
BRAKE FLUID LEVEL WARNING SWITCH
PAGE 62-4
57 BK
S
T
W
U
R
TO CENTRAL JUNCTION BOX
PAGE 13-17
TO CENTRAL JUNCTION BOX
PAGE 13-18
TO CENTRAL JUNCTION BOX
PAGE 13-20
TO CENTRAL JUNCTION BOX
PAGE 13-13
TO CENTRAL JUNCTION BOX
PAGE 13-16
SEE GROUNDS
PAGE 10-4
G100