C74 (BU)

14A584

N309
Window operating switch, driver side front

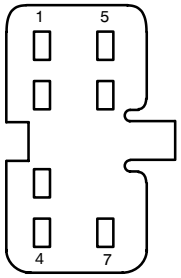

F07016

Pin	Circuit	Circuit function
1	32-AJ6 (WH)	Switched between: Battery voltage, Ground or Open
2	15-AJ7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
3	31-AA34 (BK)	Ground
	31-AJ7 (BK)	Ground
4	–	not used
5	–	not used
6	–	not used
7	33-AJ15 (YE/GN)	Switched between: Battery voltage, Ground or Open

C78

14K138

M68
Door lock motor, passenger side

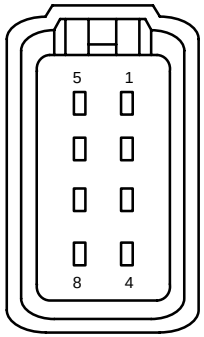

F08083

Pin	Circuit	Circuit function
1	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open
4	31S-AA64 (BK/GN)	Ground, Switched
5	31S-AA61 (BK/BU)	Ground, Switched
6	31-AA58 (BK)	Ground
7	31S-AA62 (BK/WH)	Ground, Switched
8	31S-AA63 (BK/OG)	Ground, Switched