## C177

**14290**

B229
Forward crash sensor

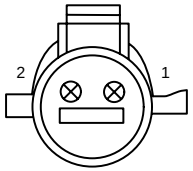


F02473

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 619 | Air bag center sensor, to, Electronic Crash Sensor (ECS) module |

## C180

**12B637**

B41
Camshaft position sensor (6B288)

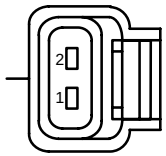


F02026

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 796 (LB) | Camshaft position sensor (6B288), signal, return |
| 2 | 795 (DG) | Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650) |

## C181

**12B637**

Y108
Fuel injector 1 (9F593)

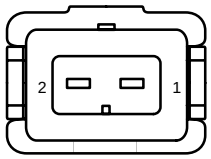


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 555 (TN) | Fuel injector 1, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C182

**12B637**

Y109
Fuel injector 2 (9F593)

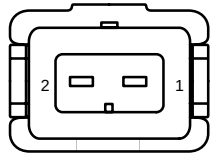


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 556 (WH) | Fuel injector 2, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C183

**12B637**

Y110
Fuel injector 3 (9F593)

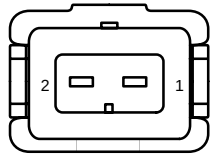


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 557 (BN/YE) | Fuel injector 3, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C184

**12B637**

Y111
Fuel injector 4 (9F593)

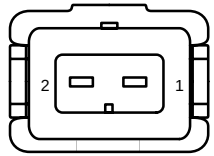


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 558 (BN/LB) | Fuel injector 4, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |