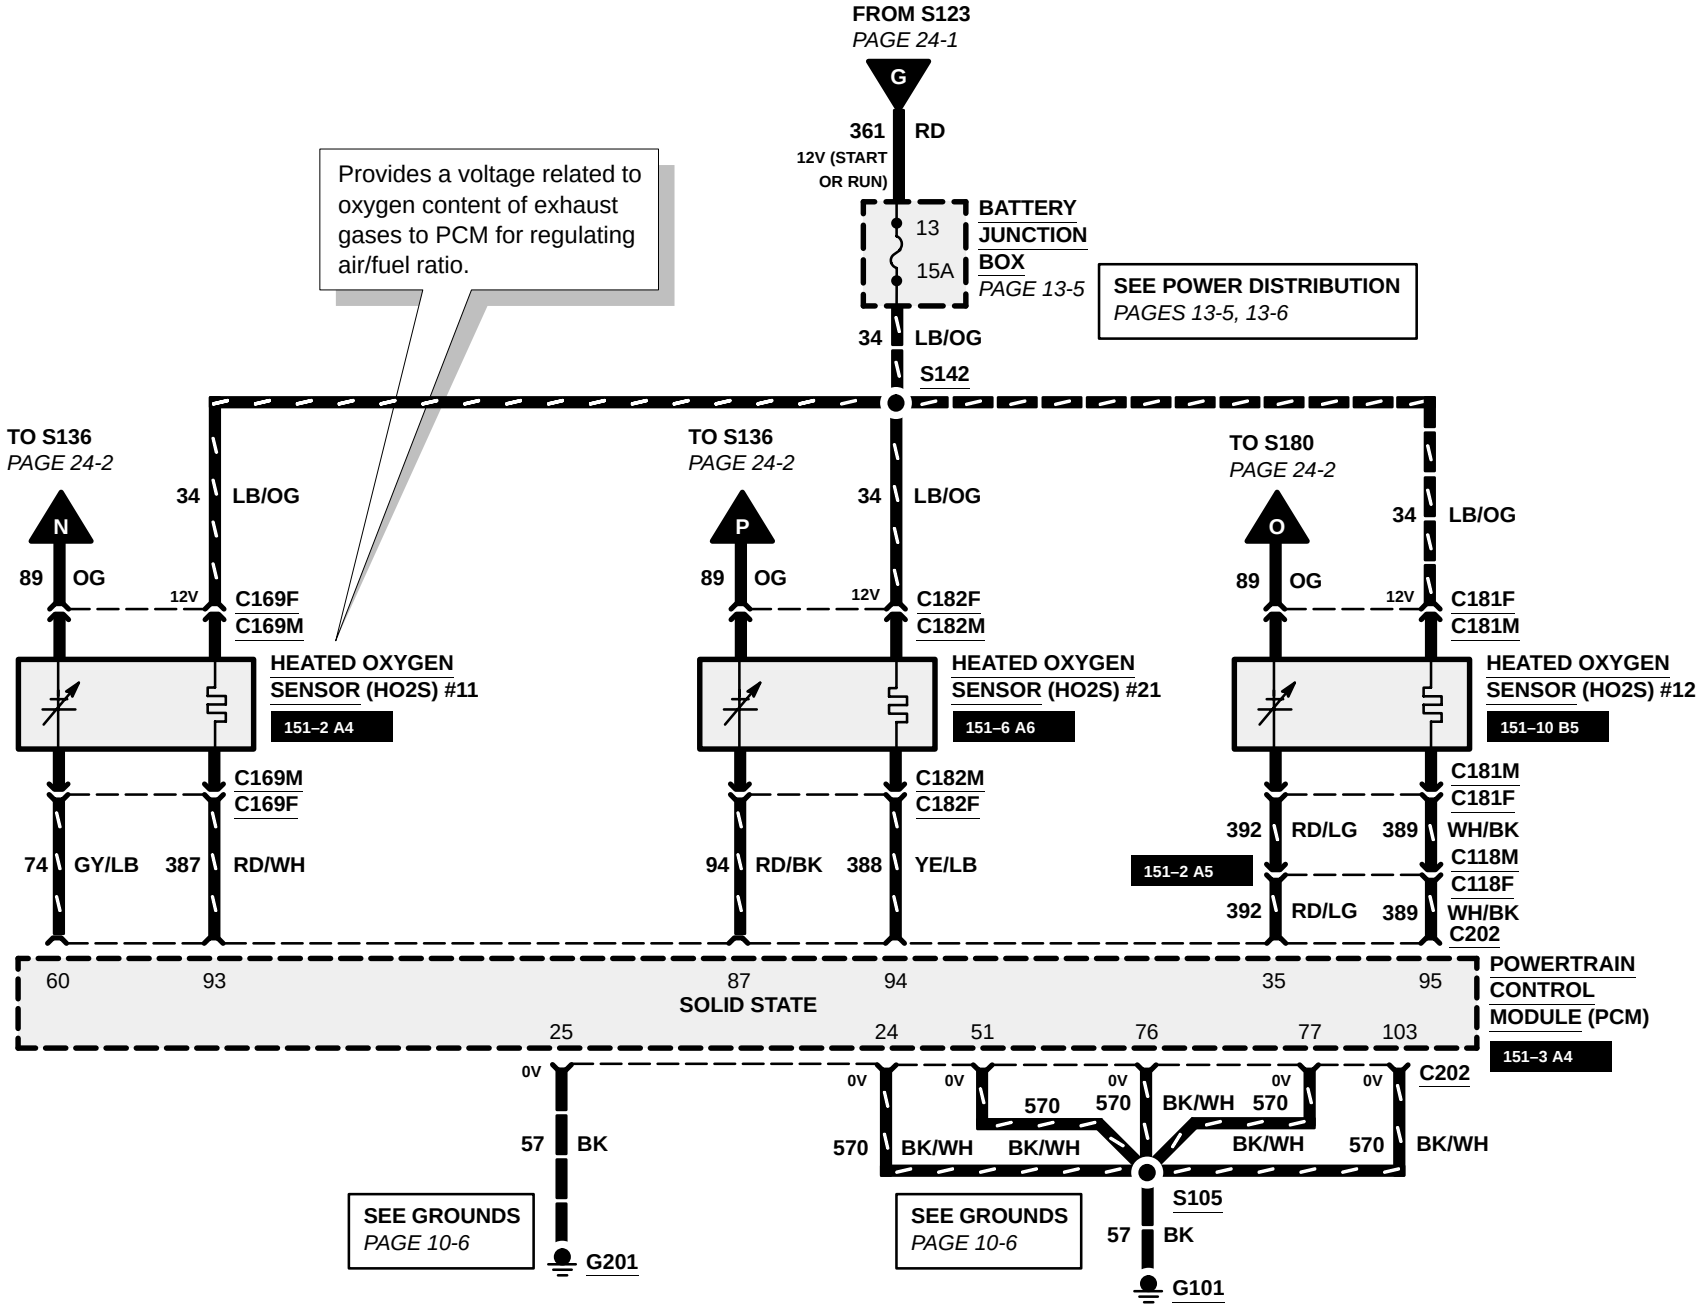
FROM S123
PAGE 24-1
G
361 RD
12V (START OR RUN)
BATTERY JUNCTION BOX
13
15A
PAGE 13-5
SEE POWER DISTRIBUTION
PAGES 13-5, 13-6
34 LB/OG
S142
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
TO S136
PAGE 24-2
N
34 LB/OG
89 OG
12V
C169F
C169M
HEATED OXYGEN SENSOR (HO2S) #11
151–2 A4
C169M
C169F
74 GY/LB
387 RD/WH
TO S136
PAGE 24-2
P
34 LB/OG
89 OG
12V
C182F
C182M
HEATED OXYGEN SENSOR (HO2S) #21
151–6 A6
C182M
C182F
94 RD/BK
388 YE/LB
TO S180
PAGE 24-2
O
34 LB/OG
89 OG
12V
C181F
C181M
HEATED OXYGEN SENSOR (HO2S) #12
151–10 B5
C181M
C181F
392 RD/LG
389 WH/BK
151–2 A5
C118M
C118F
392 RD/LG
389 WH/BK
C202
60
93
87
94
35
95
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
25
24
51
76
77
103
0V
57 BK
SEE GROUNDS
PAGE 10-6
G201
570 BK/WH
BK/WH
570
BK/WH
570
BK/WH
570
BK/WH
C202
S105
57 BK
G101