C178

12B637

B40
Exhaust Pressure Transducer (EPT) sensor

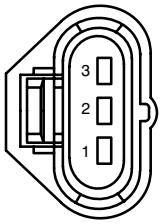

F03101

Pin	Circuit	Circuit Function
1	7-RJ7 (YE/BU)	Voltage D.C. supplied at all times (sensor)
2	9-RJ7 (BN/BU)	Sensor signal return (reference/ ground)
3	8-RJ7 (WH/BU)	Sensor signal

C179

12B637

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

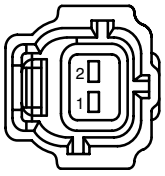

F02101

Pin	Circuit	Circuit Function
1	15S-RL7 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL7 (BN/GN)	Ground, Switched

C180

12B637

B41
Camshaft position sensor

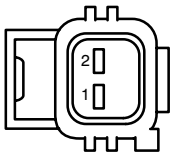

F02107

Pin	Circuit	Circuit Function
1	9-RJ3 (BN/WH)	Sensor signal return (reference/ ground)
2	8-RJ3 (WH/VT)	Sensor signal

C181

9D930/12B637

Y108
Injector 1

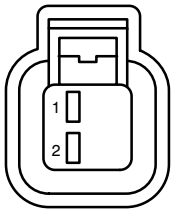

F02069

Pin	Circuit	Circuit Function
1	91S-RL10 (BN/WH)	Ground, Switched
2	15S-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C182

9D930/12B637

Y109
Injector 2

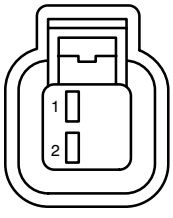

F02069

Pin	Circuit	Circuit Function
1	91S-RL11 (BN)	Ground, Switched
2	15S-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched