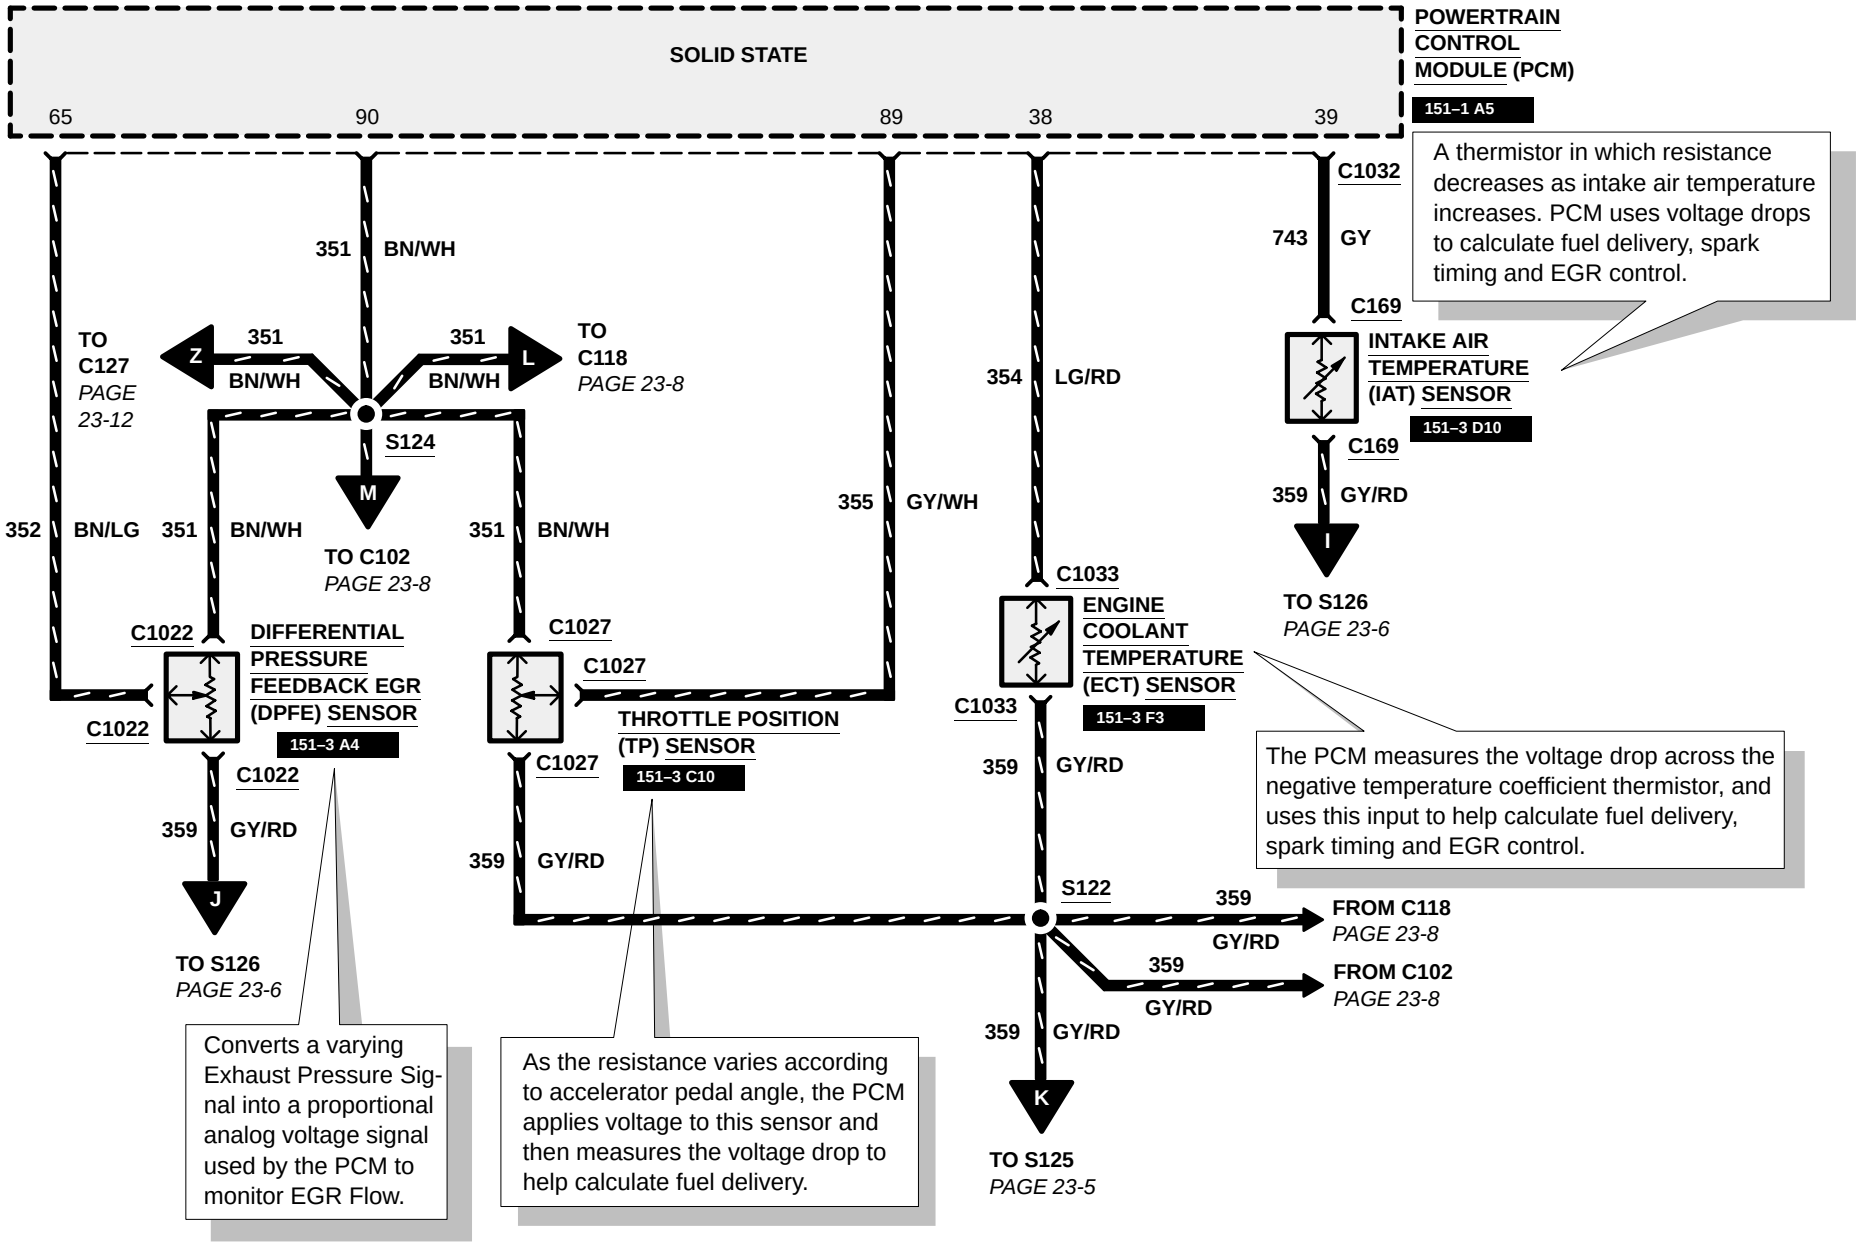
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5
65
90
89
38
39
C1032
743 GY
C169
INTAKE AIR TEMPERATURE (IAT) SENSOR
151–3 D10
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calculate fuel delivery, spark timing and EGR control.
C169
359 GY/RD
I
TO S126
PAGE 23-6
351 BN/WH
TO C127
PAGE 23-12
Z
351 BN/WH
351 BN/WH
L
TO C118
PAGE 23-8
S124
M
TO C102
PAGE 23-8
352 BN/LG
351 BN/WH
351 BN/WH
355 GY/WH
354 LG/RD
C1033
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–3 F3
C1033
359 GY/RD
The PCM measures the voltage drop across the negative temperature coefficient thermistor, and uses this input to help calculate fuel delivery, spark timing and EGR control.
C1022
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–3 A4
C1022
C1022
359 GY/RD
J
TO S126
PAGE 23-6
C1027
C1027
THROTTLE POSITION (TP) SENSOR
151–3 C10
C1027
359 GY/RD
S122
359 GY/RD
FROM C118
PAGE 23-8
359 GY/RD
FROM C102
PAGE 23-8
359 GY/RD
K
TO S125
PAGE 23-5
Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to monitor EGR Flow.
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.