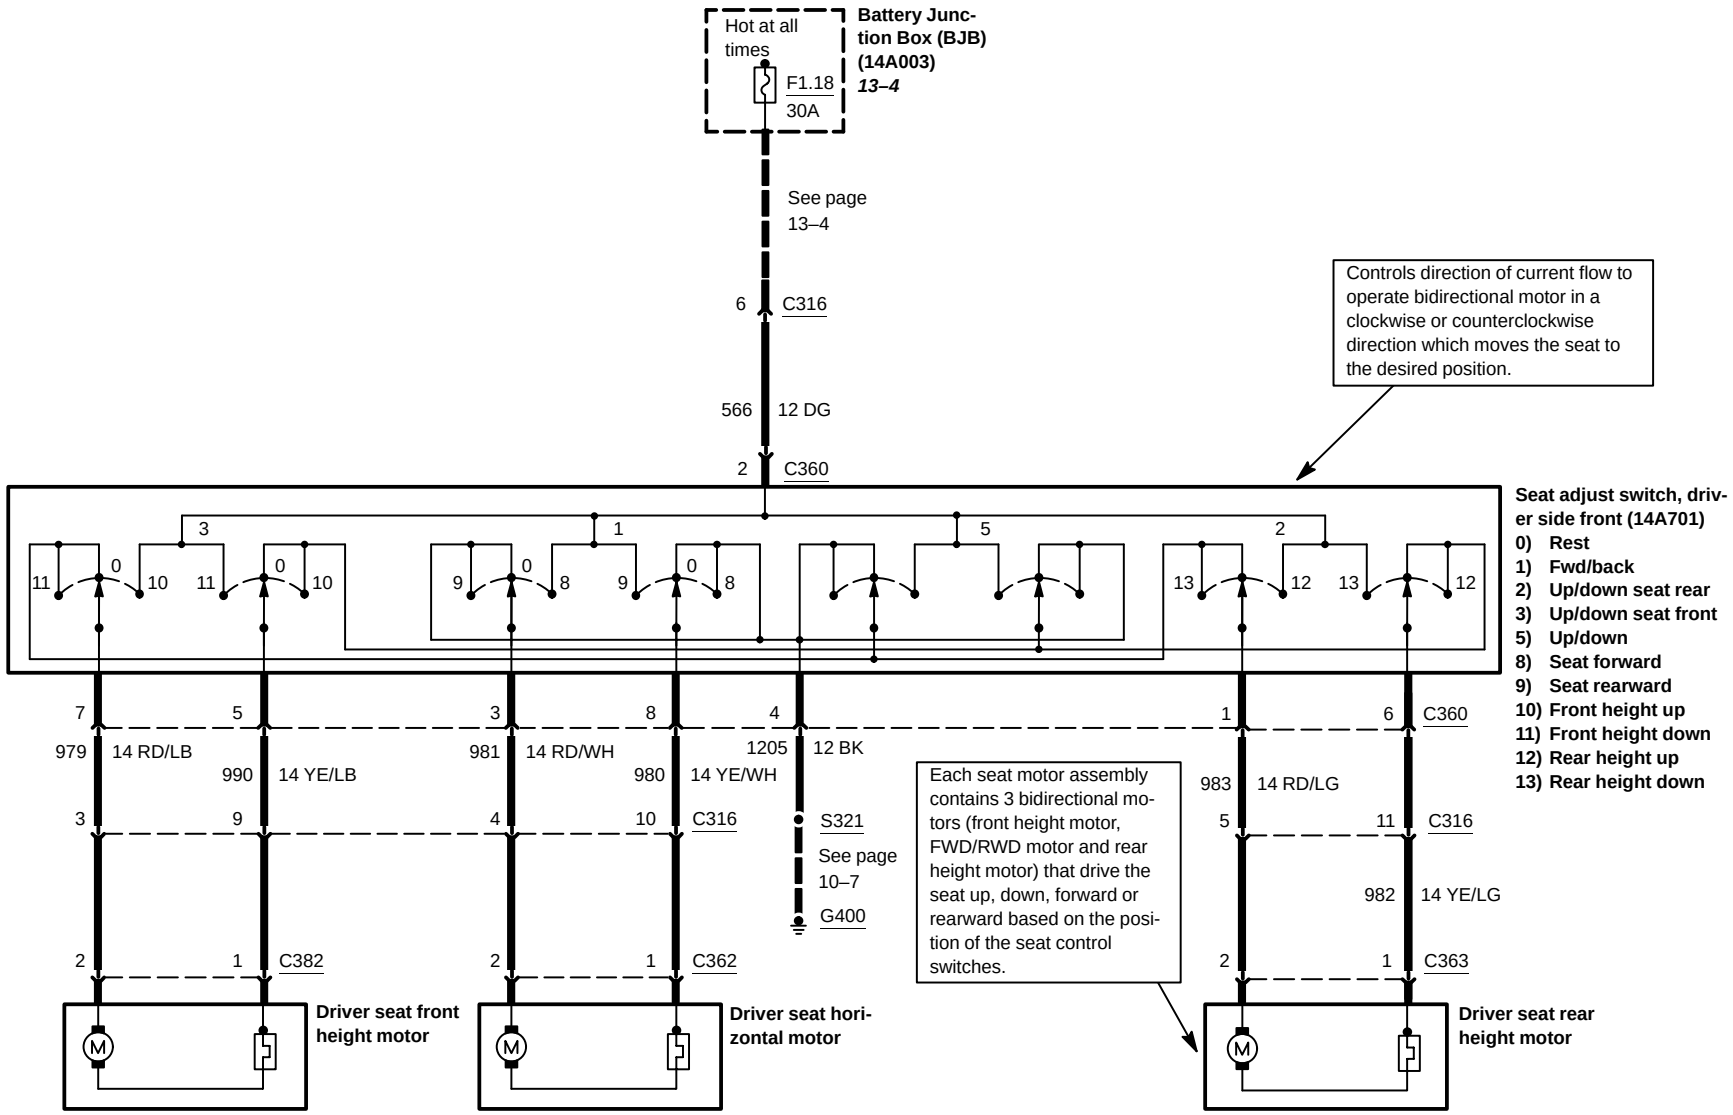
Hot at all times
F1.18
30A
Battery Junction Box (BJB) (14A003)
13–4
See page 13–4
6
C316
566
12 DG
2
C360
Controls direction of current flow to operate bidirectional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
Seat adjust switch, driver side front (14A701)
0) Rest
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
5) Up/down
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
7
5
3
8
4
1
6
C360
979
14 RD/LB
990
14 YE/LB
981
14 RD/WH
980
14 YE/WH
1205
12 BK
983
14 RD/LG
3
9
4
10
C316
S321
See page 10–7
G400
5
11
C316
982
14 YE/LG
2
1
C382
2
1
C362
2
1
C363
Each seat motor assembly contains 3 bidirectional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.
Driver seat front height motor
Driver seat horizontal motor
Driver seat rear height motor