C1177 (BK)

15525

4x4 High/Low indicator switch

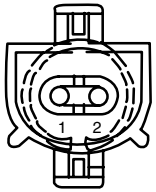

F02453

Pin	Circuit	Circuit function
1	783 (GY)	Four–wheel drive, indicator, high/low, signal
2	784 (LB/BK)	Four–wheel drive, indicator, Low, signal

C1178

12A581

Trailer tow relay, reversing lamp

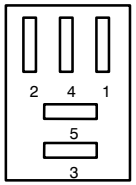

F05110

Pin	Circuit	Circuit function
1	140 (BK/PK)	Voltage supplied in reverse
2	57 (BK)	Ground
3	1043 (DG/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	963 (BK/LG)	Trailer tow connector (15A416), Reversing lamps

C1180 (BK)

9D930

Camshaft position sensor (6B288)

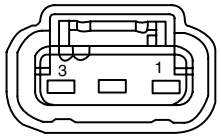

F03267

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	795 (DG)	Camshaft position sensor (6B288), signal
3	570 (BK/WH)	Ground

C1181 (BK)

9D930

Fuel injector 1 (9F593)



F02058

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1182 (BK)

9D930

Fuel injector 2 (9F593)



F02058

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C1183 (BK)

9D930

Fuel injector 3 (9F593)



F02058

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)