C328

14B723

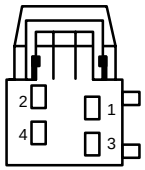

F04140

(1) 1097 (BN)
(2) 517 (BK/WH)
(3) 1094 (PK)

14A699

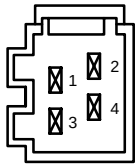

F04138

C329

14A699

Heated seat module, passenger side front

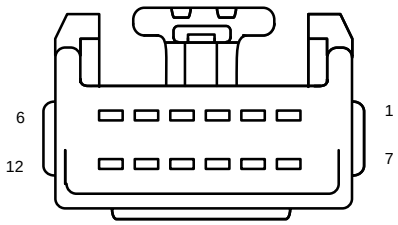

F12075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Temperature, return
4	1060 (BK/LB)	Temperature, signal
5	298 (VT/OG)	Voltage in Run (overload protected)
6	1064 (YE/LB)	heater, feed
7	1065 (WH/LB)	heater, return
8	581 (RD)	Climate controlled seat module – High
9	579 (BK/OG)	indicator, Low –
10	580 (BN)	indicator, High –
11	1256 (WH/YE)	Climate controlled seat module – Low
12	1048 (LB/WH)	Voltage supplied at all times (overload protected)

C331 (BK)

14A699

Lumbar adjust switch, right front

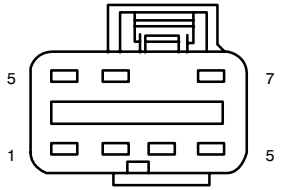

F07103

Pin	Circuit	Circuit function
1	1094 (PK)	Right Front seat lumbar compressor motor In
2	517 (BK/WH)	Voltage supplied at all times (overload protected)
3	1094 (PK)	Right Front seat lumbar compressor motor In
4	–	not used
5	–	not used
6	–	not used
7	1097 (BN)	Right Front seat lumbar compressor motor Out

C334

14A699

Seat cushion heater, right front

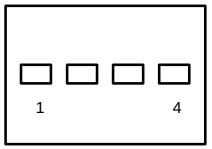

F04301

Pin	Circuit	Circuit function
1	1065 (WH/LB)	heater, return
2	1061 (BN/LB)	Temperature, return
3	1060 (BK/LB)	Temperature, signal
4	1064 (YE/LB)	heater, feed