* Motorola

C321

14B084

N275
Seat heater switch, passenger side

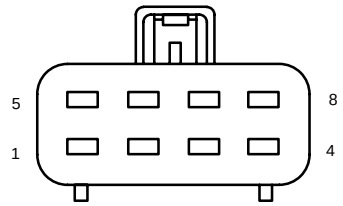

F08209

Pin	Circuit	Circuit function
1	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
	*1020 (DG/VT)	On/Off signal
2	1020 (DG/VT)	Climate controlled seat module
	*57 (BK)	Ground
3	–	not used
4	461 (OG)	Illumination, control
	*57 (BK)	Ground
5	–	not used
6	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
	*461 (OG)	Illumination, control
7	–	not used
8	–	not used

C323

14A504

N317
Safety belt buckle switch (10B924)



F02090

Pin	Circuit	Circuit function
1	85 (BN/LB)	Safety belt buckle switch (10B924), input
2	57 (BK)	Ground

C327

14B079

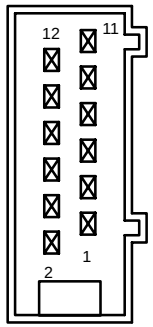

F12054

(1) 19 (LB/RD)
(2) –
(3) 1435 (DG/VT)
(4) –
(5) –
(6) –
(7) –
(8) –
(9) 1436 (VT/OG)
(10) –
(11) 875 (BKLB)
(12) –