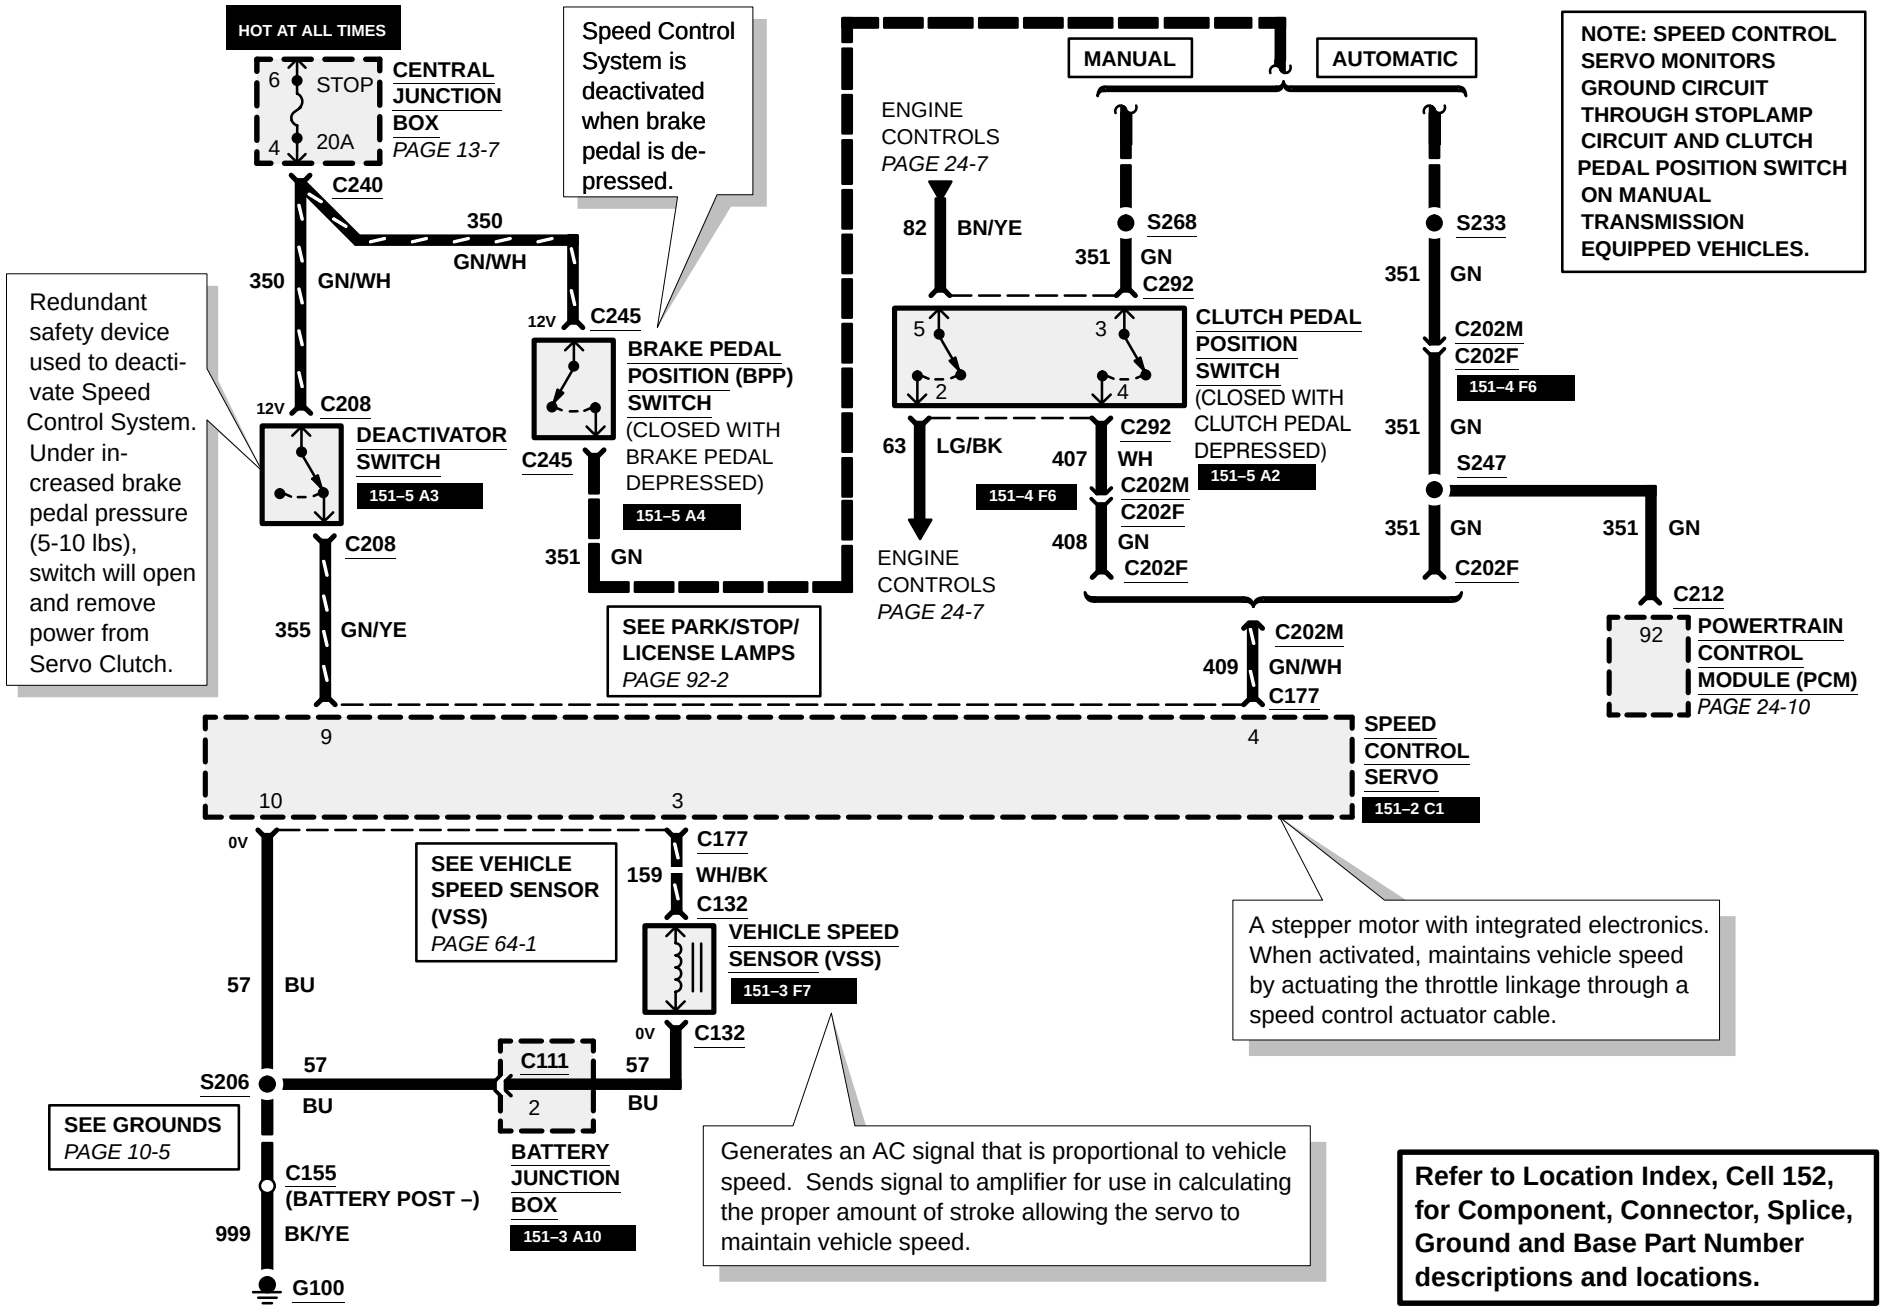
HOT AT ALL TIMES
6
STOP
4
20A
CENTRAL JUNCTION BOX
PAGE 13-7
C240
350
GN/WH
350
GN/WH
12V
C245
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–5 A4
C245
351
GN
Speed Control System is deactivated when brake pedal is de-pressed.
Redundant safety device used to deacti-vate Speed Control System. Under in-creased brake pedal pressure (5-10 lbs), switch will open and remove power from Servo Clutch.
12V
C208
DEACTIVATOR SWITCH
151–5 A3
C208
355
GN/YE
SEE PARK/STOP/ LICENSE LAMPS
PAGE 92-2
MANUAL
AUTOMATIC
ENGINE CONTROLS
PAGE 24-7
82
BN/YE
S268
351
GN
C292
5
3
2
4
CLUTCH PEDAL POSITION SWITCH
(CLOSED WITH CLUTCH PEDAL DEPRESSED)
151–5 A2
63
LG/BK
151–4 F6
C292
407
WH
C202M
C202F
408
GN
C202F
ENGINE CONTROLS
PAGE 24-7
S233
351
GN
C202M
C202F
151–4 F6
351
GN
S247
351
GN
C202F
351
GN
C212
92
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-10
C202M
409
GN/WH
C177
NOTE: SPEED CONTROL SERVO MONITORS GROUND CIRCUIT THROUGH STOPLAMP CIRCUIT AND CLUTCH PEDAL POSITION SWITCH ON MANUAL TRANSMISSION EQUIPPED VEHICLES.
9
4
SPEED CONTROL SERVO
151–2 C1
10
3
0V
C177
159
WH/BK
C132
VEHICLE SPEED SENSOR (VSS)
151–3 F7
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
57
BU
0V
C132
S206
57
BU
C111
2
57
BU
BATTERY JUNCTION BOX
151–3 A10
SEE GROUNDS
PAGE 10-5
C155
(BATTERY POST –)
999
BK/YE
G100
A stepper motor with integrated electronics. When activated, maintains vehicle speed by actuating the throttle linkage through a speed control actuator cable.
Generates an AC signal that is proportional to vehicle speed. Sends signal to amplifier for use in calculating the proper amount of stroke allowing the servo to maintain vehicle speed.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.