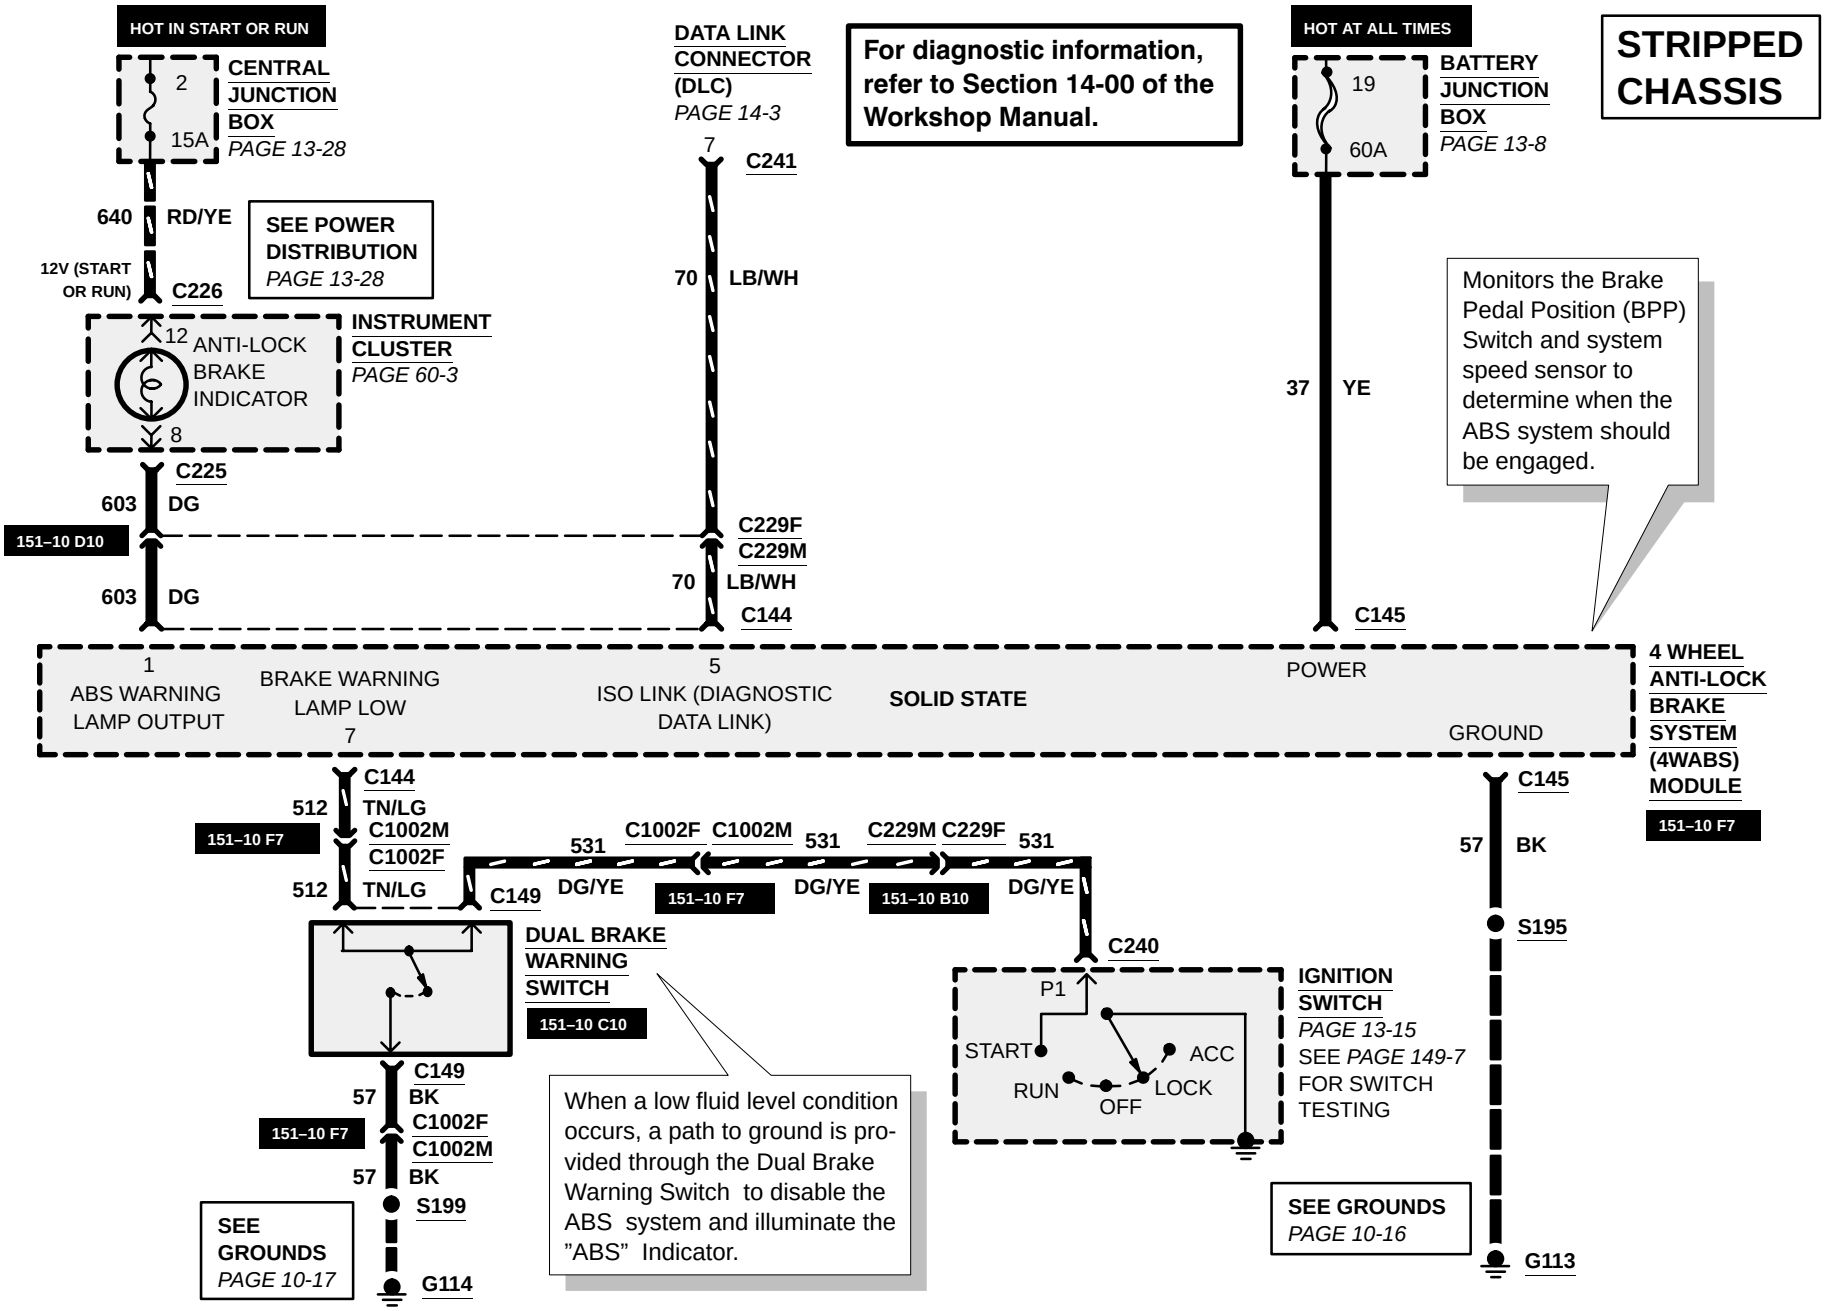
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-28
2
15A
640 RD/YE
12V (START OR RUN)
C226
SEE POWER DISTRIBUTION
PAGE 13-28
INSTRUMENT CLUSTER
PAGE 60-3
12
ANTI-LOCK BRAKE INDICATOR
8
C225
603 DG
151–10 D10
603 DG
DATA LINK CONNECTOR (DLC)
PAGE 14-3
7
C241
70 LB/WH
C229F
C229M
70 LB/WH
C144
For diagnostic information, refer to Section 14-00 of the Workshop Manual.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-8
19
60A
37 YE
C145
STRIPPED CHASSIS
Monitors the Brake Pedal Position (BPP) Switch and system speed sensor to determine when the ABS system should be engaged.
1
ABS WARNING LAMP OUTPUT
BRAKE WARNING LAMP LOW
7
5
ISO LINK (DIAGNOSTIC DATA LINK)
SOLID STATE
POWER
GROUND
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
151–10 F7
C144
512 TN/LG
151–10 F7
C1002M
C1002F
512 TN/LG
C149
531 DG/YE
C1002F C1002M
151–10 F7
531 DG/YE
C229M C229F
151–10 B10
531 DG/YE
C240
C145
57 BK
S195
DUAL BRAKE WARNING SWITCH
151–10 C10
When a low fluid level condition occurs, a path to ground is provided through the Dual Brake Warning Switch to disable the ABS system and illuminate the "ABS" Indicator.
P1
START
ACC
RUN
LOCK
OFF
IGNITION SWITCH
PAGE 13-15
SEE PAGE 149-7 FOR SWITCH TESTING
C149
57 BK
151–10 F7
C1002F
C1002M
57 BK
S199
G114
SEE GROUNDS
PAGE 10-17
SEE GROUNDS
PAGE 10-16
G113