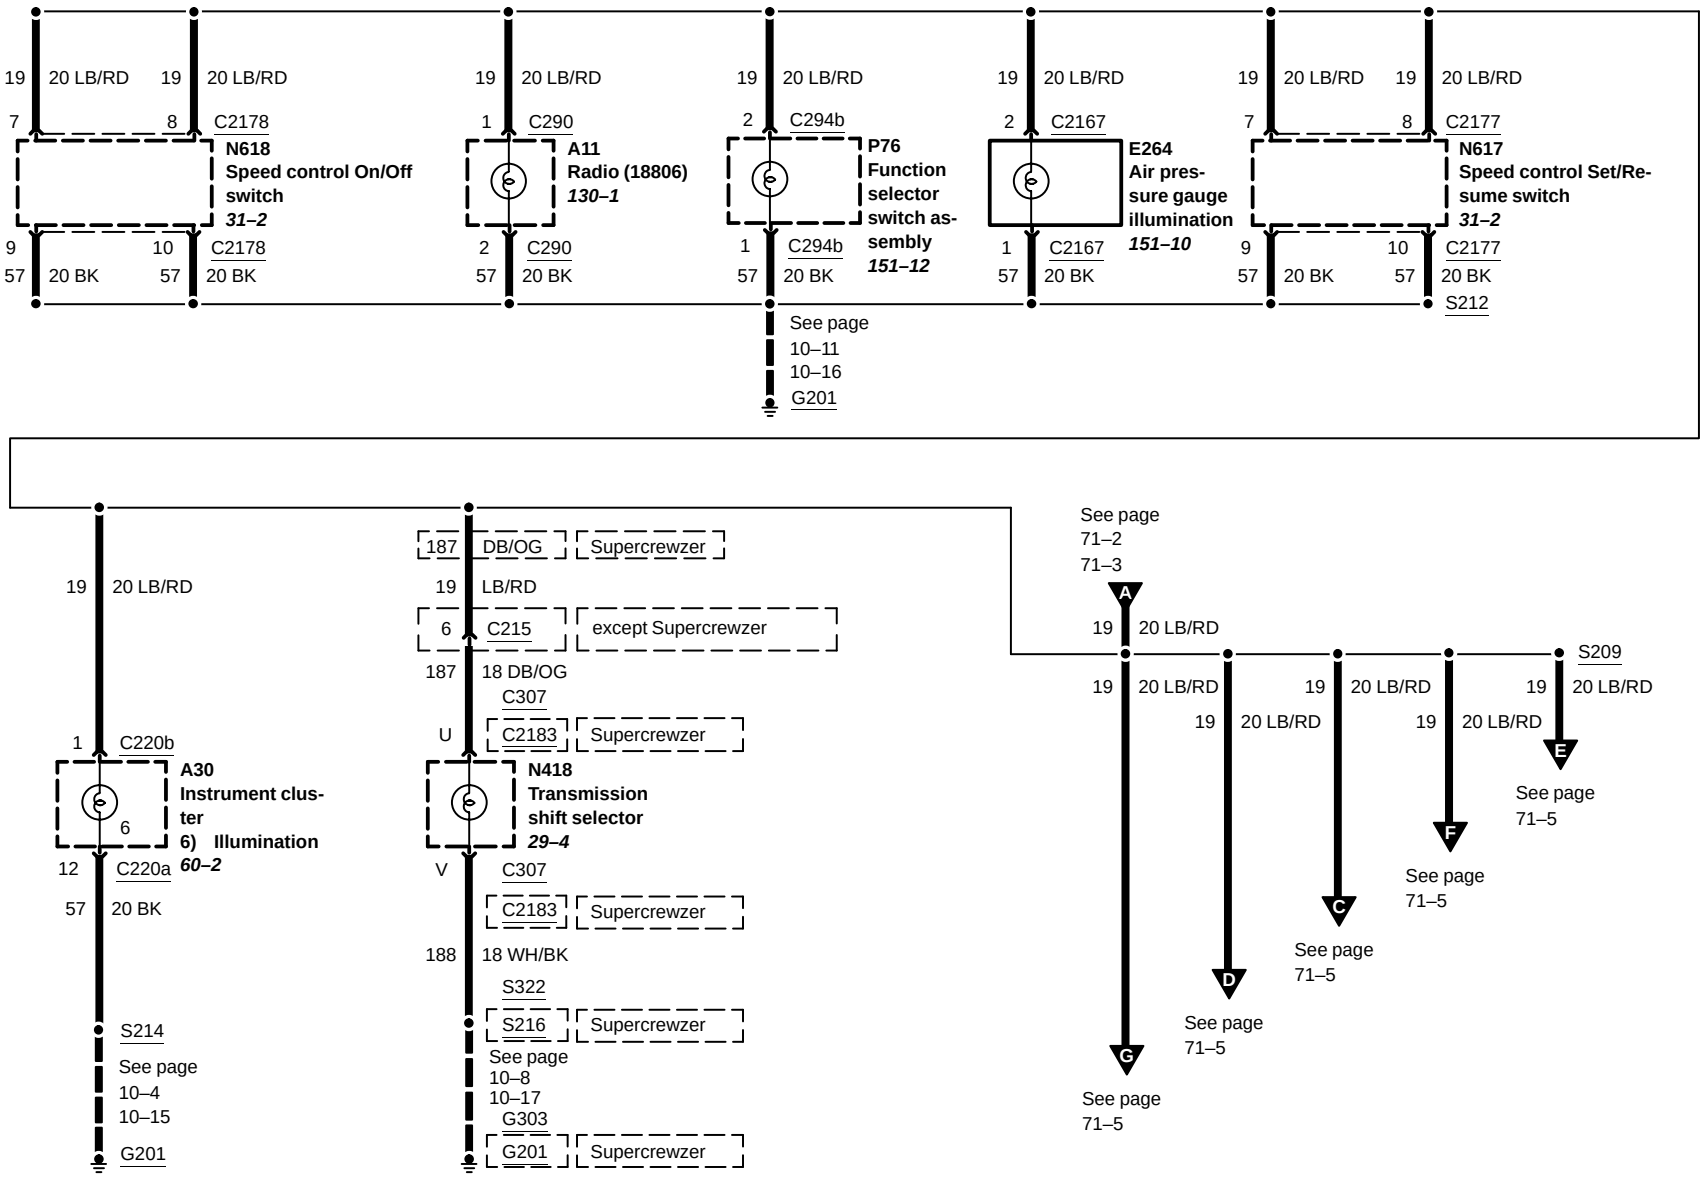
19 20 LB/RD
7
C2178
N618
Speed control On/Off switch
31–2
9 57 20 BK
10 57 20 BK C2178
A11
Radio (18806)
130–1
C290
P76
Function selector switch assembly
151–12
C294b
E264
Air pressure gauge illumination
151–10
C2167
N617
Speed control Set/Resume switch
31–2
C2177
S212
See page 10–11 10–16 G201
A30
Instrument cluster
6) Illumination
60–2
C220b
C220a
S214
See page 10–4 10–15 G201
187 DB/OG Supercrewzer
19 LB/RD
6 C215 except Supercrewzer
187 18 DB/OG
C307
U C2183 Supercrewzer
N418
Transmission shift selector
29–4
V C307
C2183 Supercrewzer
188 18 WH/BK
S322
S216 Supercrewzer
See page 10–8 10–17
G303
G201 Supercrewzer
See page 71–2 71–3
A
B
C
D
E
F
G
S209
See page 71–5