PIN	CIRCUIT	CIRCUIT FUNCTION
91	63 (LG/BK)	Signal Return
92	*351 (GN)	Brake Pedal Position (BPP) Switch
93	95 (OG/BK)	Heater #11 Front Oxygen Sensor (HTR #11)
94	–	NOT USED
95	97 (VT)	Heater #12 Rear Oxygen Sensor (HTR #12)
96	–	NOT USED
97	101 (WH/RD)	Power (Start or Run)
98	–	NOT USED
99	–	NOT USED
100	115 (GN/OG)	Injector #4
101	116 (VT/YE)	Injector #2
102	–	NOT USED
103	999 (BK/YE)	Ground
104	–	NOT USED

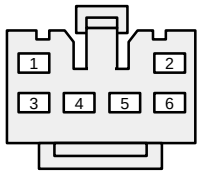

C315 (WHITE)
FUEL PUMP MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	118 (BU/BK)	Fuel Pump Driver Module
2	56 (BK/GN)	Ground
3	161 (YE/BN)	Fuel Gauge Signal
4	118 (BU/BK)	Fuel Pump Driver Module
5	119 (BU/WH)	Fuel Pump Driver Module
6	119 (BU/WH)	Fuel Pump Driver Module

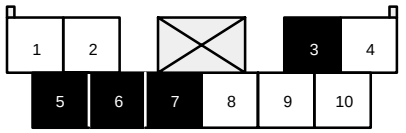

C407
FUEL PUMP DRIVER MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	119 (BU/WH)	Driver Module to Fuel Pump (Fuel Pump Power)
2	107 (BU)	Power (Inertia Fuel Shutoff)
3	–	NOT USED
4	104 (BK/RD)	Driver Module to PCM
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	118 (BU/BK)	Driver Module to Fuel Pump (Fuel Pump Ground)
9	53 (BK)	Ground
10	110 (WH/OG)	PCM to Driver Module (Fuel Pump Command Line)