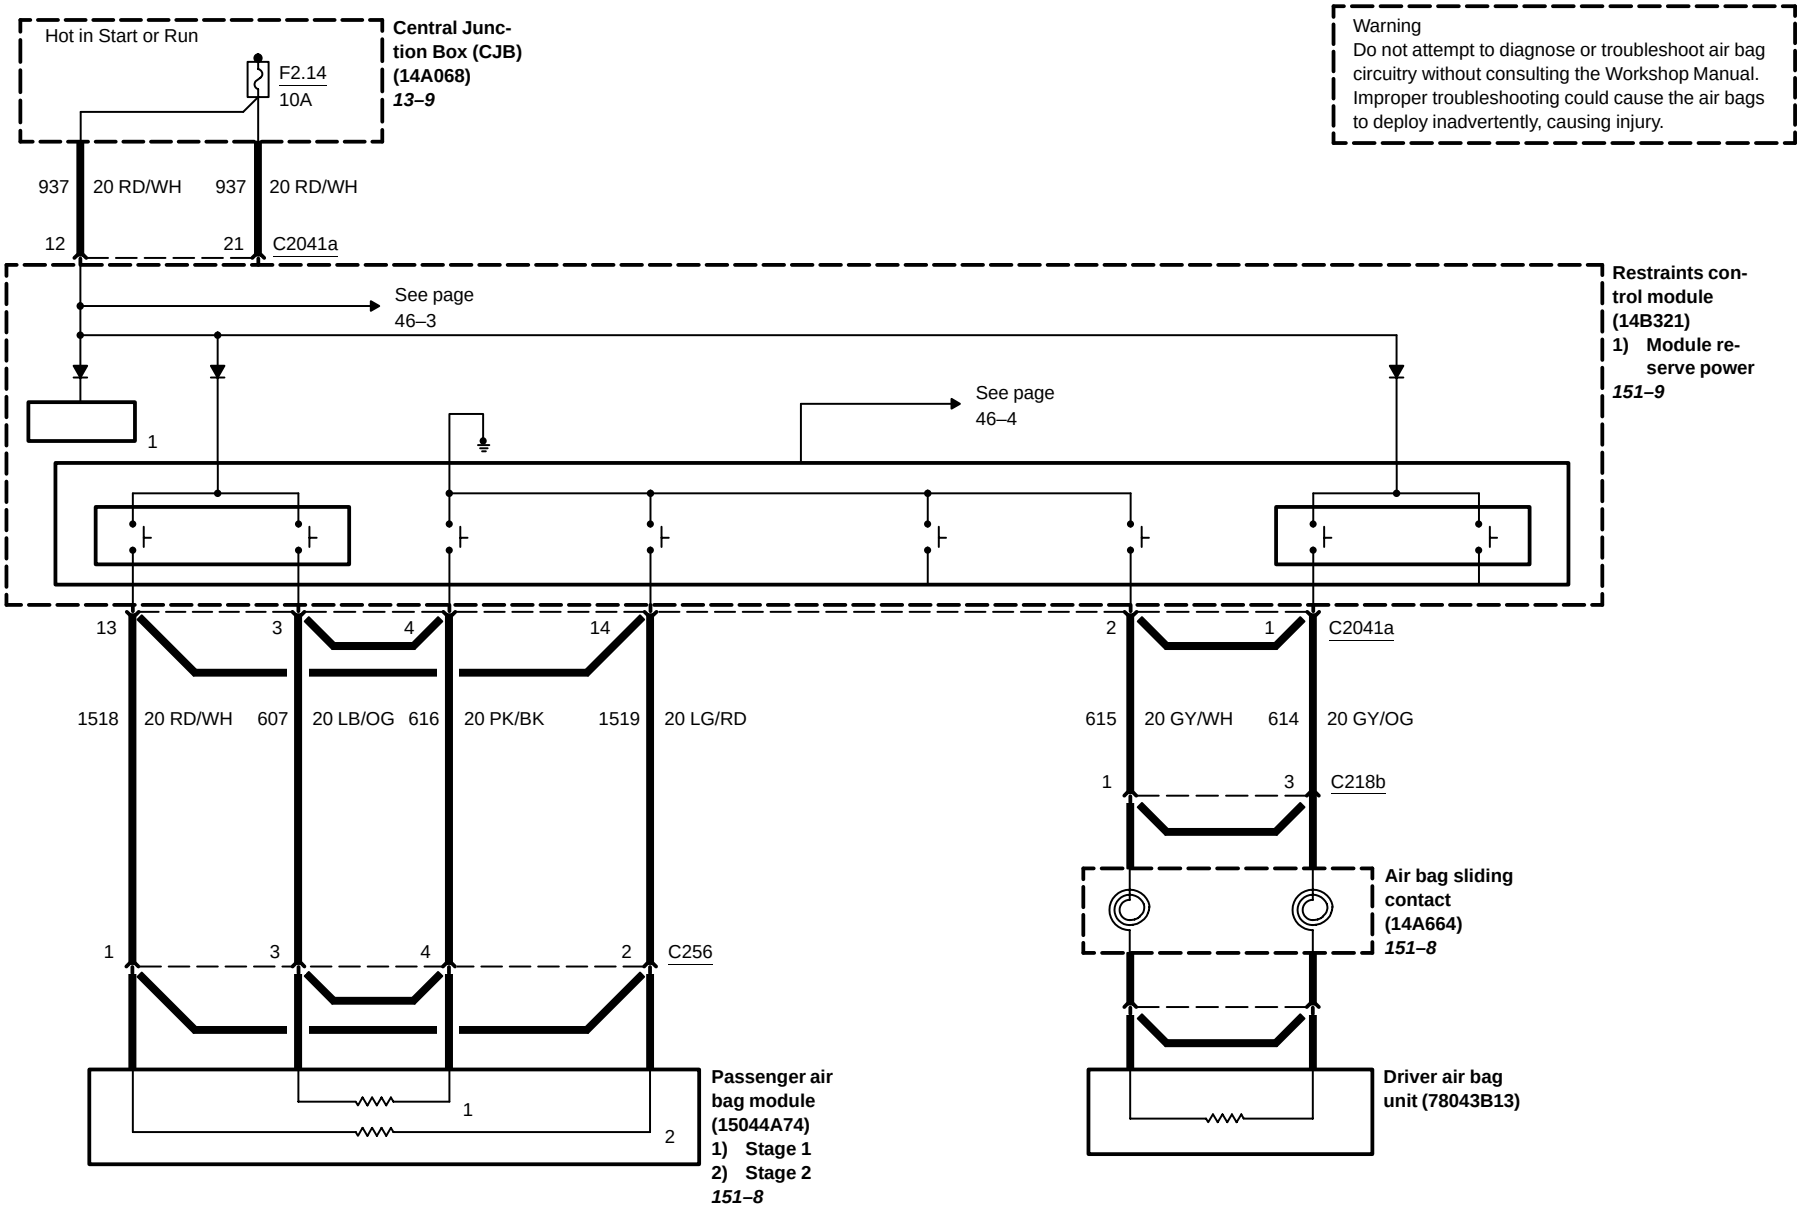
Hot in Start or Run
F2.14
10A
Central Junction Box (CJB) (14A068)
13–9
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
937 20 RD/WH 937 20 RD/WH
12 21 C2041a
See page 46–3
See page 46–4
Restraints control module (14B321)
1) Module reserve power
151–9
1
13 3 4 14
1518 20 RD/WH 607 20 LB/OG 616 20 PK/BK 1519 20 LG/RD
1 3 4 2 C256
2 1 C2041a
615 20 GY/WH 614 20 GY/OG
1 3 C218b
Air bag sliding contact (14A664)
151–8
Passenger air bag module (15044A74)
1) Stage 1
2) Stage 2
151–8
Driver air bag unit (78043B13)