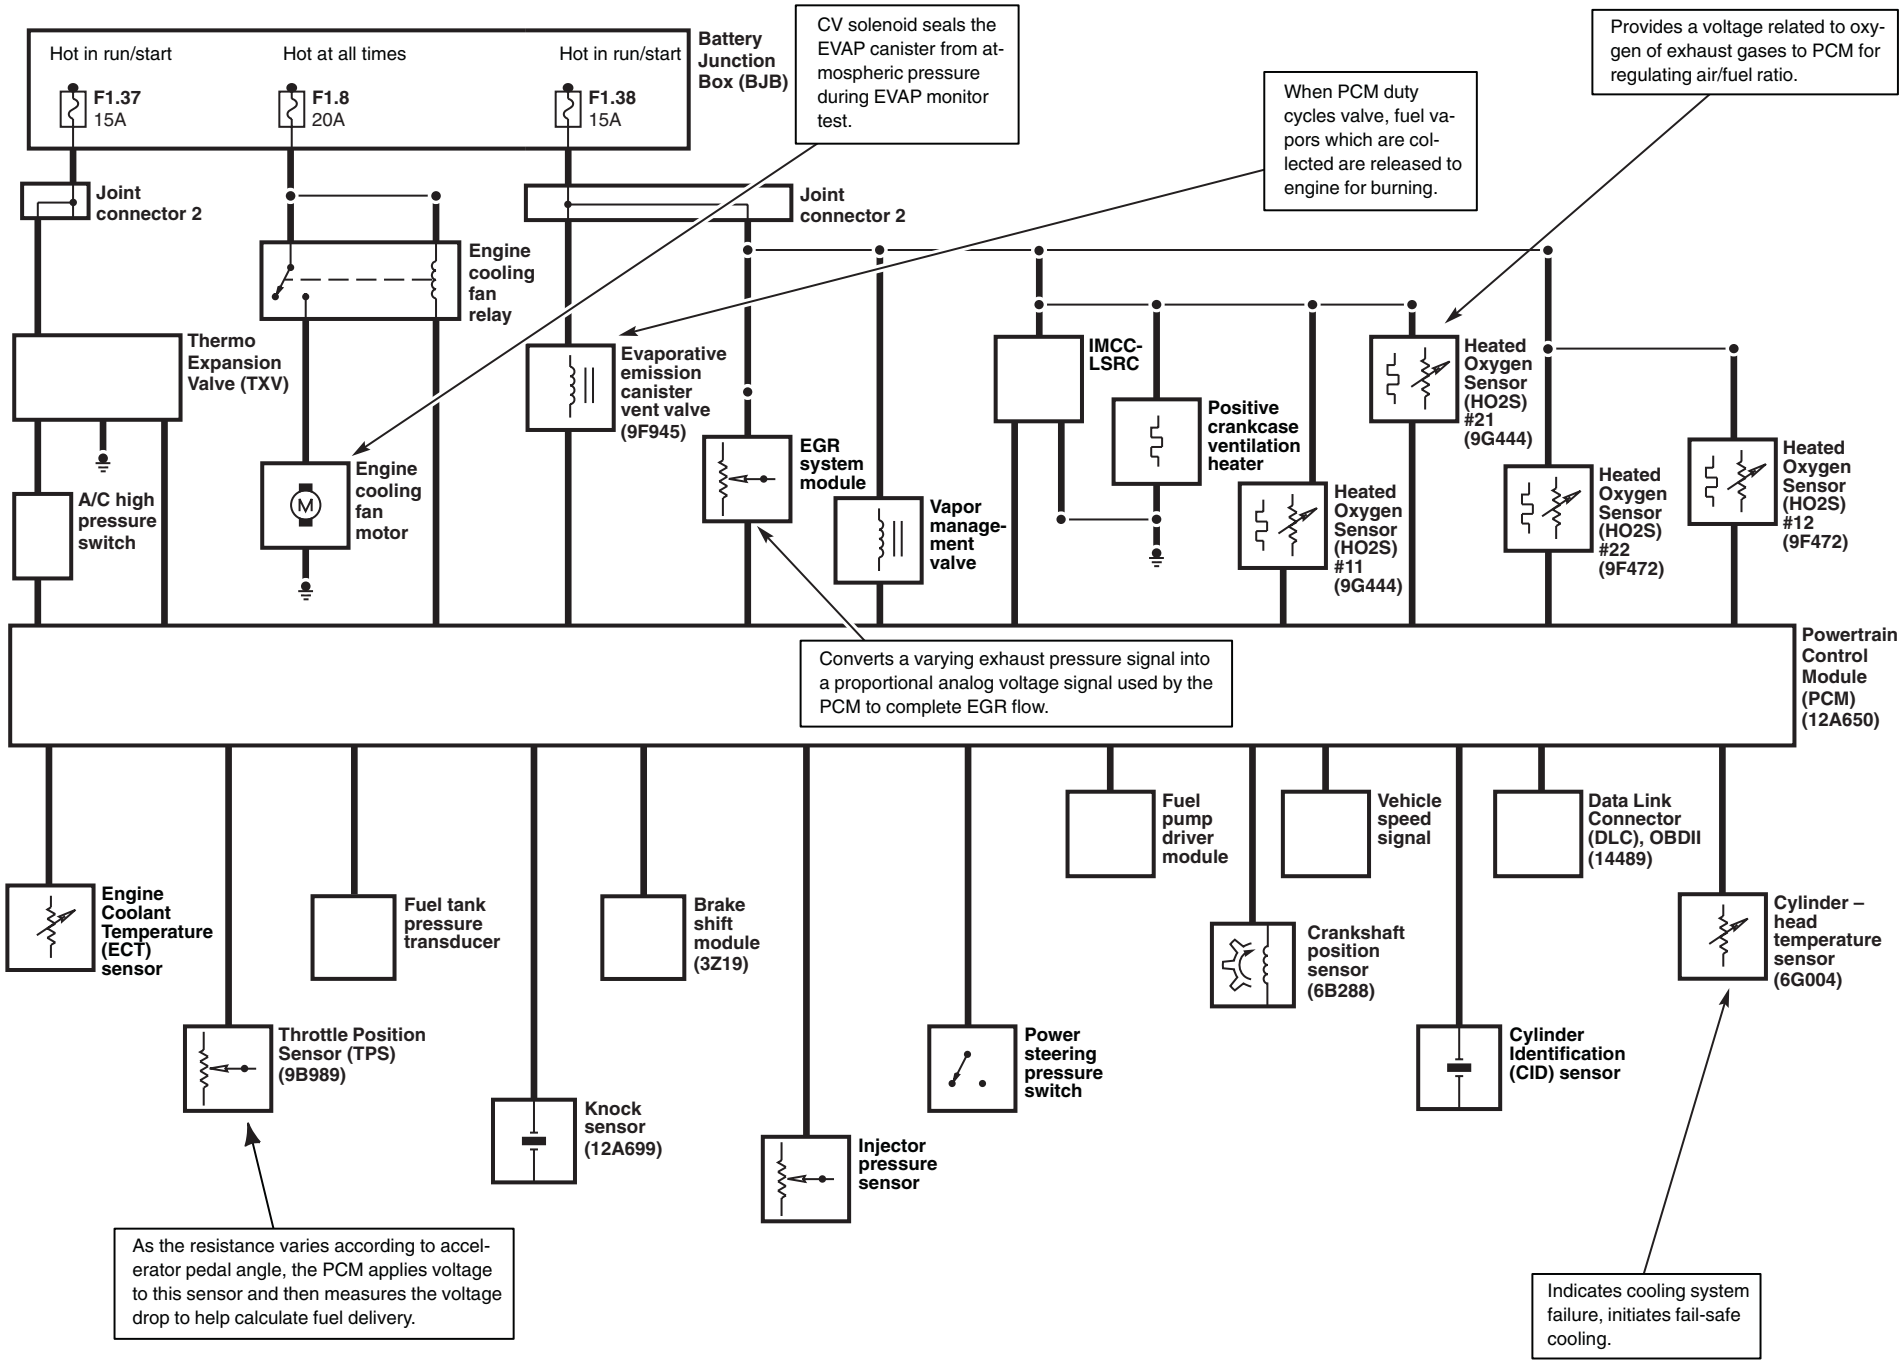
Hot in run/start
Hot at all times
Hot in run/start
Battery Junction Box (BJB)
F1.37 15A
F1.8 20A
F1.38 15A
CV solenoid seals the EVAP canister from atmospheric pressure during EVAP monitor test.
When PCM duty cycles valve, fuel vapors which are collected are released to engine for burning.
Provides a voltage related to oxygen of exhaust gases to PCM for regulating air/fuel ratio.
Joint connector 2
Joint connector 2
Engine cooling fan relay
Thermo Expansion Valve (TXV)
Evaporative emission canister vent valve (9F945)
IMCC-LSRC
Heated Oxygen Sensor (HO2S) #21 (9G444)
A/C high pressure switch
Engine cooling fan motor
EGR system module
Vapor management valve
Positive crankcase ventilation heater
Heated Oxygen Sensor (HO2S) #11 (9G444)
Heated Oxygen Sensor (HO2S) #22 (9F472)
Heated Oxygen Sensor (HO2S) #12 (9F472)
Converts a varying exhaust pressure signal into a proportional analog voltage signal used by the PCM to complete EGR flow.
Powertrain Control Module (PCM) (12A650)
Engine Coolant Temperature (ECT) sensor
Fuel tank pressure transducer
Brake shift module (3Z19)
Fuel pump driver module
Vehicle speed signal
Data Link Connector (DLC), OBDII (14489)
Crankshaft position sensor (6B288)
Cylinder – head temperature sensor (6G004)
Throttle Position Sensor (TPS) (9B989)
Knock sensor (12A699)
Power steering pressure switch
Cylinder Identification (CID) sensor
Injector pressure sensor
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.
Indicates cooling system failure, initiates fail-safe cooling.