EXCEPT DIESEL

* 5.4L NGV
** 6.8L
*** STRIPPED CHASSIS

REVISED

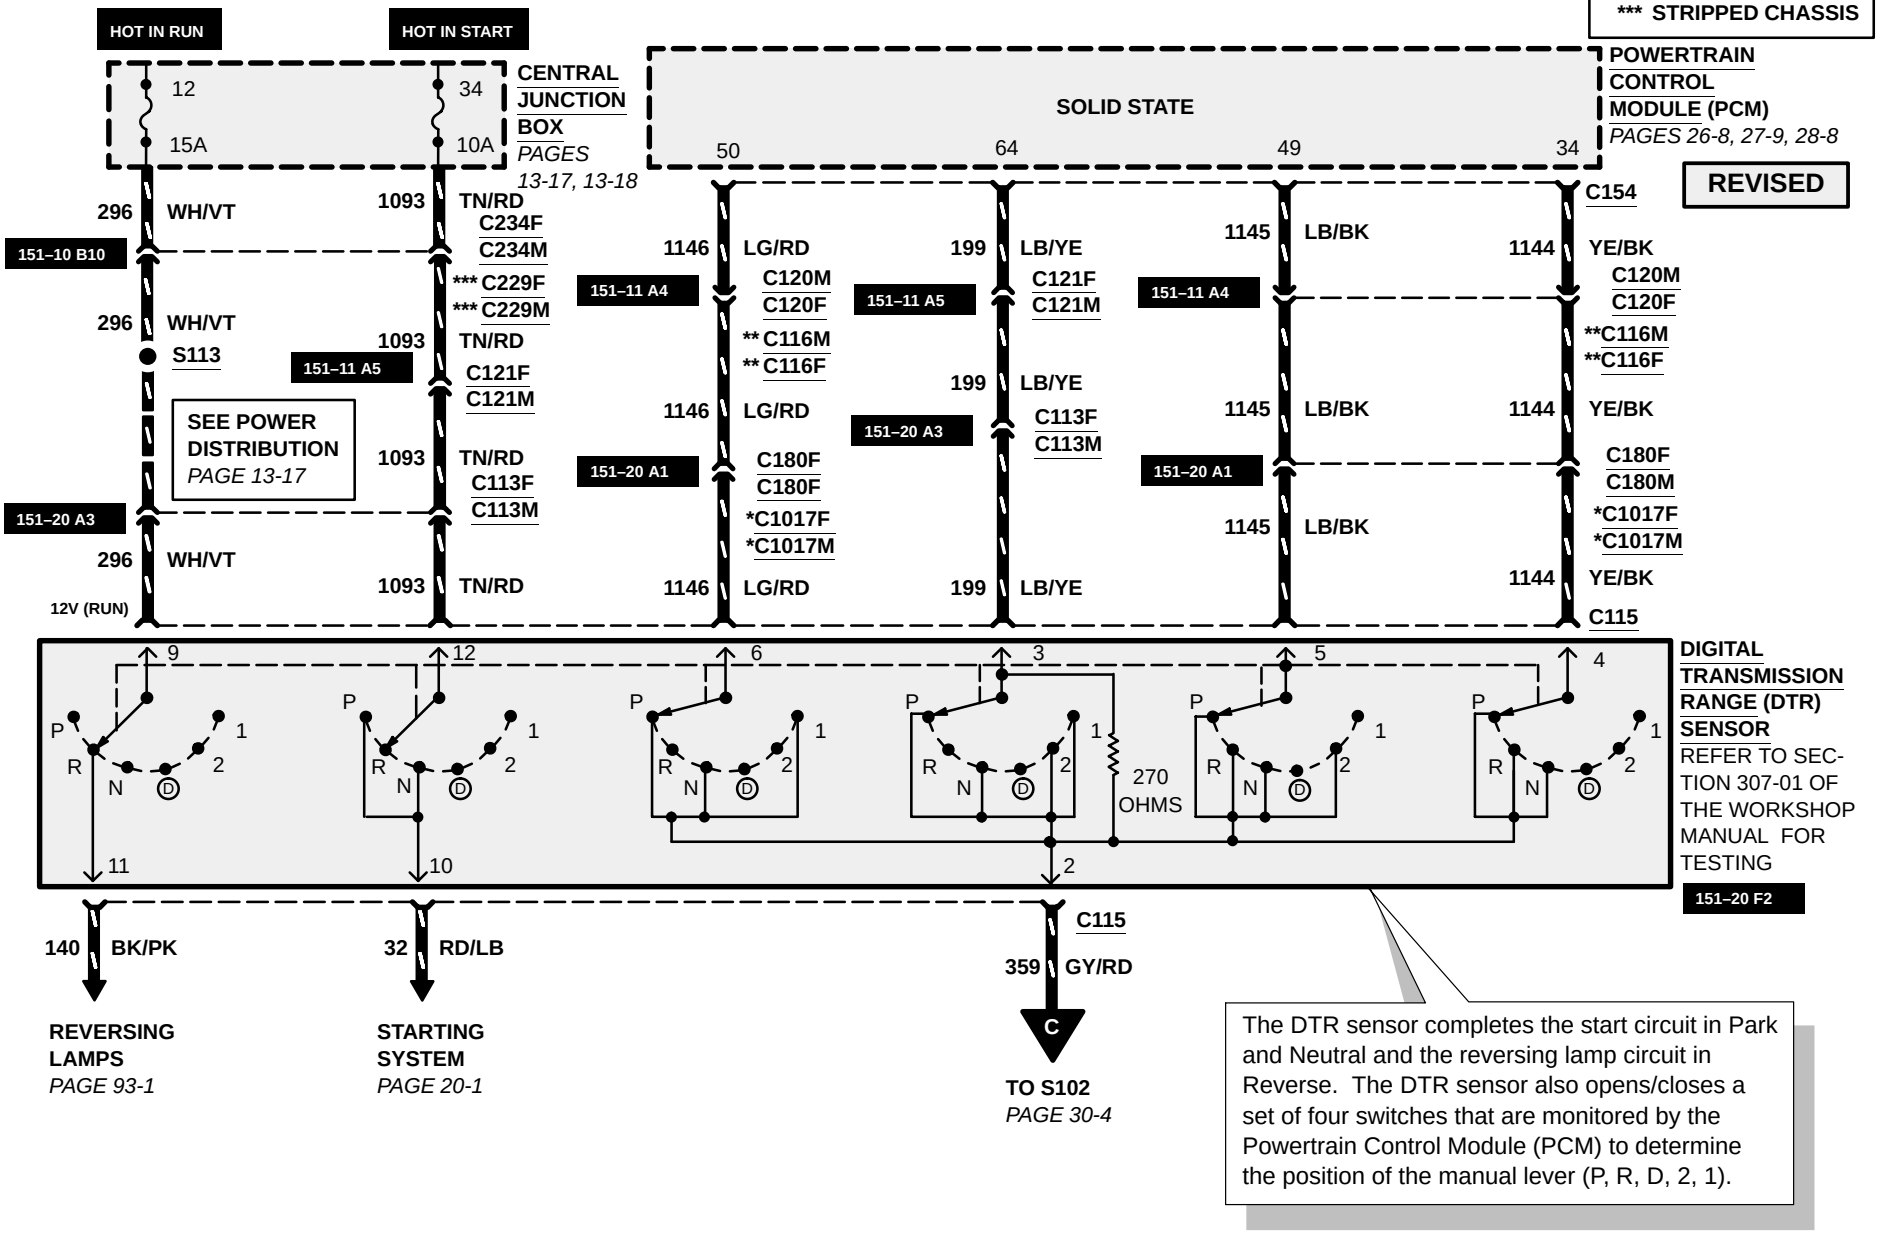

The DTR sensor completes the start circuit in Park and Neutral and the reversing lamp circuit in Reverse. The DTR sensor also opens/closes a set of four switches that are monitored by the Powertrain Control Module (PCM) to determine the position of the manual lever (P, R, D, 2, 1).