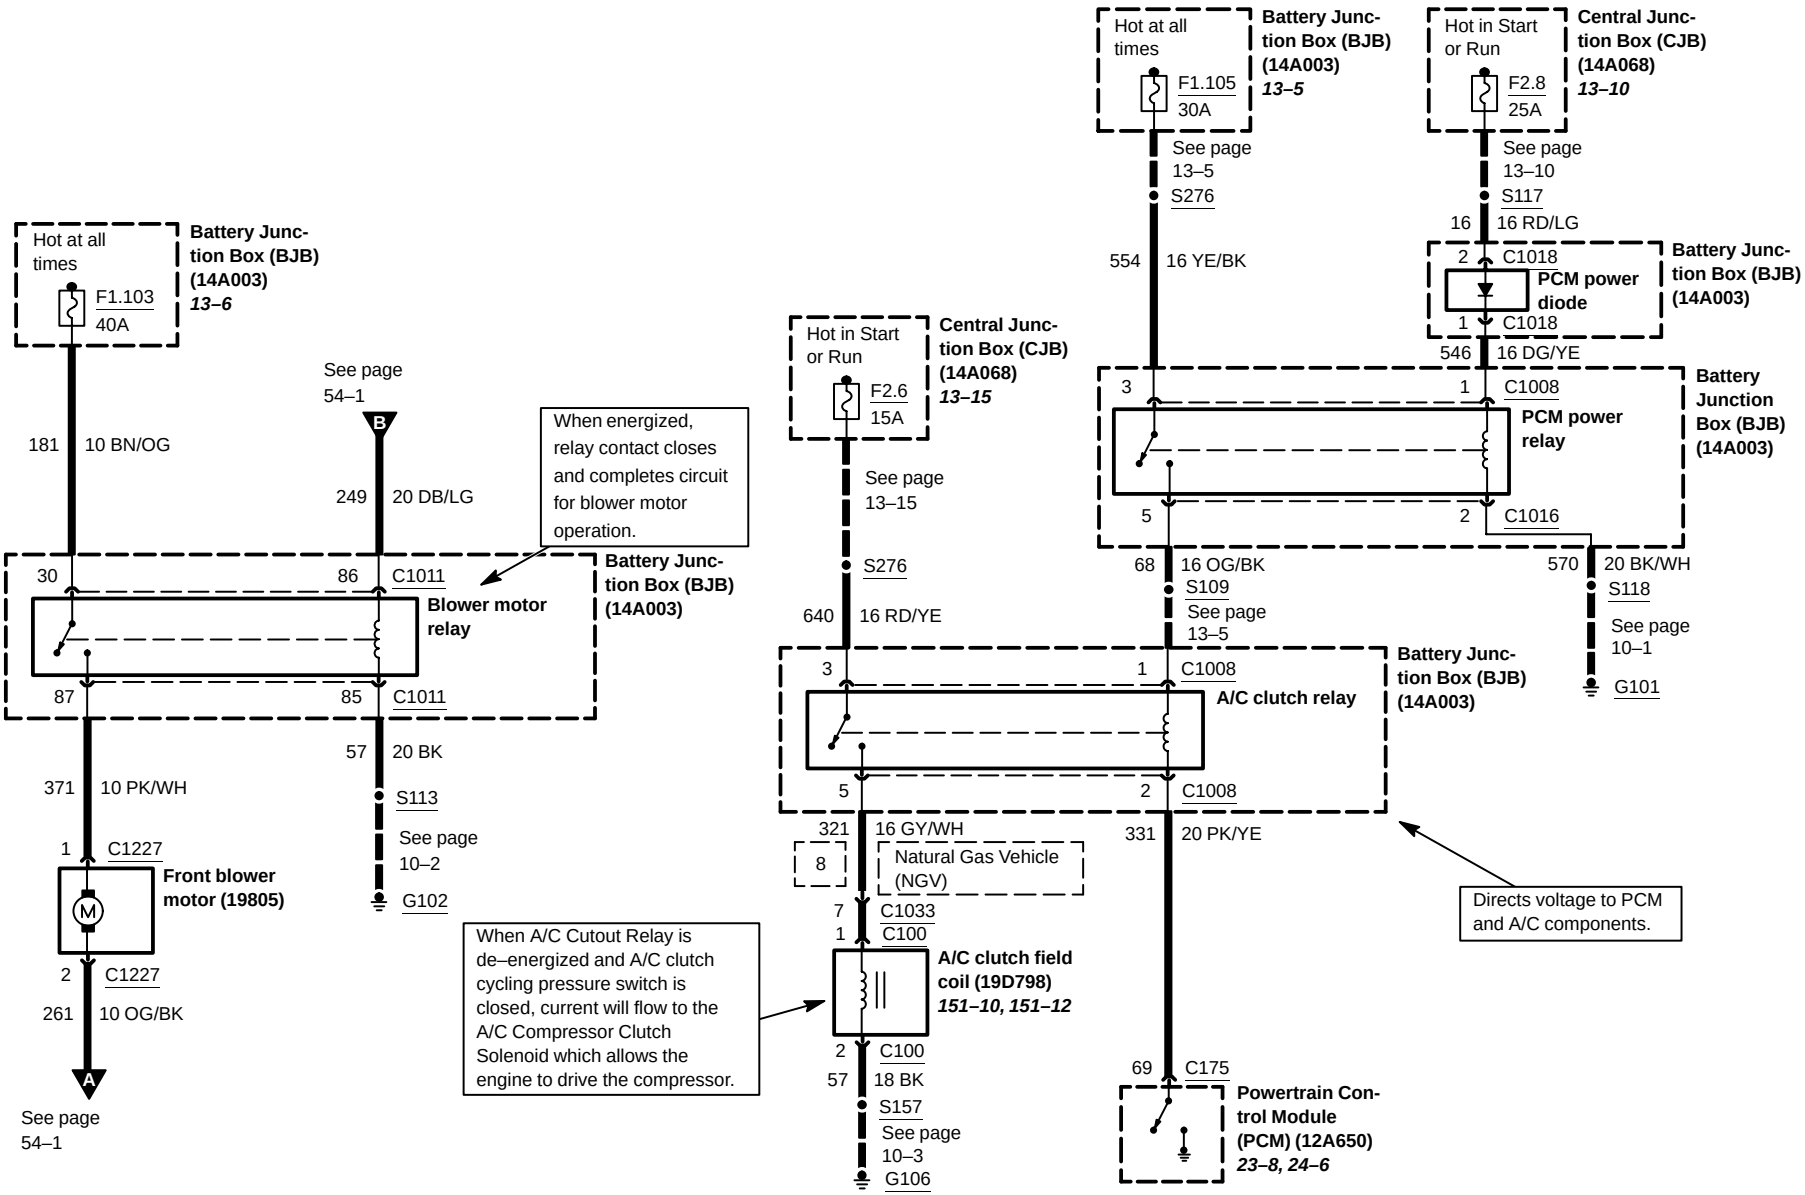
Hot at all times
F1.103
40A
Battery Junction Box (BJB) (14A003) 13–6
See page 54–1
181 10 BN/OG
249 20 DB/LG
When energized, relay contact closes and completes circuit for blower motor operation.
30
86 C1011
Blower motor relay
Battery Junction Box (BJB) (14A003)
87
85 C1011
57 20 BK
371 10 PK/WH
S113
See page 10–2
1 C1227
Front blower motor (19805)
G102
2 C1227
261 10 OG/BK
A
See page 54–1
When A/C Cutout Relay is de–energized and A/C clutch cycling pressure switch is closed, current will flow to the A/C Compressor Clutch Solenoid which allows the engine to drive the compressor.
Hot in Start or Run
F2.6
15A
Central Junction Box (CJB) (14A068) 13–15
See page 13–15
S276
640 16 RD/YE
3
1 C1008
A/C clutch relay
5
2 C1008
321 16 GY/WH
8
Natural Gas Vehicle (NGV)
7 C1033
1 C100
A/C clutch field coil (19D798) 151–10, 151–12
2 C100
57 18 BK
S157
See page 10–3
G106
Hot at all times
F1.105
30A
Battery Junction Box (BJB) (14A003) 13–5
See page 13–5
S276
554 16 YE/BK
Hot in Start or Run
F2.8
25A
Central Junction Box (CJB) (14A068) 13–10
See page 13–10
S117
16 16 RD/LG
2 C1018
PCM power diode
1 C1018
Battery Junction Box (BJB) (14A003)
546 16 DG/YE
3
1 C1008
PCM power relay
Battery Junction Box (BJB) (14A003)
5
2 C1016
68 16 OG/BK
S109
See page 13–5
570 20 BK/WH
S118
See page 10–1
G101
331 20 PK/YE
Directs voltage to PCM and A/C components.
69 C175
Powertrain Control Module (PCM) (12A650) 23–8, 24–6