C3070c

14A005

A212
Rear Electronic
Module (REM)

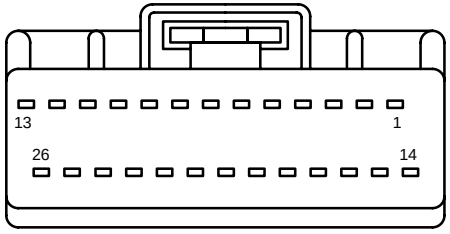

F26018

Pin	Circuit	Circuit function
1	1380 (TN/YE)	Auxiliary Air Conditioner/Heater, Mode actuator, Close
2	1375 (PK/YE)	Rear Electronic Module (REM), auxiliary blend door, Open
3	1376 (BK/LB)	Rear Electronic Module (REM), auxiliary blend door, Close
4	1387 (VT)	Power sliding door unit, LH side, Door lock actuator, Lock
5	–	not used
6	–	not used
7	1388 (GY)	Power sliding door unit, LH side, Door lock actuator, Unlock
8	–	not used
9	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
10	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
11	–	not used
12	–	not used
13	1454 (TN/RD)	Fused battery feed, SSP 3 relay, to, Rear Electronic Module (REM)
14	374 (DB/WH)	Trailer tow connector (15A416), output
15	378 (BN/YE)	Trailer tow connector (15A416), output
16	1432 (WH/VT)	Sliding door ajar switch, left, signal
17	1381 (WH/LB)	Rear Electronic Module (REM), auxiliary mode door, Power
18	1377 (TN/LG)	Rear Electronic Module (REM), auxiliary blend door, Power
19	–	not used
20	121 (YE/BK)	Key pad common
21	79 (LG/RD)	Key pad common
22	–	not used
23	1357 (LB/YE)	Rear Electronic Module (REM), to, Fuel sender, Level, return
24	–	not used
25	1205 (BK)	Ground
26	1205 (BK)	Ground