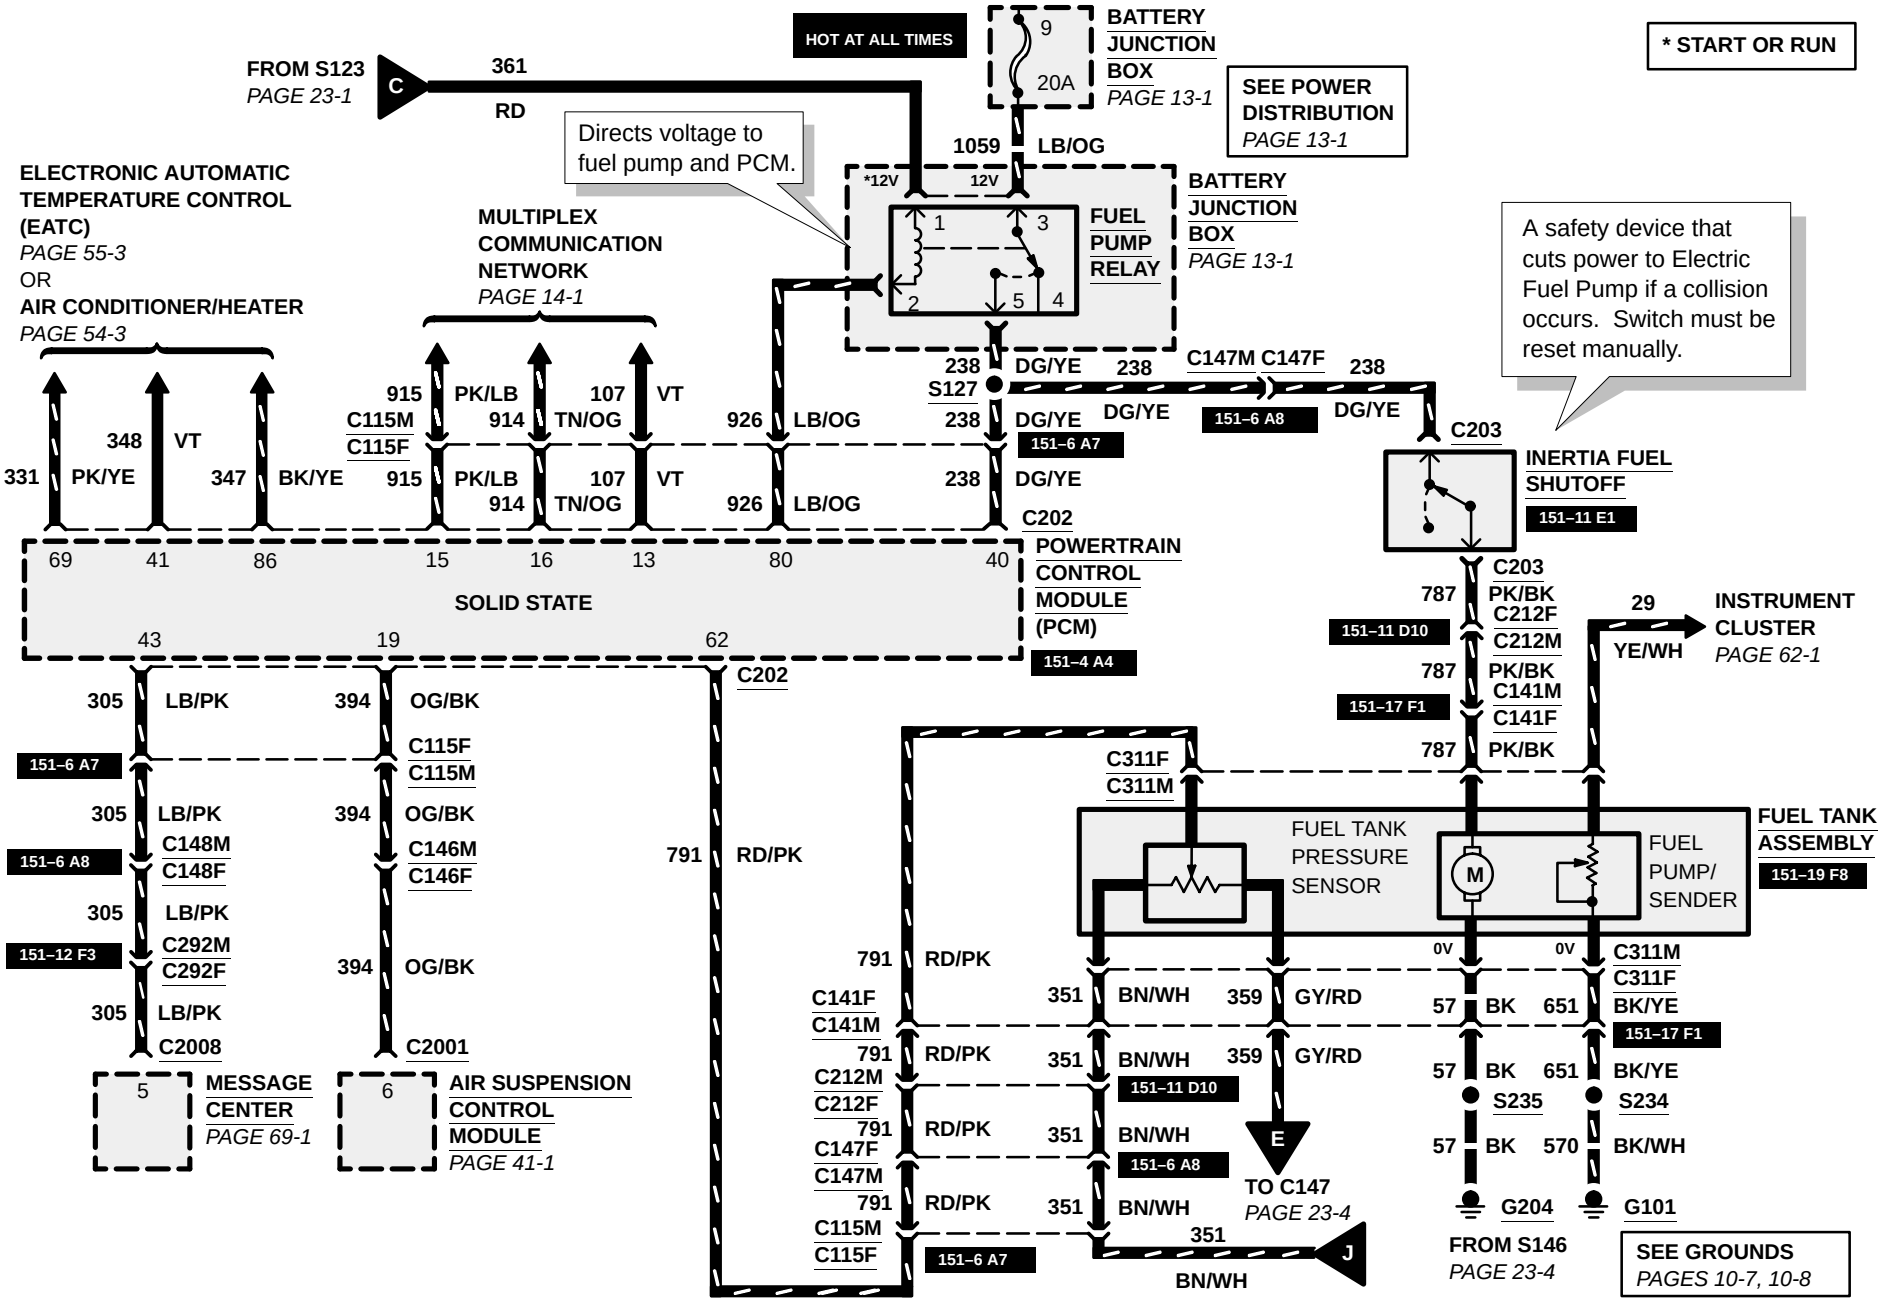
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
9
20A
* START OR RUN
SEE POWER DISTRIBUTION
PAGE 13-1
FROM S123
PAGE 23-1
C
361
RD
1059
LB/OG
Directs voltage to fuel pump and PCM.
*12V
12V
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGE 13-1
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-3
OR
AIR CONDITIONER/HEATER
PAGE 54-3
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
238
DG/YE
S127
C147M C147F
151–6 A8
C203
INERTIA FUEL SHUTOFF
151–11 E1
151–6 A7
915
PK/LB
914
TN/OG
107
VT
926
LB/OG
C115M
C115F
348
VT
331
PK/YE
347
BK/YE
C202
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
69
41
86
15
16
13
80
40
43
19
62
151–4 A4
787
PK/BK
C212F
C212M
151–11 D10
C141M
C141F
151–17 F1
29
YE/WH
INSTRUMENT CLUSTER
PAGE 62-1
305
LB/PK
394
OG/BK
C148M
C148F
151–6 A8
C146M
C146F
151–12 F3
C292M
C292F
C2008
C2001
5
MESSAGE CENTER
PAGE 69-1
6
AIR SUSPENSION CONTROL MODULE
PAGE 41-1
791
RD/PK
C311F
C311M
FUEL TANK PRESSURE SENSOR
FUEL PUMP/ SENDER
FUEL TANK ASSEMBLY
151–19 F8
0V
351
BN/WH
359
GY/RD
57
BK
651
BK/YE
151–17 F1
C141F
C141M
C212M
C212F
C147F
C147M
C115M
C115F
151–11 D10
151–6 A8
151–6 A7
S235
S234
570
BK/WH
E
TO C147
PAGE 23-4
J
G204
G101
FROM S146
PAGE 23-4
SEE GROUNDS
PAGES 10-7, 10-8