C167 (BK)

12A522

Transmission
Range (TR) sensor

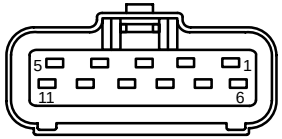

F11038

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	1167 (WH/BK)	Transmission Range (TR) sensor, signal, CC Drive sense
3	140 (BK/PK)	Ground supplied in reverse
4	1093 (TN/RD)	Power, Hot in Start with Park or Neutral
5	89 (OG)	signal, return
6	1169 (WH/LB)	Transmission Range (TR) sensor, signal – EE Low sense
7	1168 (YE/BK)	Transmission Range (TR) sensor, signal – DD Second sense
8	1166 (YE/RD)	Transmission Range (TR) sensor, signal – BB Neutral sense
9	306 (TN/LB)	Voltage supplied in Start (overload protected)
10	199 (LB/YE)	Transmission Range (TR) sensor, to, Powertrain Control Module (PCM) (12A650)
11	1165 (WH/RD)	Brake shift interlock relay, control

C169 (BN)

12A522

Reversing lamps
switch

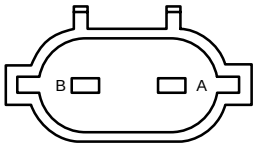

F02297

Pin	Circuit	Circuit function
A	140 (BK/PK)	Ground supplied in reverse
B	57 (BK)	Ground

C171 (GN–DURATEC) (GY–ZETEC)

12A522

Heated Oxygen
Sensor (HO2S) #11
(9F472)

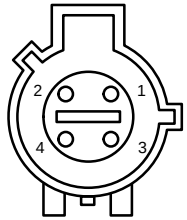

F04124

Pin	Circuit	Circuit function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
3	89 (OG)	signal, return
4	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input

C172 (GY)

12A522

Heated Oxygen
Sensor (HO2S) #21
(9F472)

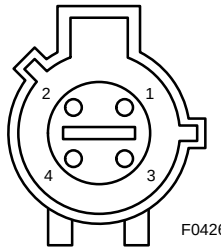

F04265

Pin	Circuit	Circuit function
1	34 (LB/OG)	Voltage supplied in Start and Run (overload protected)
2	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
3	89 (OG)	signal, return
4	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input

C174 (GY)

12A522/9H589

Ignition transformer
capacitor 1 (18801)

F01201

Pin	Circuit	Circuit function
1	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)
	296 (WH/VT)	