## C1007

### 14A103

K26
Fog lamp relay

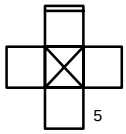


F04129

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | LG05 (GN/OG) | Fog lamp relay, control |
| 2 | LG04 (PK/BU) | Low beam lamp, left front |
| 3 | LG01 (OG) | Voltage supplied at all times (overload protected) |
| 4 | – | not used |
| 5 | LG02 (OG/BK) | Fog lamp relay, switched power |

## C2003a (YE)

### 14B023

A29
Air bag diagnostic monitor

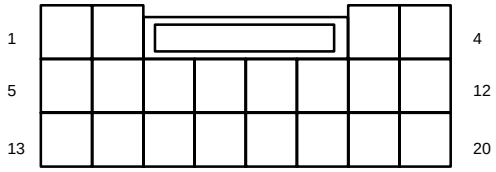


F20023

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | PSE1 (BK) | Shorting bar connector |
| 2 | PS28 (YE) | Shorting bar connector |
| 3 | – | not used |
| 4 | – | not used |
| 5 | PS03 (BU) | Driver air bag |
| 6 | PS04 (WH) | Driver air bag |
| 7 | – | not used |
| 8 | – | not used |
| 9 | – | not used |
| 10 | – | not used |

| Pin | Circuit | Circuit Function |
|---|---|---|
| 11 | PS06 (WH/RD) | Passenger air bag |
| 12 | PS05 (BU/RD) | Passenger air bag |
| 13 | PS21 (YE/BK) | Air bag diagnostic monitor |
| 14 | – | not used |
| 15 | PS20 (YE/RD) | Air bag diagnostic monitor |
| 16 | PS15 (OG) | Air bag indicator, control |
| 17 | – | not used |
| 18 | PS01 (RD/BU) | Voltage in Run or Accessory (overload protected) |
| 19 | – | not used |
| 20 | PSE2 (BK) | Ground |