62-3 INSTRUMENT CLUSTER

2002 EXPEDITION/NAVIGATOR

*** FOR DIAGNOSTIC INFORMATION REFER TO THE POWERTRAIN CONTROL/EMISSIONS DIAGNOSIS MANUAL.**
**** EXPEDITION**

Indicator will light with the Ignition Switch in the ON position prior to cranking, and go out when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.

The 4X4 HIGH and LOW Range Indicators are activated by the 4X4 Mode Switch through signals from the GEM. When the switch is activated in either the HIGH or LOW range, a ground is given to the appropriate indicator.

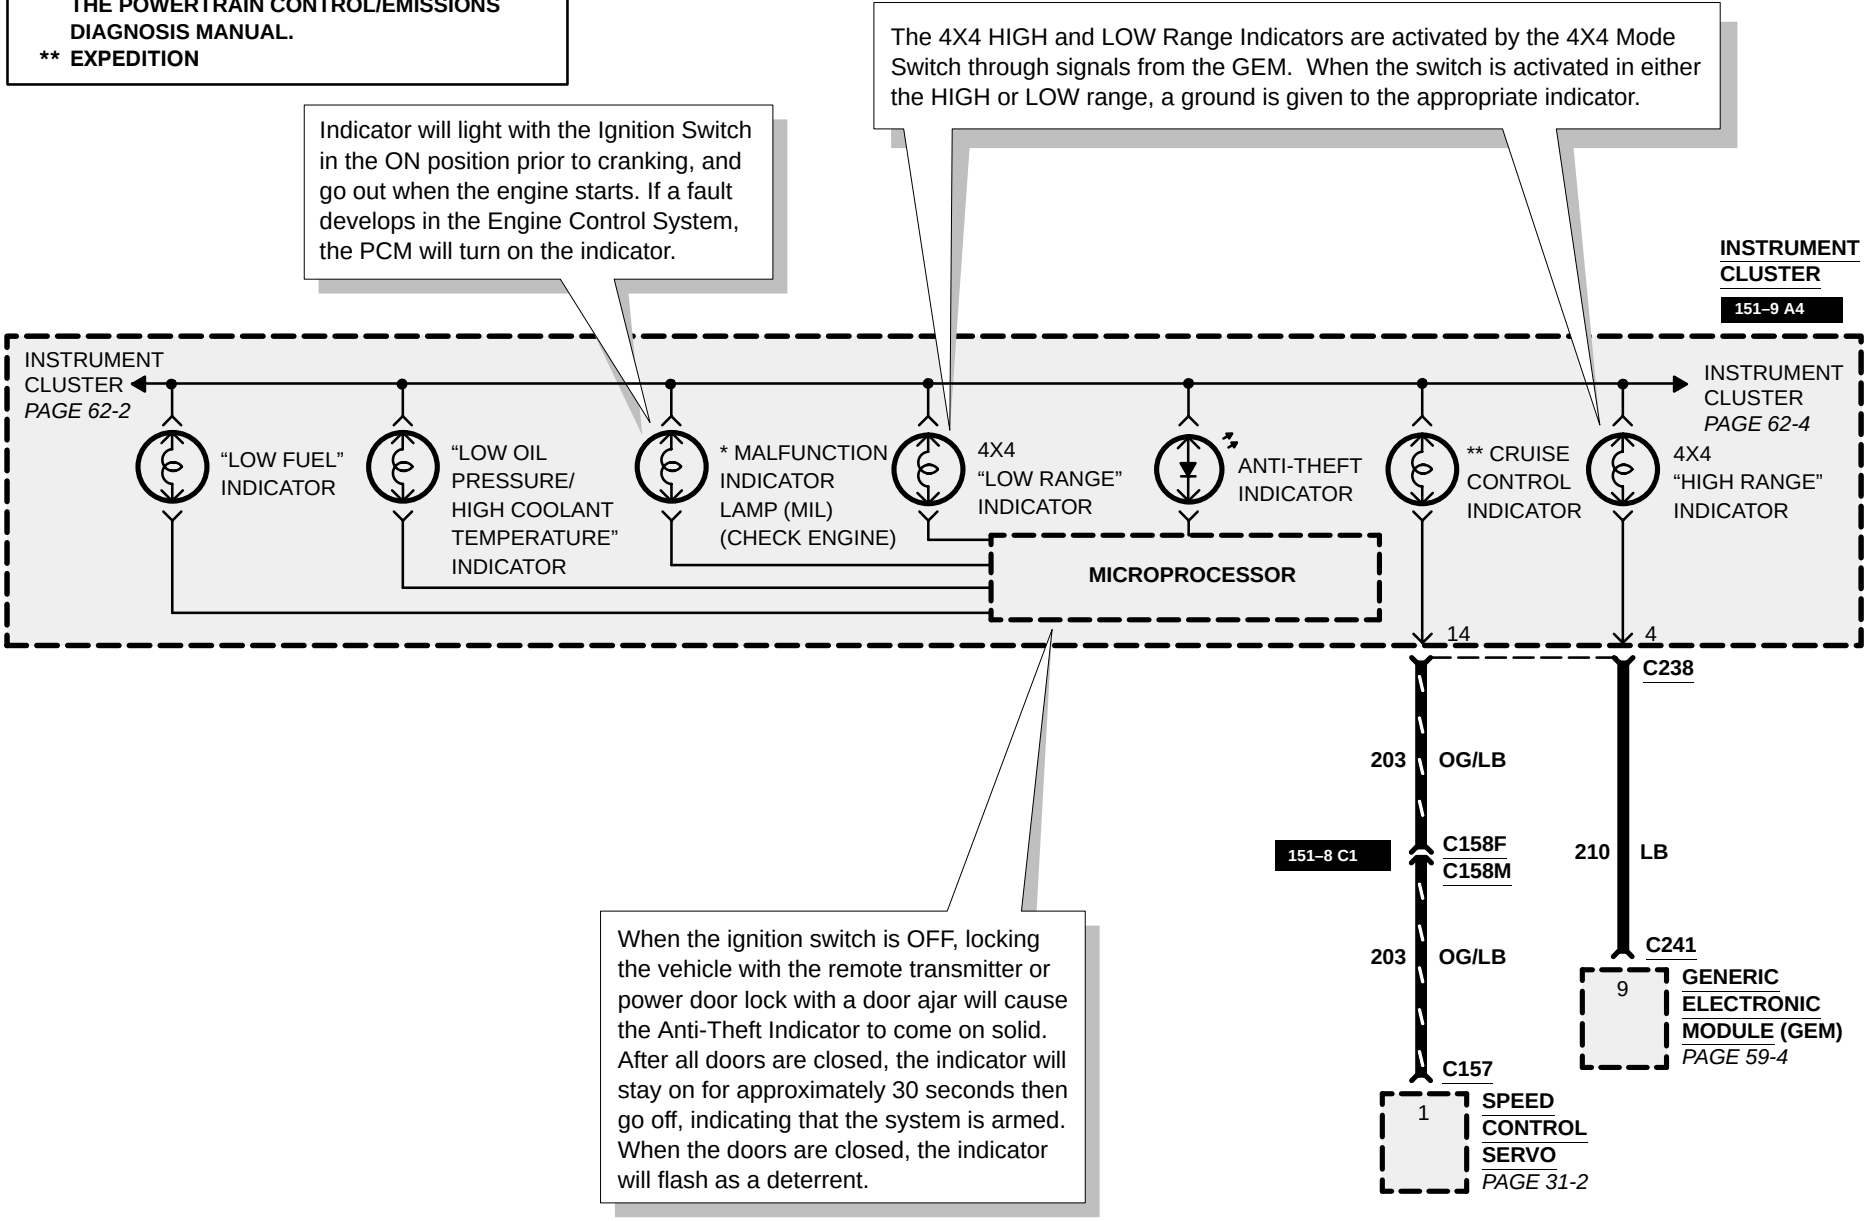

When the ignition switch is OFF, locking the vehicle with the remote transmitter or power door lock with a door ajar will cause the Anti-Theft Indicator to come on solid. After all doors are closed, the indicator will stay on for approximately 30 seconds then go off, indicating that the system is armed. When the doors are closed, the indicator will flash as a deterrent.