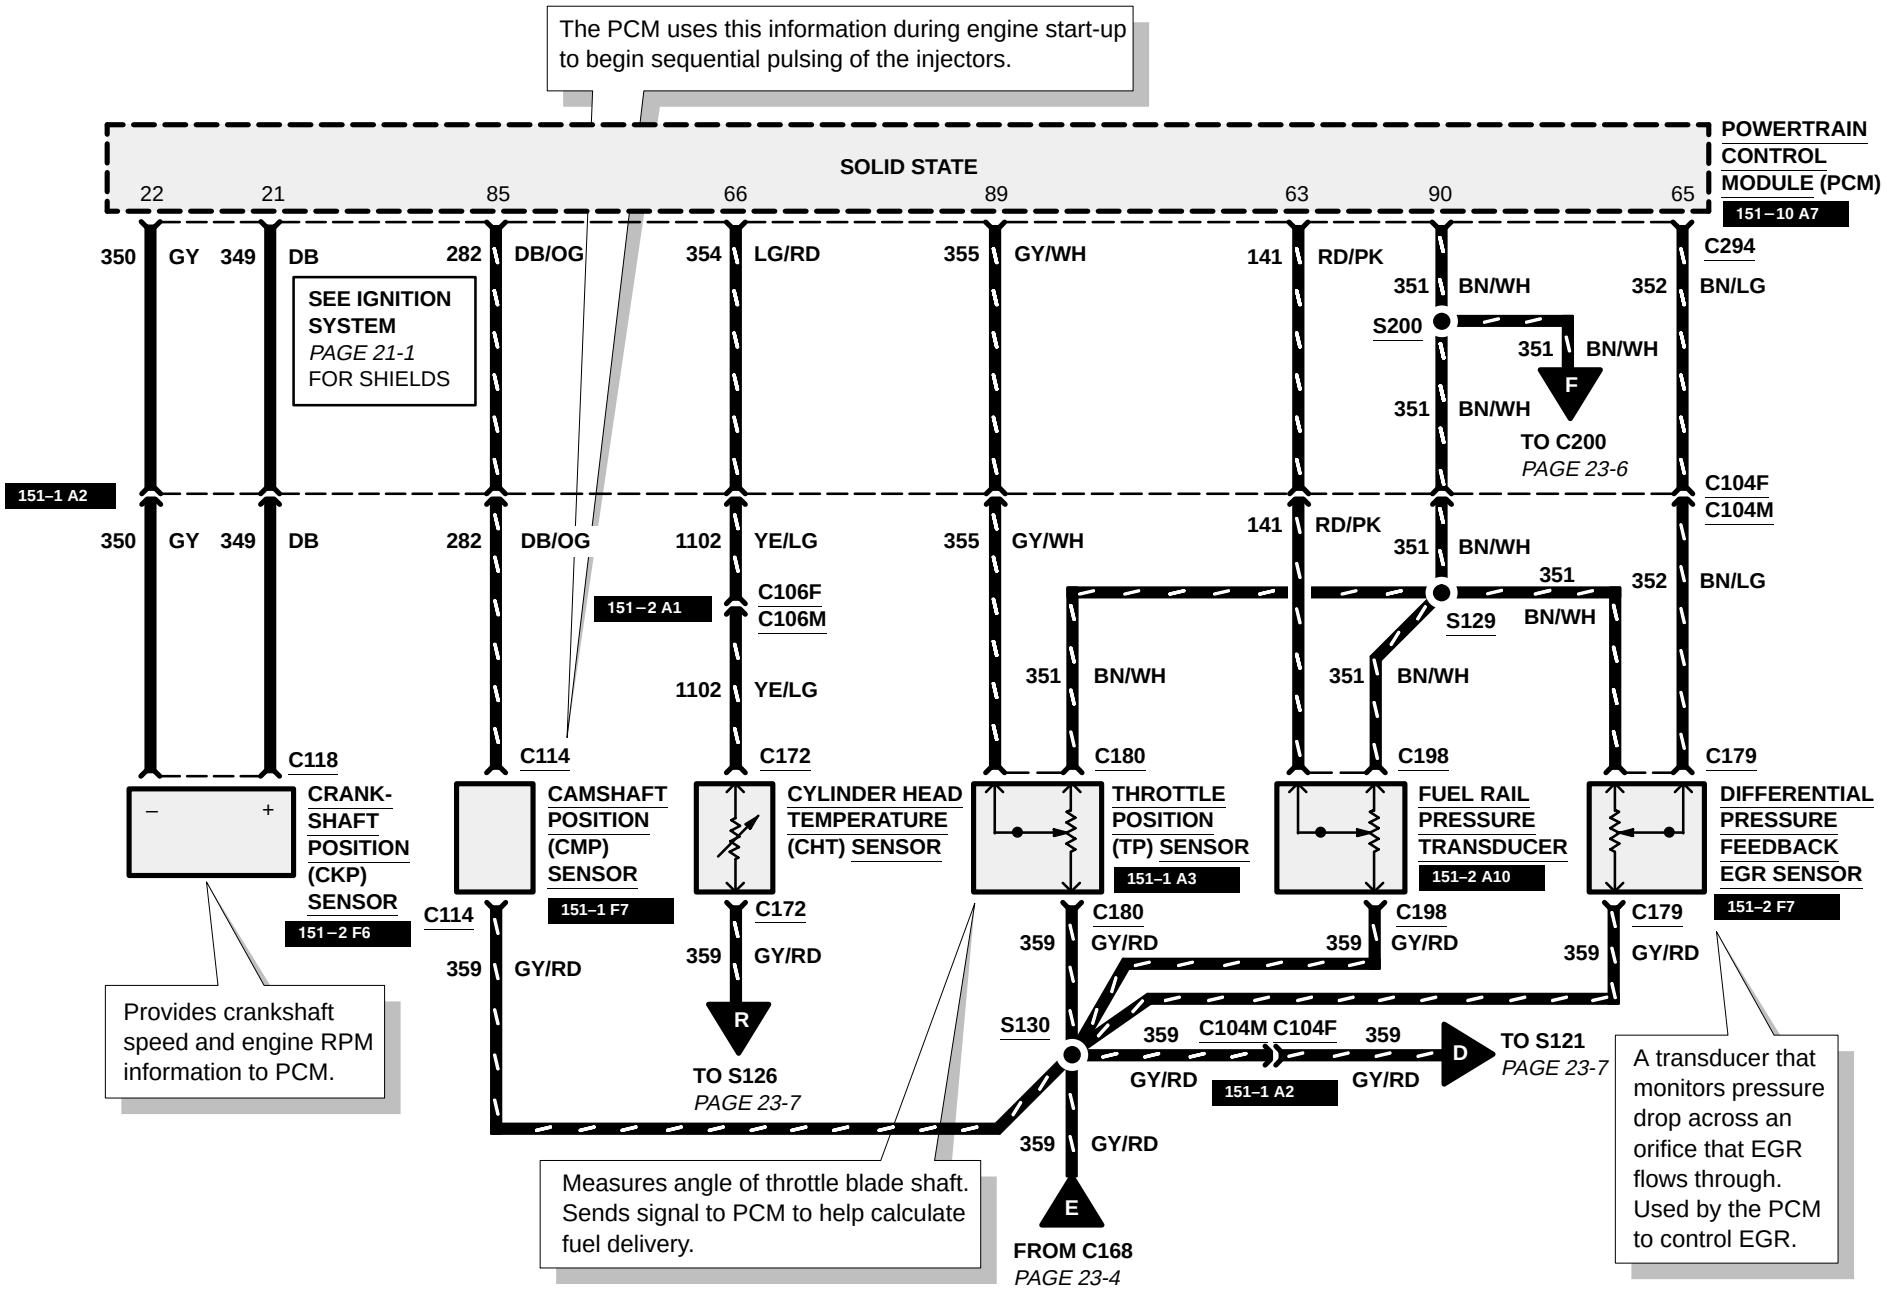
The PCM uses this information during engine start-up to begin sequential pulsing of the injectors.
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7
22
21
85
66
89
63
90
65
350 GY
349 DB
282 DB/OG
354 LG/RD
355 GY/WH
141 RD/PK
351 BN/WH
352 BN/LG
C294
S200
F
TO C200
PAGE 23-6
SEE IGNITION SYSTEM
PAGE 21-1
FOR SHIELDS
151–1 A2
C104F
C104M
1102 YE/LG
151–2 A1
C106F
C106M
S129
C118
C114
C172
C180
C198
C179
CRANK-SHAFT POSITION (CKP) SENSOR
151–2 F6
CAMSHAFT POSITION (CMP) SENSOR
151–1 F7
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
THROTTLE POSITION (TP) SENSOR
151–1 A3
FUEL RAIL PRESSURE TRANSDUCER
151–2 A10
DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR
151–2 F7
359 GY/RD
R
TO S126
PAGE 23-7
S130
C104M C104F
D
TO S121
PAGE 23-7
151–1 A2
E
FROM C168
PAGE 23-4
Provides crankshaft speed and engine RPM information to PCM.
Measures angle of throttle blade shaft. Sends signal to PCM to help calculate fuel delivery.
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.