* W/MEMORY

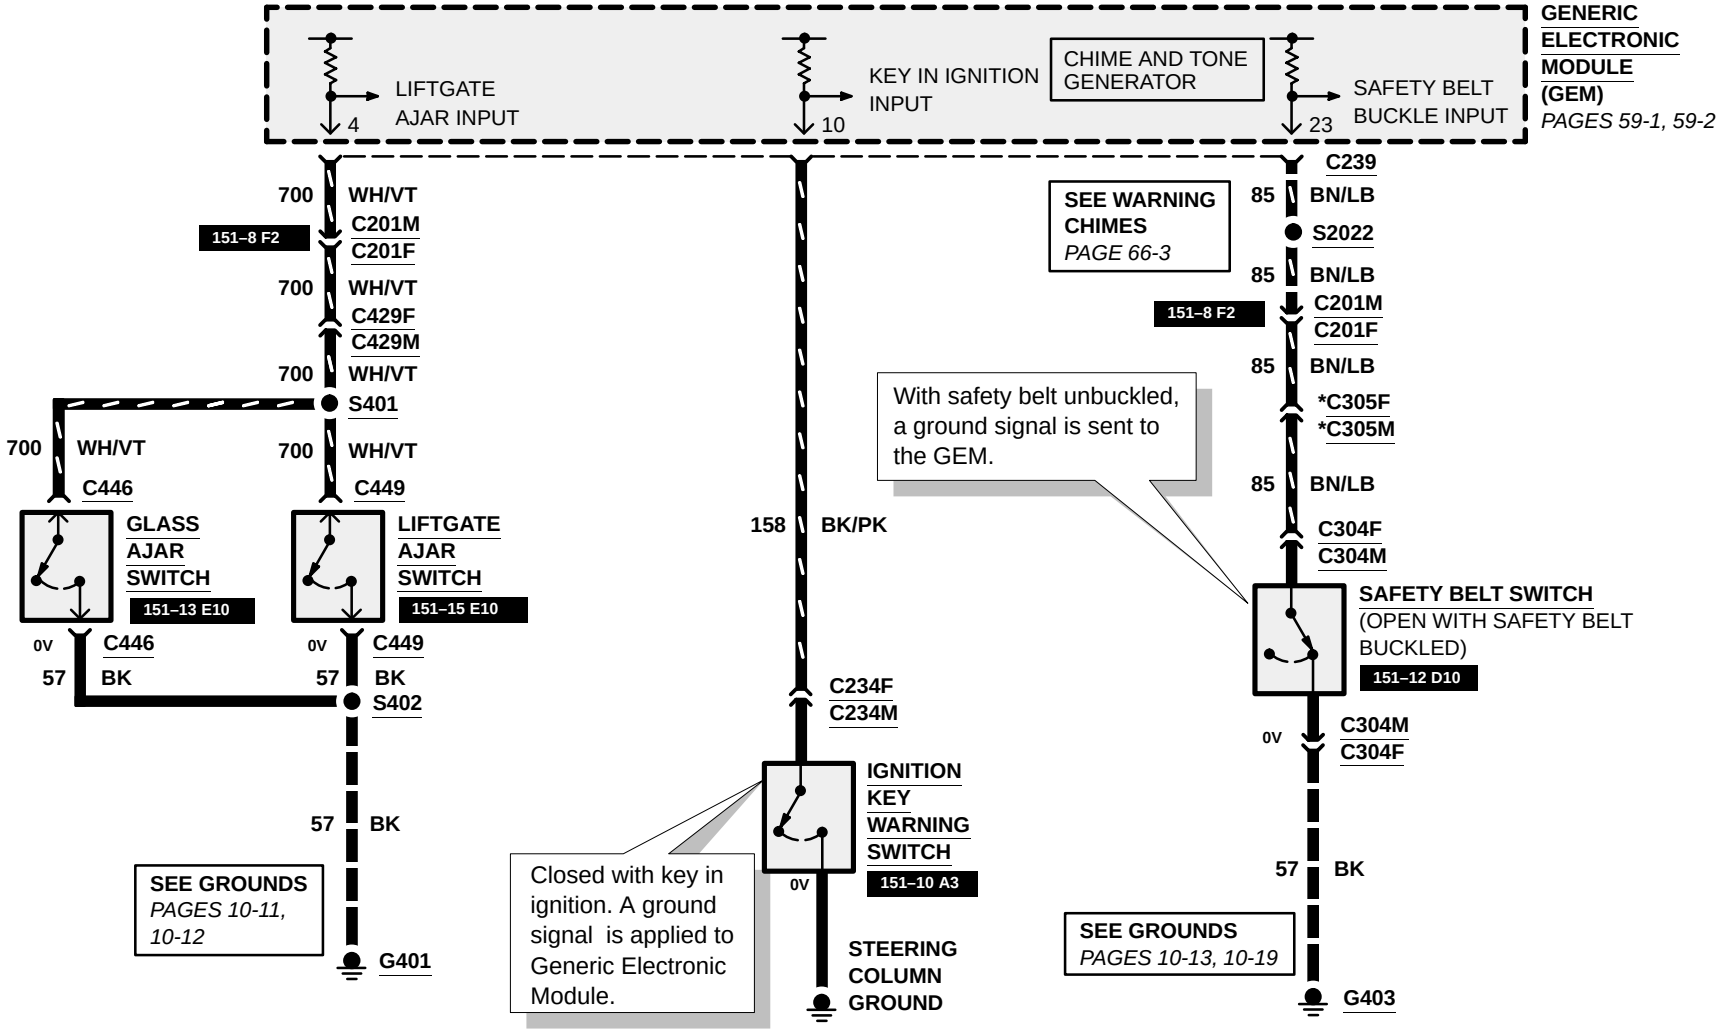
GENERIC ELECTRONIC MODULE (GEM)
PAGES 59-1, 59-2
LIFTGATE AJAR INPUT
4
KEY IN IGNITION INPUT
10
CHIME AND TONE GENERATOR
SAFETY BELT BUCKLE INPUT
23
700 WH/VT
C201M
C201F
151–8 F2
700 WH/VT
C429F
C429M
700 WH/VT
S401
700 WH/VT
C446
700 WH/VT
C449
GLASS AJAR SWITCH
151–13 E10
LIFTGATE AJAR SWITCH
151–15 E10
0V
C446
57 BK
0V
C449
57 BK
S402
57 BK
G401
SEE GROUNDS
PAGES 10-11, 10-12
158 BK/PK
C234F
C234M
IGNITION KEY WARNING SWITCH
151–10 A3
0V
STEERING COLUMN GROUND
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
SEE WARNING CHIMES
PAGE 66-3
C239
85 BN/LB
S2022
85 BN/LB
C201M
C201F
151–8 F2
85 BN/LB
*C305F
*C305M
85 BN/LB
C304F
C304M
With safety belt unbuckled, a ground signal is sent to the GEM.
SAFETY BELT SWITCH
(OPEN WITH SAFETY BELT BUCKLED)
151–12 D10
0V
C304M
C304F
57 BK
SEE GROUNDS
PAGES 10-13, 10-19
G403