Schematic

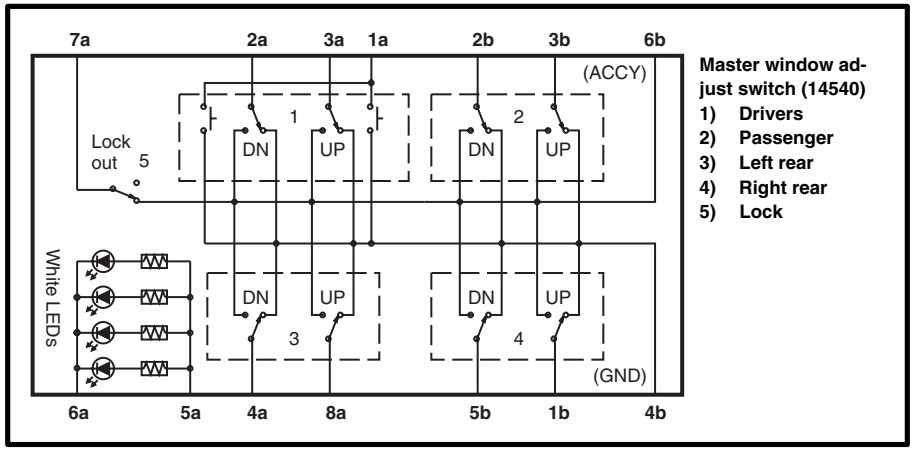

Master window adjust switch (14540)
1) Drivers
2) Passenger
3) Left rear
4) Right rear
5) Lock

Terminals

C3193a

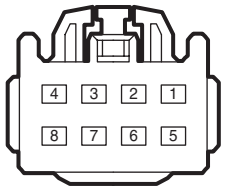

C3193b

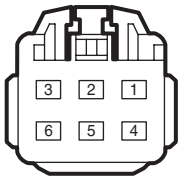

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Switch lock	7a, C3193a and 6b, C3194b	Lock - Windows On	Closed circuit
	7a, C3193a and 6b, C3194b	Lock - Windows Off	Open circuit
Left front window circuit	1a, C3193a and 6b, C3194b	Up	Closed circuit
	2a, C3193a and 6b, C3194b	Down	Closed circuit
	3a, C3193a and 4b, C3194b	Rest	Closed circuit
	2a, C3193a and 4b, C3194b	Rest	Closed circuit
Right front window circuit	3b, C3193b and 6b, C3194b	Up	Closed circuit
	2b, C3193b and 6b, C3194b	Down	Closed circuit
	3b, C3193b and 4b, C3194b	Rest	Closed circuit
	2b, C3193b and 4b, C3194b	Rest	Closed circuit
Left rear window circuit	8a, C3194a and 6b, C3194b	Up	Closed circuit
	4a, C3194a and 6b, C3194b	Down	Closed circuit
	4a, C3193a and 4b, C3194b	Rest	Closed circuit
	5a, C3193a and 4b, C3194b	Rest	Closed circuit
Right rear window circuit	2b, C3194b and 6b, C3194b	Up	Closed circuit
	5b, C3194b and 6b, C3194b	Down	Closed circuit
	1b, C3194b and 4b, C3194b	Rest	Closed circuit
	5b, C3194b and 4b, C3194b	Rest	Closed circuit