## C452

### 19B516

E34
License plate lamp, left

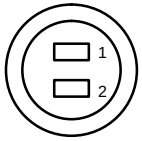


F02086

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 1205 (BK) | Ground |

## C461

### 13407

E109
Reversing lamp, right (13411)

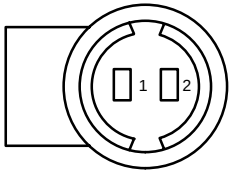


F02223

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1205 (BK) | Ground |
| 2 | 140 (BK/PK) | Voltage supplied in reverse |

## C462

### 19B516

E35
License plate lamp, right

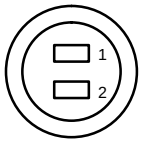


F02086

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 1205 (BK) | Ground |

## C463

### 14A005

M12
Fuel pump

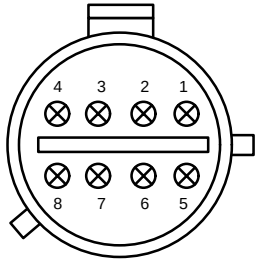


F08050

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 351 (BN/WH) | Reference, voltage |
| 3 | 359 (GY/RD) | signal, return |
| 4 | 791 (RD/PK) | Fuel tank pressure transducer sensor (9C968) |
| 5 | 327 (BK/OG) | Ground |
| 6 | 513 (BN/PK) | Fuel pump, + |
| 7 | 366 (RD/BK) | Fuel pump, – |
| 8 | 29 (YE/WH) | Fuel pump/fuel gauge sender |

## C475a

### 13A265

E174
High mounted stop-lamp (13A613)

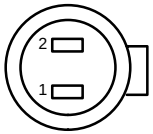


F02237

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 569 (DG) | Brake pedal position switch (13480), to stoplamps |
| 2 | 1205 (BK) | Ground |