C240a

14401

Audio unit (18808)

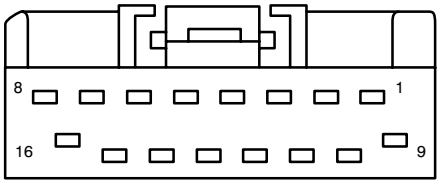

F16071

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	50-MD15 (GY/OG)	Voltage supplied in Start (overload protected)
4	–	not used
5	8-MD18 (WH)	Speaker, right rear (18808) +
6	10-MD18 (GY)	Speaker, right rear (18808) -
7	8-MD17 (WH/RD)	Speaker, right front (18808) +
8	10-MD17 (GY/RD)	Speaker, right front (18808) -
9	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
10	75-MD15 (YE/GN)	Voltage in Run or Accessory (overload protected)
11	31-MD15B (BK/GN)	Ground
12	8-MD11 (WH/VT)	Speaker, left rear (18808) +
13	10-MD11 (GY/WH)	Speaker, left rear (18808) -
14	8-MD10 (WH/BK)	Speaker, left front (18808) +
15	10-MD10 (GY/BK)	Speaker, left front (18808) -
16	31-MD15A (BK/GN)	Ground

C240b

14401

Audio unit (18808)

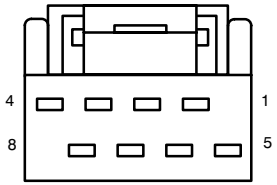

F08167

Pin	Circuit	Circuit function
1	2-MD19 (GY/RD)	Subwoofer signal -
2	1-MD19 (WH/RD)	Subwoofer signal +
3	48-MD15C	Center image amplifier, Shield
4	7-MD19 (YE/RD)	Subwoofer amplifier (18C804) - Enable
5	2-MD12 (GY)	Center image amplifier -
6	1-MD12 (WH)	Center image amplifier +
7	48-MD12	Center image amplifier, Shield
8	7-MD12 (YE)	Center image amplifier, Enable