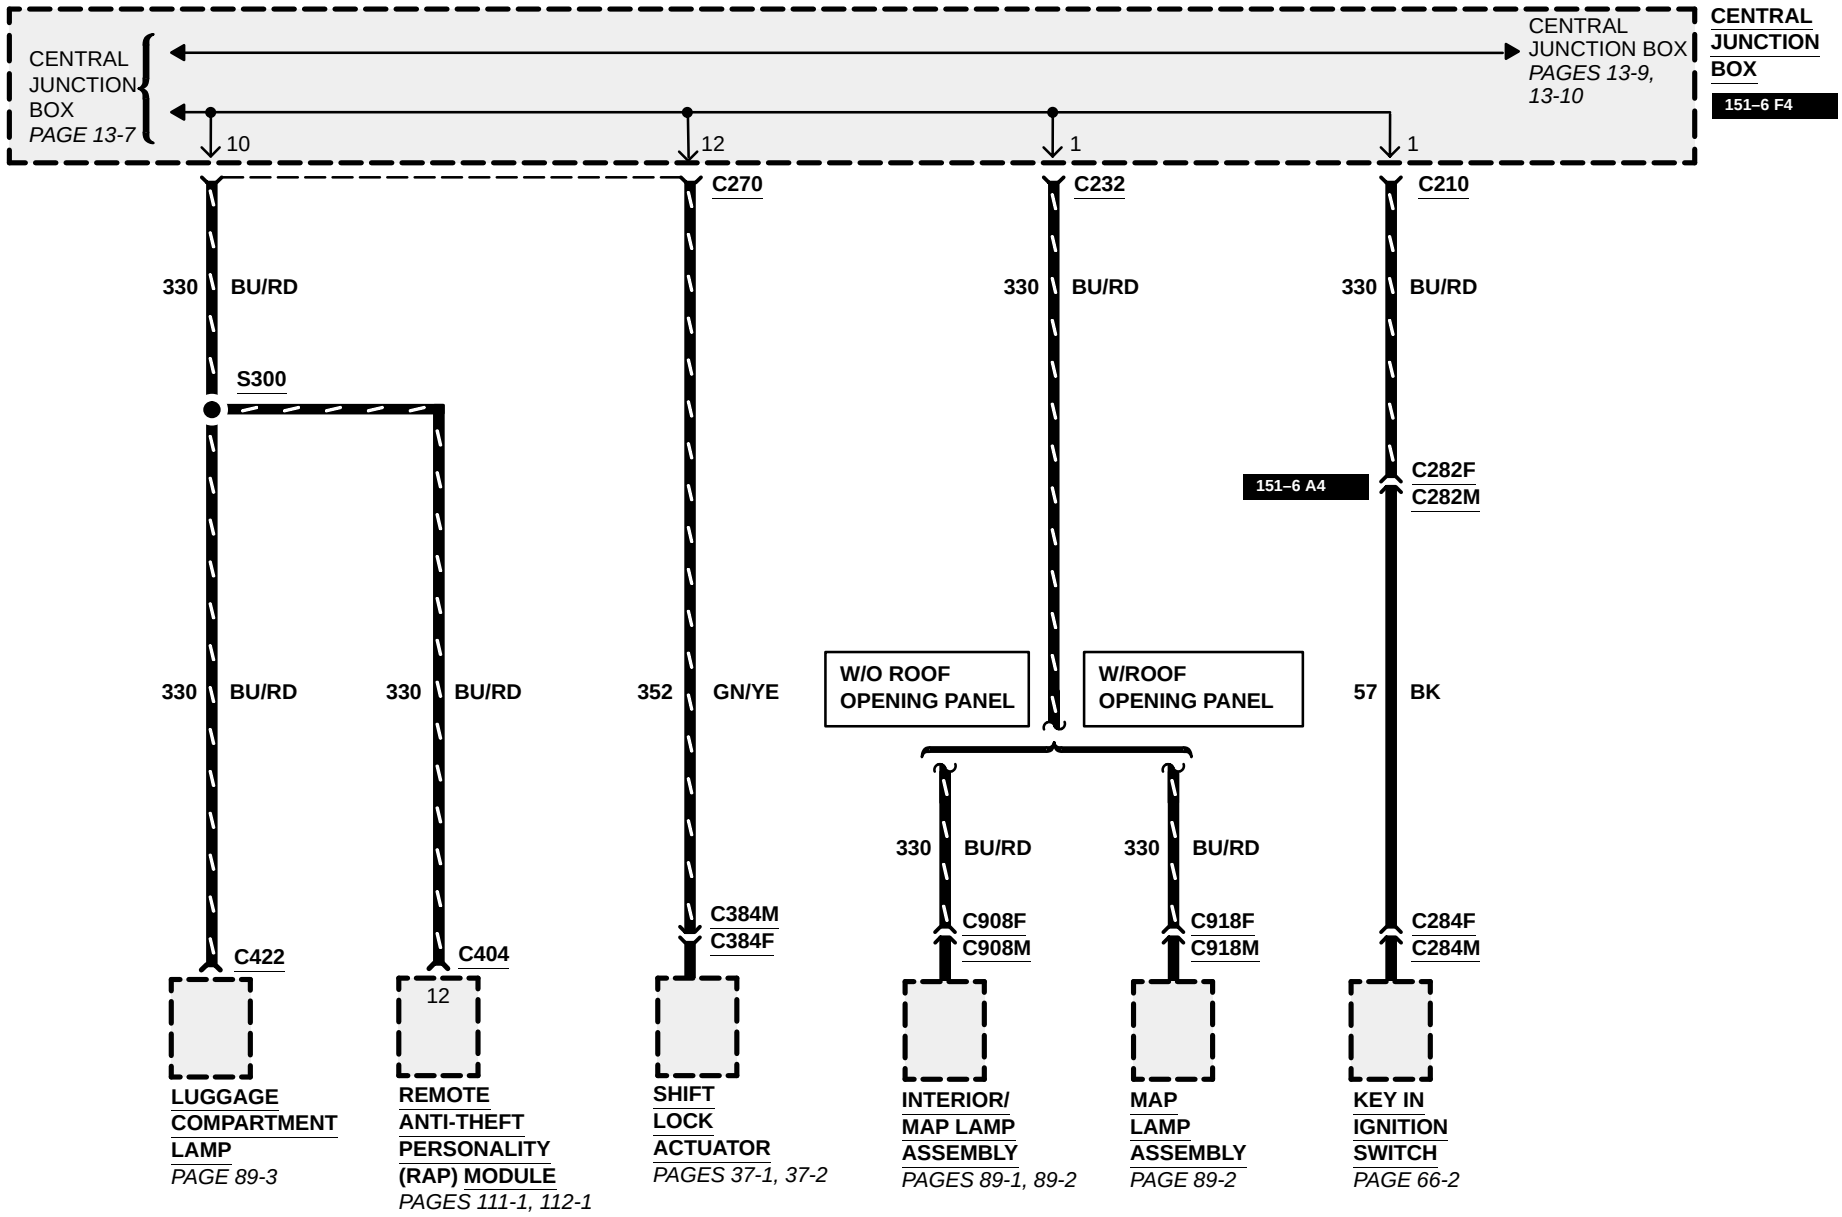
CENTRAL JUNCTION BOX
PAGE 13-7
CENTRAL JUNCTION BOX
PAGES 13-9, 13-10
CENTRAL JUNCTION BOX
151–6 F4
10
12
1
1
C270
C232
C210
330 BU/RD
330 BU/RD
330 BU/RD
S300
151–6 A4
C282F
C282M
330 BU/RD
330 BU/RD
352 GN/YE
W/O ROOF OPENING PANEL
W/ROOF OPENING PANEL
57 BK
330 BU/RD
330 BU/RD
C384M
C384F
C908F
C908M
C918F
C918M
C284F
C284M
C422
C404
12
LUGGAGE COMPARTMENT LAMP
PAGE 89-3
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGES 111-1, 112-1
SHIFT LOCK ACTUATOR
PAGES 37-1, 37-2
INTERIOR/ MAP LAMP ASSEMBLY
PAGES 89-1, 89-2
MAP LAMP ASSEMBLY
PAGE 89-2
KEY IN IGNITION SWITCH
PAGE 66-2